IMPRESSION

Leader © 2011 Leader International Inc.
Impression is a trademark and service mark of Leader International Inc.
All products distributed by Leader International Inc. Unless otherwise indicated.
All other brand names, trademark and service marks are property of their owners.

225 S. Lake Avenue,Suite 300 , Pasadena, CA 91101
www.leaderinternationalinc.com

IMPRESSION

9.7 inch Android Tablet
9.7" IPS CAPACITIVE SCREEN I ADOBE FLASH 10.1 I Wi-Fi I ANDROID 2.2
EBOOK I MULTI-TOUCH TECHNOLOGY I INTERNET BROWSING
IMPRESSION

9.7” ANDROID TABLET

nstruction Manual

Controls 2
Function Keys..3
Touch Screen Interface 6
Settings 10
Camera/Camcorder 22
Web Browsing 23
Application Installer 24
Text Reader...25
Task Manager 27
File Manager...27
File Manager...28
Music Player 30
Video Player 32
Picture Browser 33
Email Setup...35
Clock Settings..38
Specifications..40
FCC Statement...42

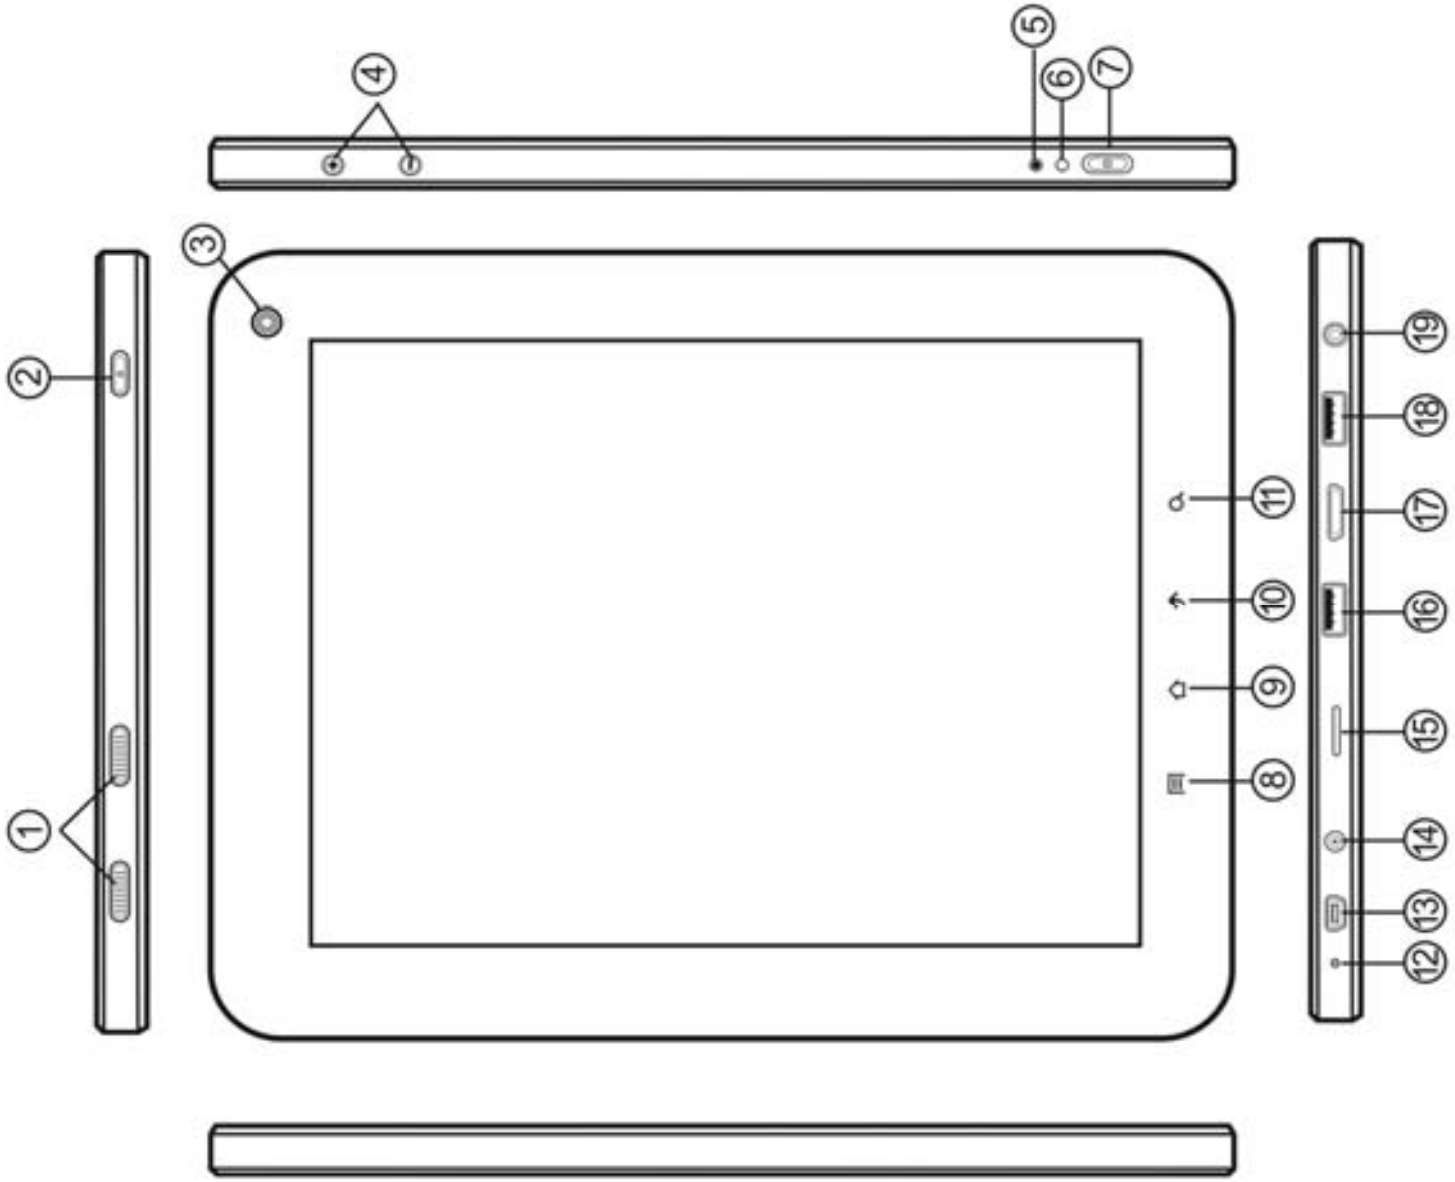

1	Menu Key
2	Home Key
3	Backspace Key
4	Search Key
5	Microphone
6	Mini USB Jack
7	Charge Jack
8	Micro SD Slot
9	USB 1 Jack
10	HDMI Jack
11	USB 2 Jack
12	Earphone Jack
13	Speakers
14	Power
15	Camera
16	Volume
17	Reset
18	Indicator
19	Camera Shutter

Home Key

- In the option program, menu or webpage, press home key to return to the main interface.
- Press & hold the home key and it will show your recently opened applications.

Menu Key

- Press the Menu key to open the sub-menu for this page.
- Press the menu key again to close the sub-menu.
- Press & hold the menu key in an application to open/close the virtual keyboard.
- When the screen is locked, press the Menu key to enable the screen. Press it again to unlock the screen.
  (If you have set the unlock mode, you can unlock the screen based on your settings.)

Backspace Key

- Press the BACKSPACE key to return to the previous operation or previous screen.

Search Key

- Press search to enter search input interface.

On/Off Key

Turn ON

- Press and hold Power ON/OFF key to turn on the tablet pc.

Turn OFF

- Press ON/OFF key to lock the screen and enter sleep mode.
- Press and hold ON/OFF key: The mode selection window pops up.
  You can then choose silent mode, or power off.
- Volume Key
- Press + to increase the volume.
- Press - to reduce the volume.

Recover Factory Settings

- Press and hold the Camera button together with press turn on/off,. A red screen will be displayed, then the tablet will reset to original factory settings.

Update System Version

- Press Volume Θ button and reset button together, it will show the blue screen.
- Then it will show the update status.

Accessories Included in The Package:

1. Tablet pc
2. Power adapter
3. USB cable
4. Instruction Manual
5. Warranty Card
6. Stop card
7. Registration card
8. Pouch（opptional）

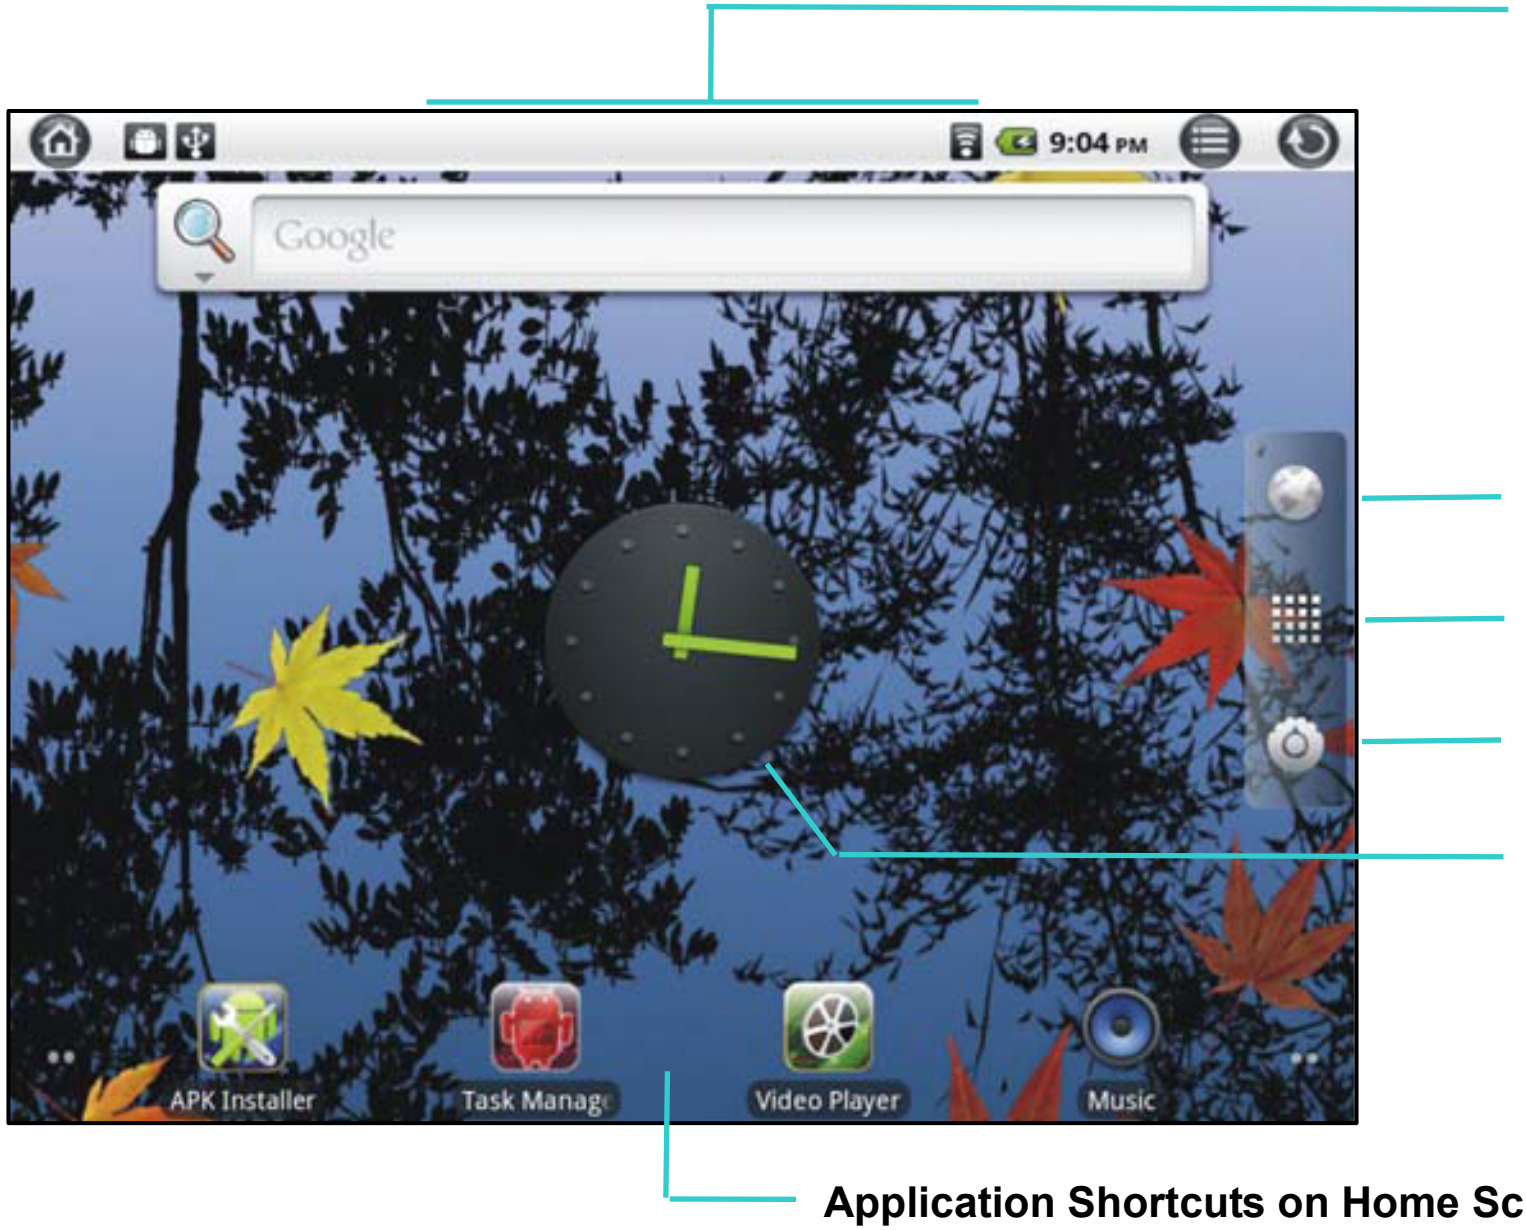
Google
9:04 PM
APK Installer
Task Manag
Video Player
Music

Status Bar

Left side of the status bar shows applications running

Right side shows alerts, sub-menu Wi-Fi connection, battery charge, etc.

Browser

Applications

Settings

Widgets

Application Shortcuts on Home Screen

Screen Interface

Main screen interface is similar to a computer desktop.
Place application shortcuts and widgets here.
Touch and “swipe” to go to next page, move things on the screen, etc.
Touch 2 fingers and spread apart or bring together to zoom pictures in and out.

Widgets

Press the screen for 1-2 seconds. The “Add to Home screen” menu will pop up offering you options to add widgets, change wallpaper, etc.

Deleting Application shortcuts

Press and hold down the application button on the screen. The application list button will change to a trash can. Drag the application to the trash.

Status Bar

Pay attention to the status bar on the top of screen. If icons show on the left, it is a reminder that applications are running. On the right of the status bar, there are alarm settings, Wi-Fi connection, battery charge, etc.

Status Bar Icons

	**Mute**		**Finished Downloading**
	**Uploading / Downloading**		**Wi-Fi Service Connected & Available**
	**Alarm clock**		**Playing Music**
	**SD Card Nearly Full**		**Battery Power Status**
	**Charging**		

When a prompt is displayed on the status bar, touch it to open the notification.

- Click selection window to open prompt message
- Click on the top of the column to read the full message
- Close the column

Application List

Click the Application List icon to show the application library.

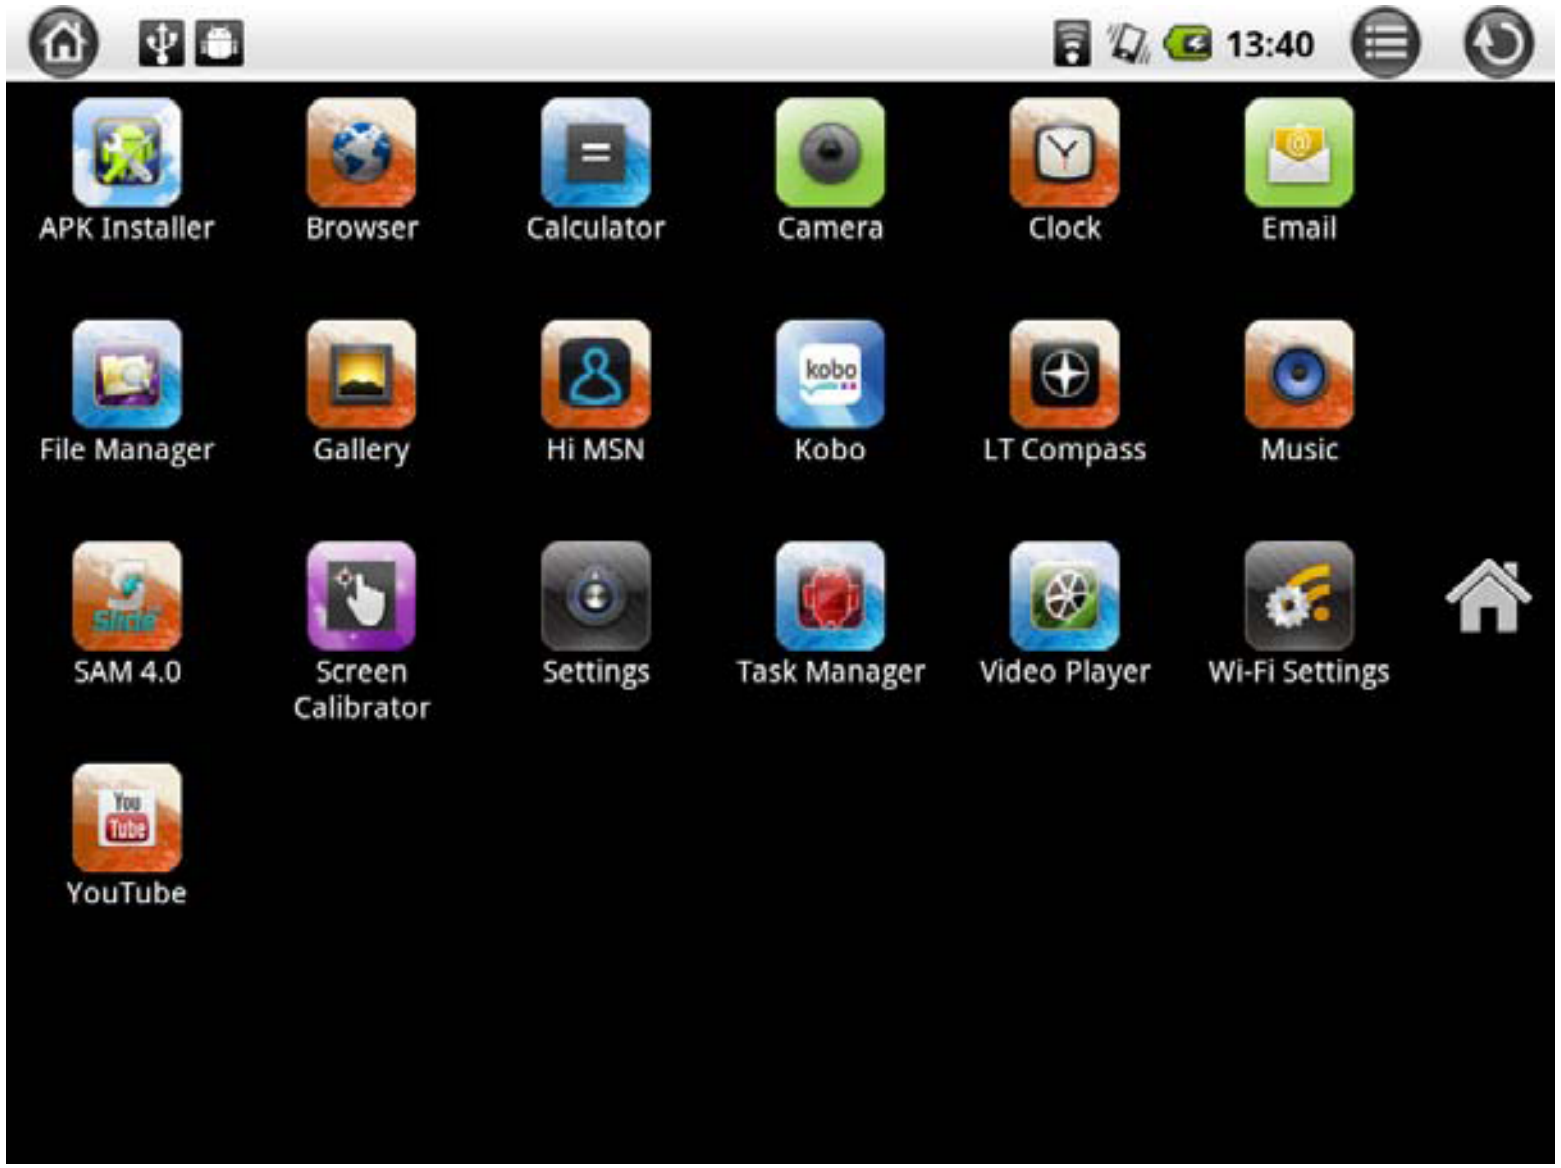
13:40
APK Installer
Browser
Calculator
Camera
Clock
Email
File Manager
Gallery
Hi MSN
Kobo
LT Compass
Music
SAM 4.0
Screen Calibrator
Settings
Task Manager
Video Player
Wi-Fi Settings
YouTube

Touch an application icon to start it up.

Press and hold the application icon and a shortcut will be added to the home screen.

Press the “Home” key in the application list interface to return to the home screen.

Touch Screen Calibration

In the application list screen, Click the “Screen Calibrator” icon: Screen Calibrator

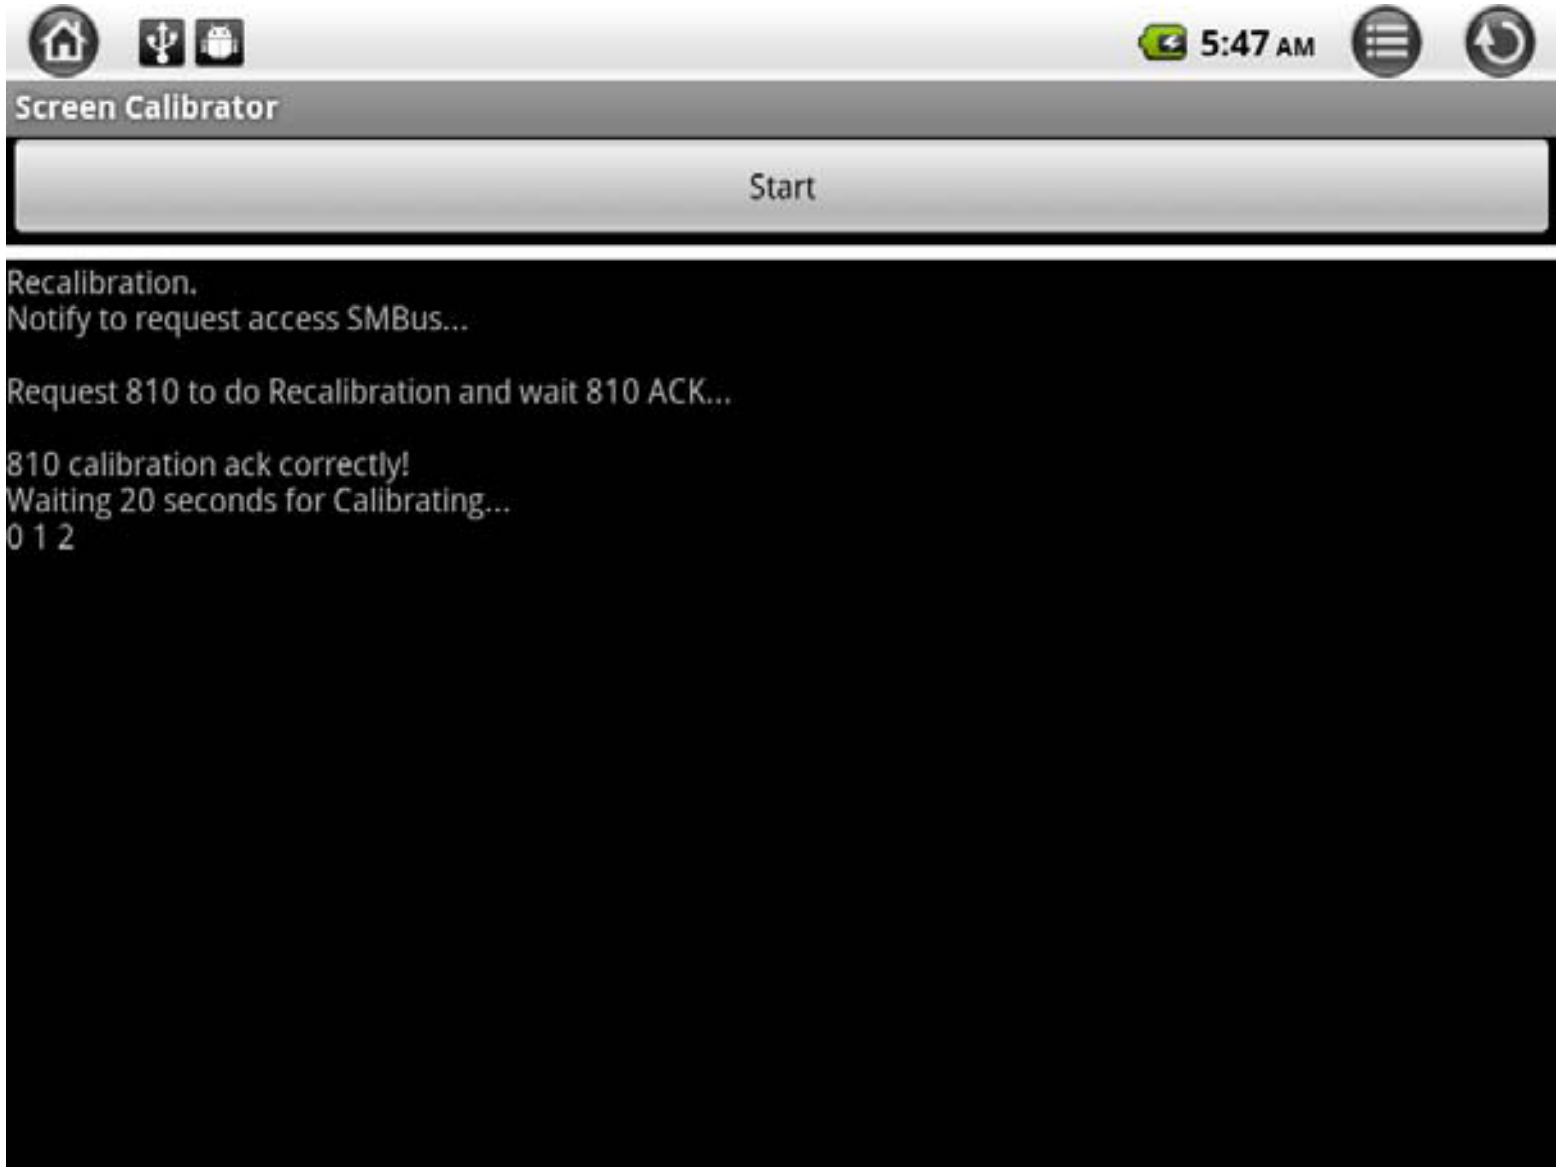
5:47 AM
Screen Calibrator
Start

```
Recalibration.
Notify to request access SMBus...

Request 810 to do Recalibration and wait 810 ACK...

810 calibration ack correctly!
Waiting 20 seconds for Calibrating...
0 1 2
```

1.Click “Calibration”

2.Click start, it will calibrate automatically

3.After 20 seconds, it’s ok.

Language Settings

Touch: “Options” > “Language & keyboard” > “Select language” > Choose Language

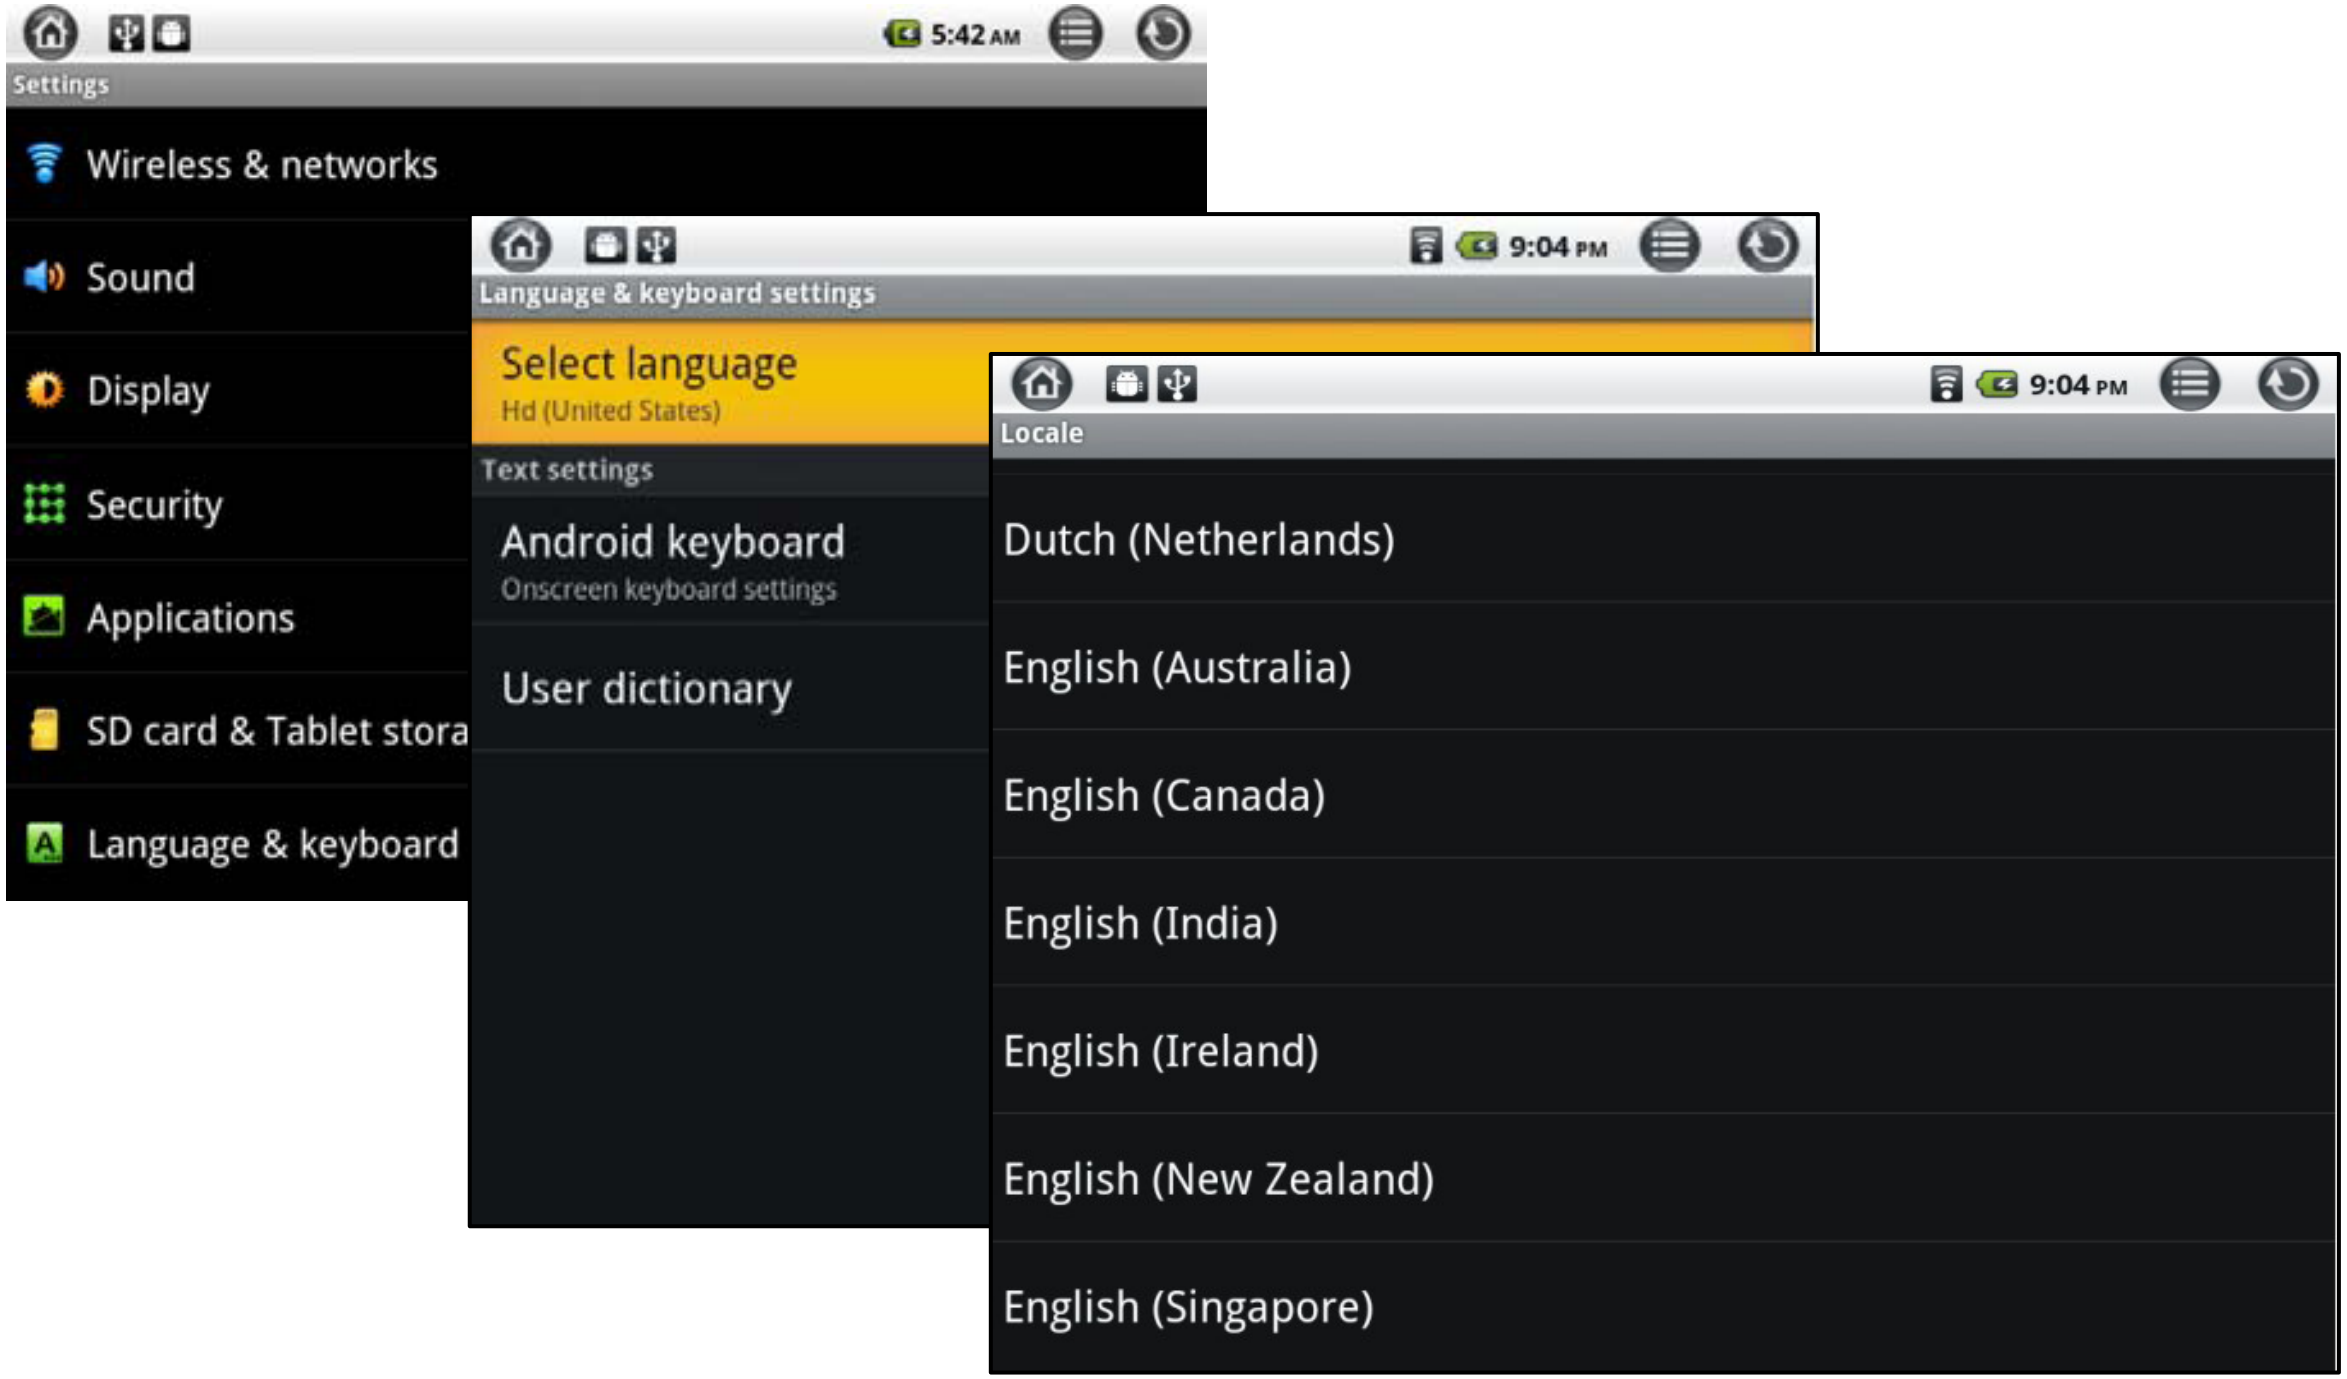
5:42 AM
Settings
Wireless & networks
Sound
Display
Security
Applications
SD card & Tablet stora
Language & keyboard
9:04 PM
Language & keyboard settings
Select language
Hd (United States)
Text settings
Android keyboard
Onscreen keyboard settings
User dictionary
9:04 PM
Locale
Dutch (Netherlands)
English (Australia)
English (Canada)
English (India)
English (Ireland)
English (New Zealand)
English (Singapore)

Screen Brightness Settings

Touch: “Settings” > “Display” > “Brightness” > Adjust slider and hit “OK”

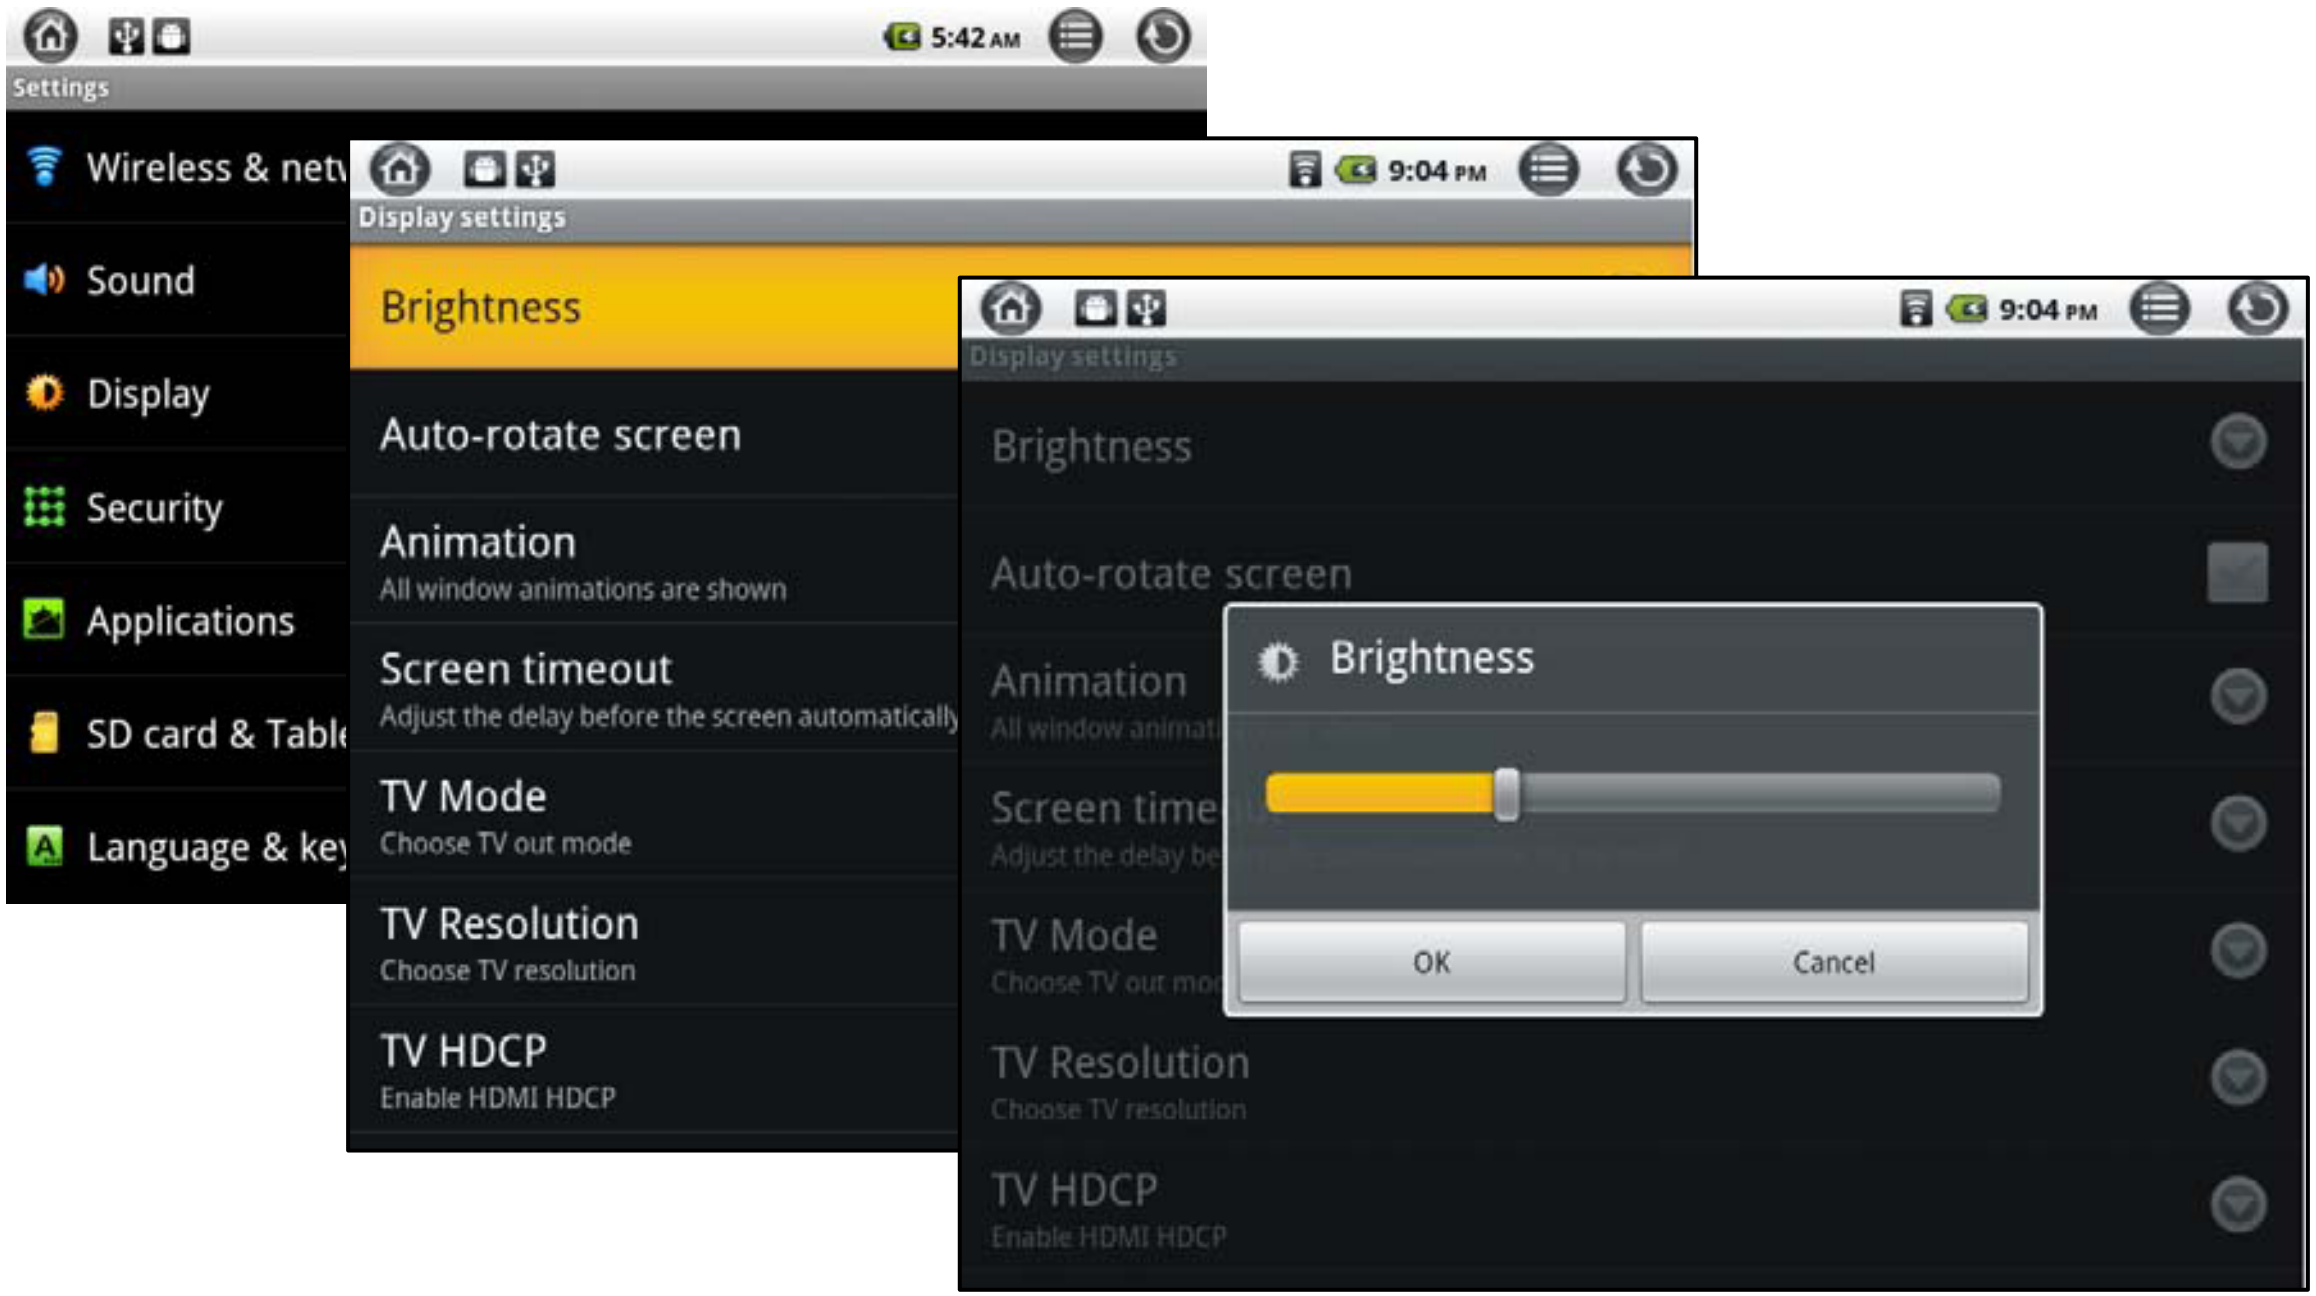
5:42 AM
Settings
Wireless & netv
Sound
Display
Security
Applications
SD card & Table
Language & key
9:04 PM
Display settings
Brightness
Auto-rotate screen
Animation
All window animations are shown
Screen timeout
Adjust the delay before the screen automatically
TV Mode
Choose TV out mode
TV Resolution
Choose TV resolution
TV HDCP
Enable HDMI HDCP
9:04 PM
Display settings
Brightness
Auto-rotate screen
Animation
All window animati
Screen time
Adjust the delay be
TV Mode
Choose TV out mo
TV Resolution
Choose TV resolution
TV HDCP
Enable HDMI HDCP
Brightness
OK
Cancel

Screen Timeout Settings

Touch: “Settings” > “Display” > “Screen Timeout” > Choose Time

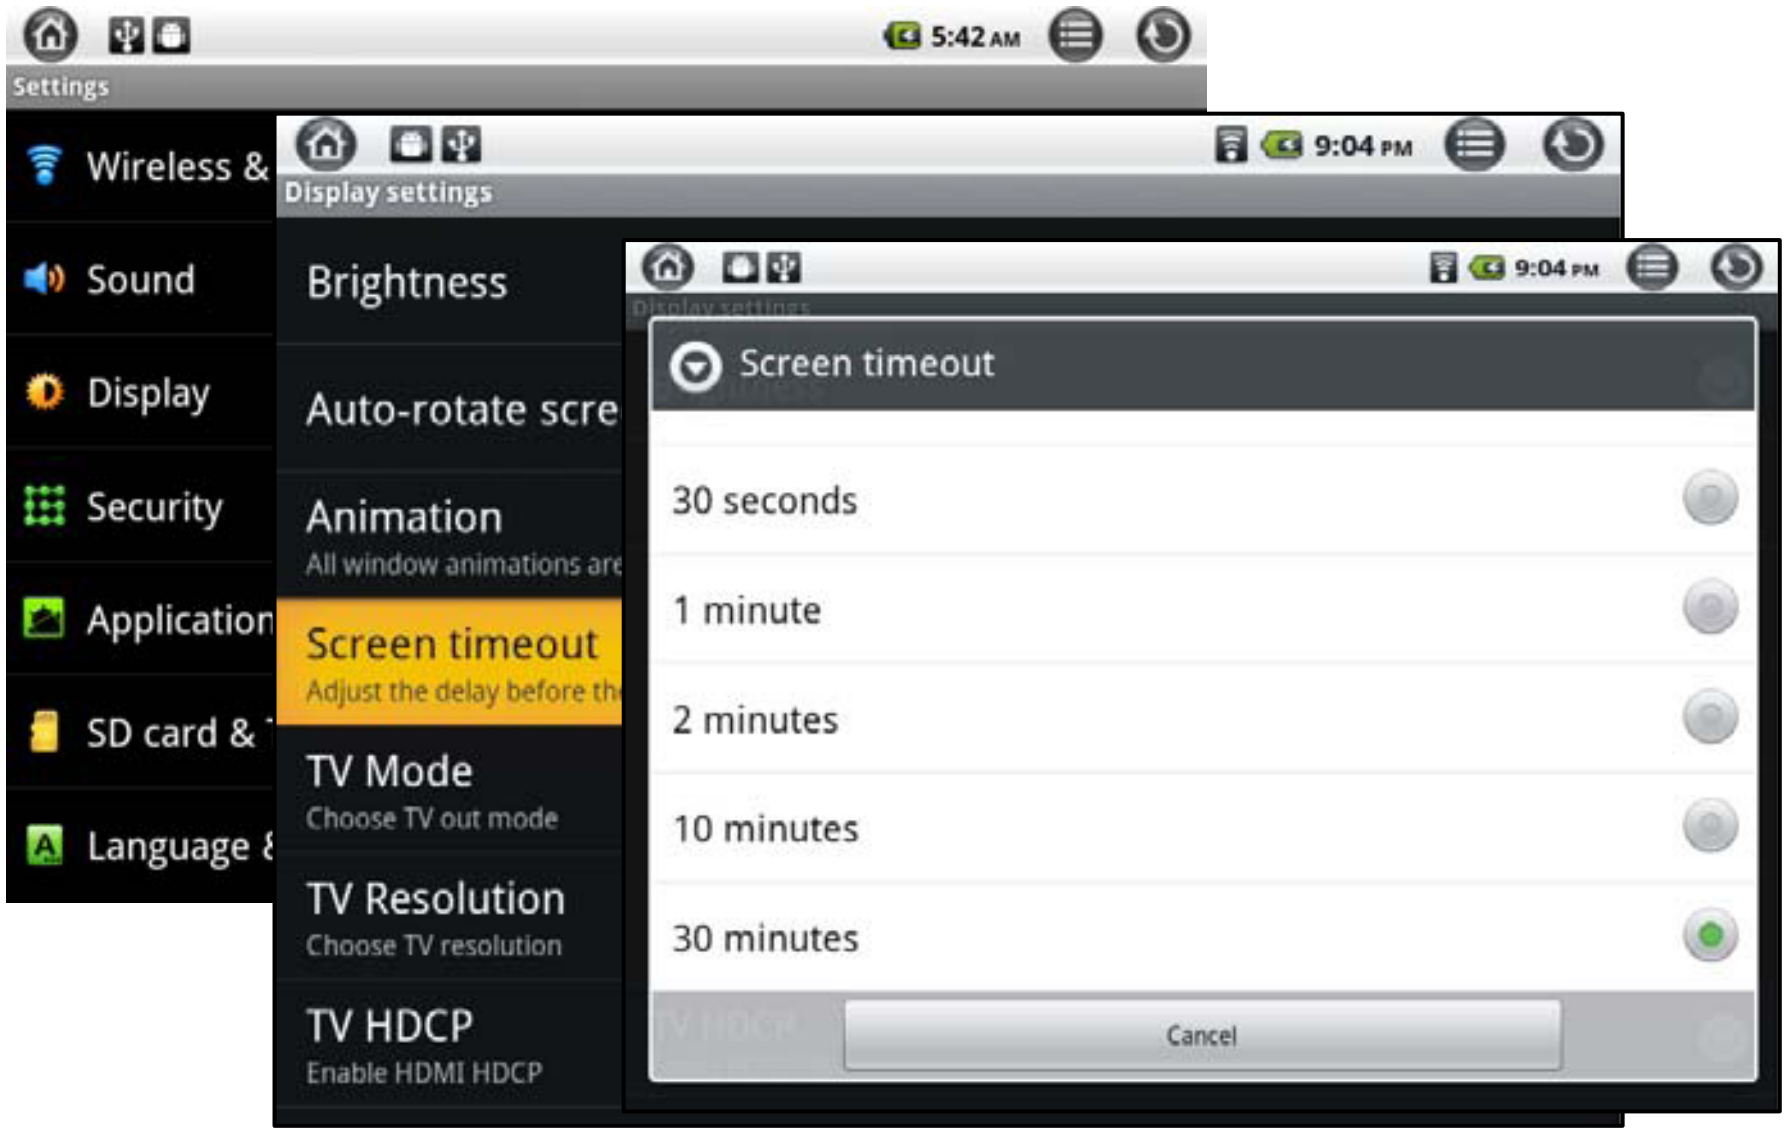
5:42 AM
Settings
Wireless &
Sound
Display
Security
Application
SD card &
Language &
9:04 PM
Display settings
Brightness
Auto-rotate scre
Animation
All window animations are
Screen timeout
Adjust the delay before th
TV Mode
Choose TV out mode
TV Resolution
Choose TV resolution
TV HDCP
Enable HDMI HDCP
9:04 PM
Screen timeout
30 seconds ○
1 minute ○
2 minutes ○
10 minutes ○
30 minutes ●
Cancel

SD card Mount / Un-Mount

After inserting a micro-SD card to the tablet, do the following to install the card.

Touch: “Settings” > “SD Card & Tablet Storage” > “Mount SD card”

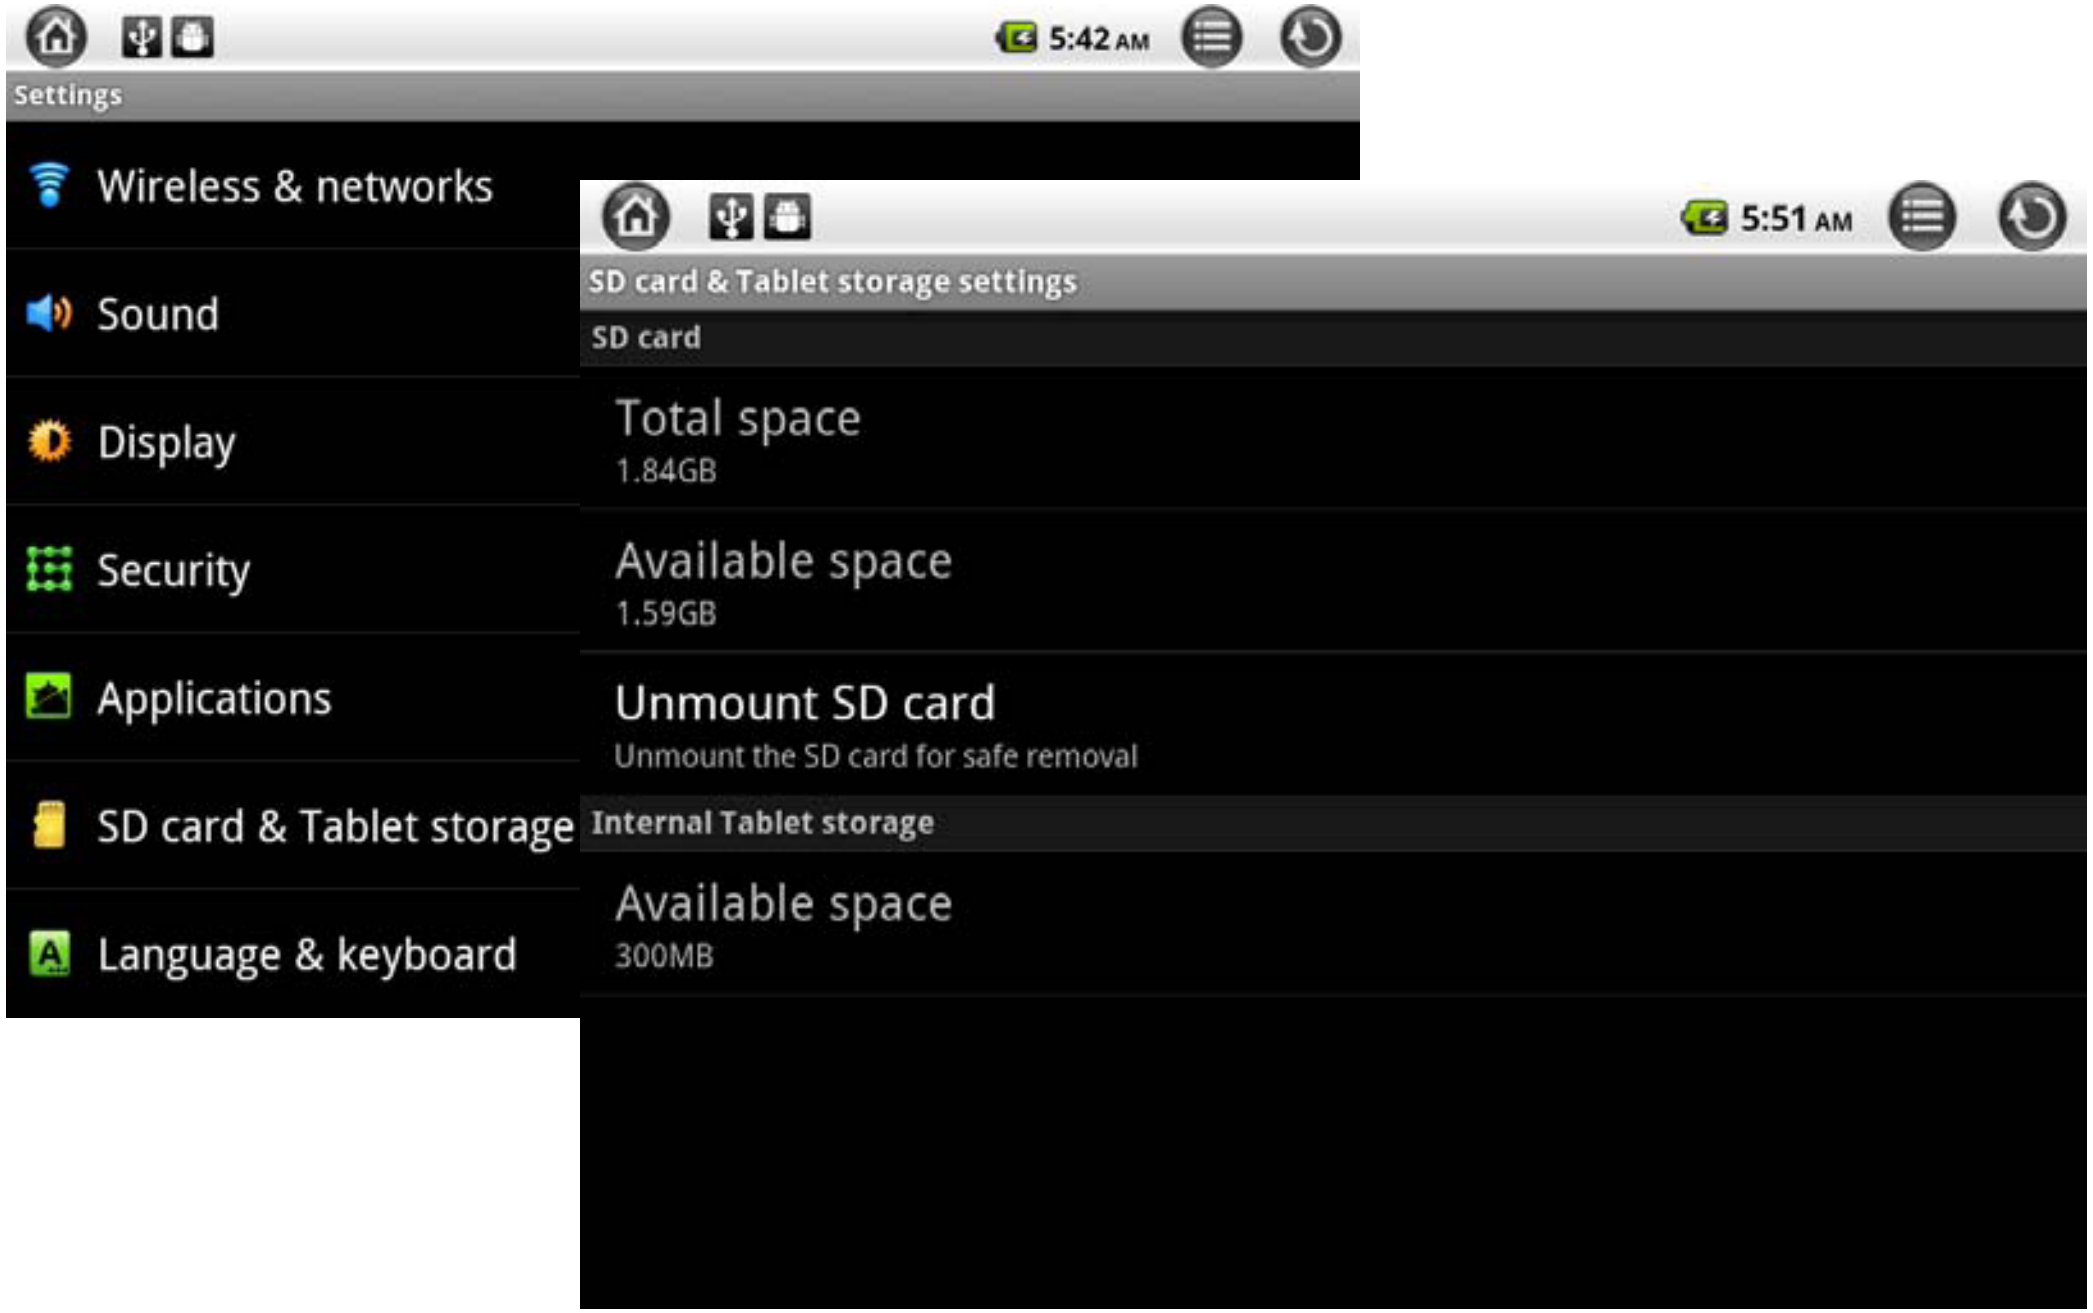
5:42 AM
Settings
Wireless & networks
Sound
Display
Security
Applications
SD card & Tablet storage
Language & keyboard
5:51 AM

SD card & Tablet storage settings

SD card

Total space
1.84GB

Available space
1.59GB

Unmount SD card
Unmount the SD card for safe removal

Internal Tablet storage

Available space
300MB

SD card Mount /Un-Mount (continued)

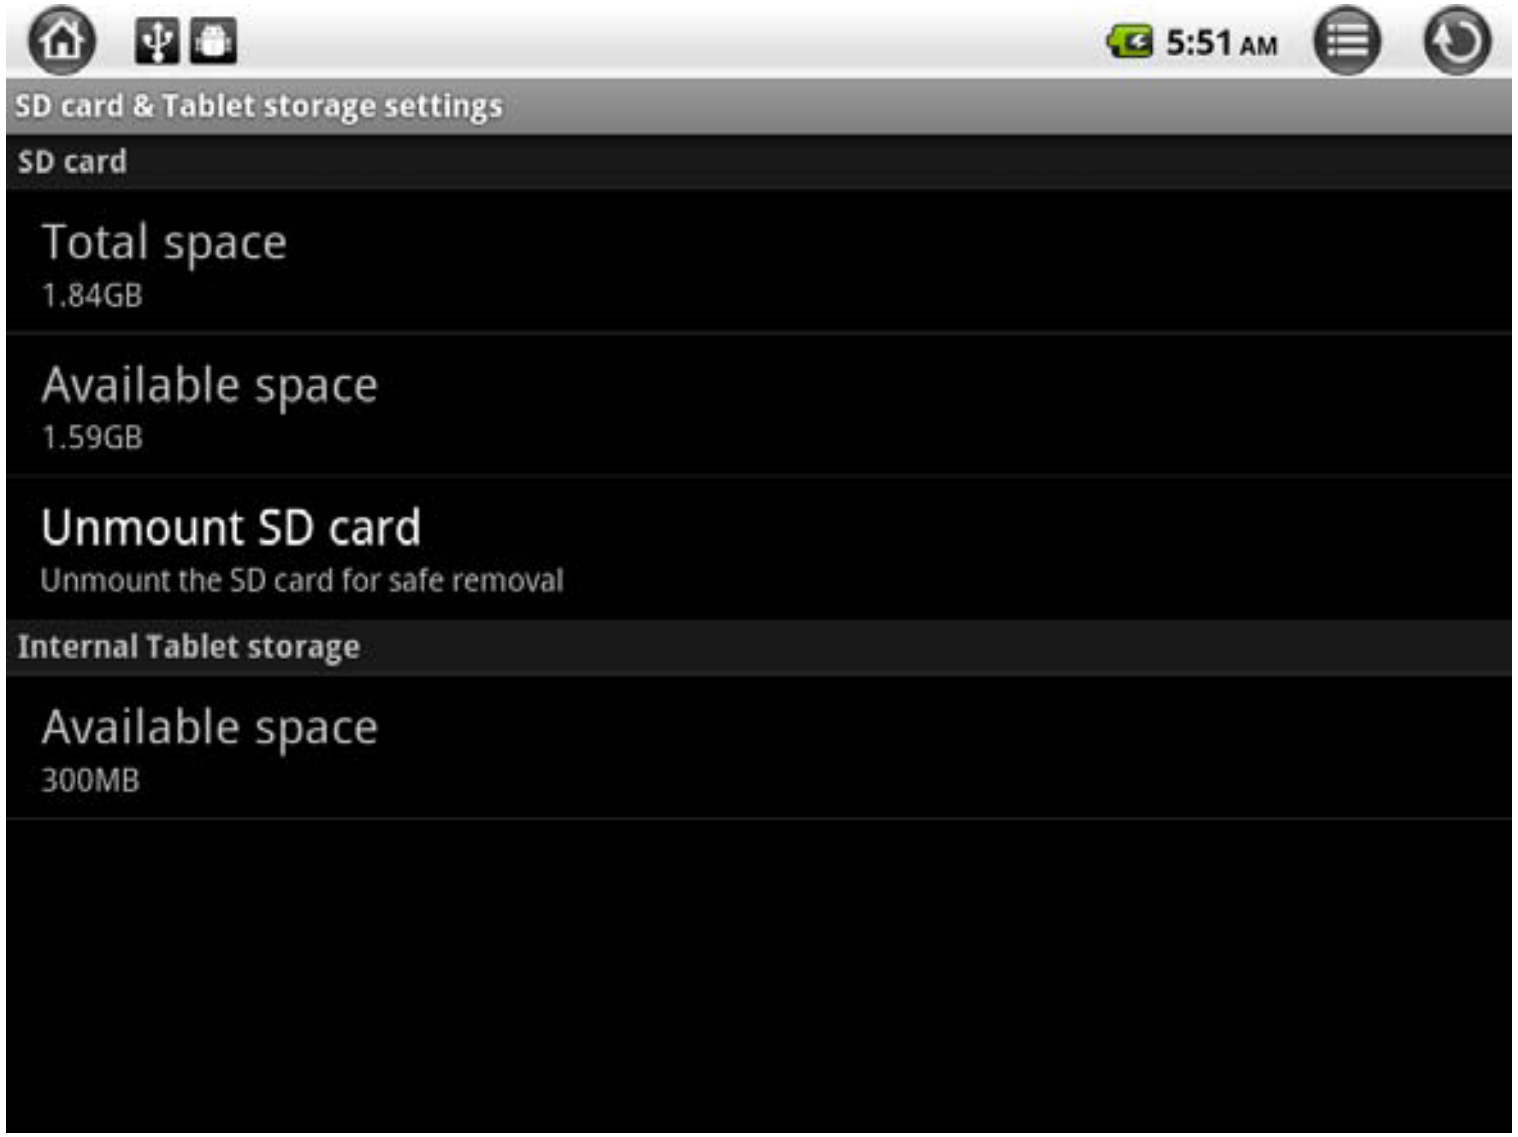

SD card & Tablet storage settings

SD card

Total space
1.84GB

Available space
1.59GB

Unmount SD card
Unmount the SD card for safe removal

Internal Tablet storage

Available space
300MB

The Settings screen will also show how much memory is available on the card as well as on the internal memory.

After mounting a card, the selection will change to "Unmount SD card"

To uninstall the card select this option.

HDMI device output

To set up the HDMI output:

Touch: “Settings” > “Display” > “TV Mode” > (continued on next page)

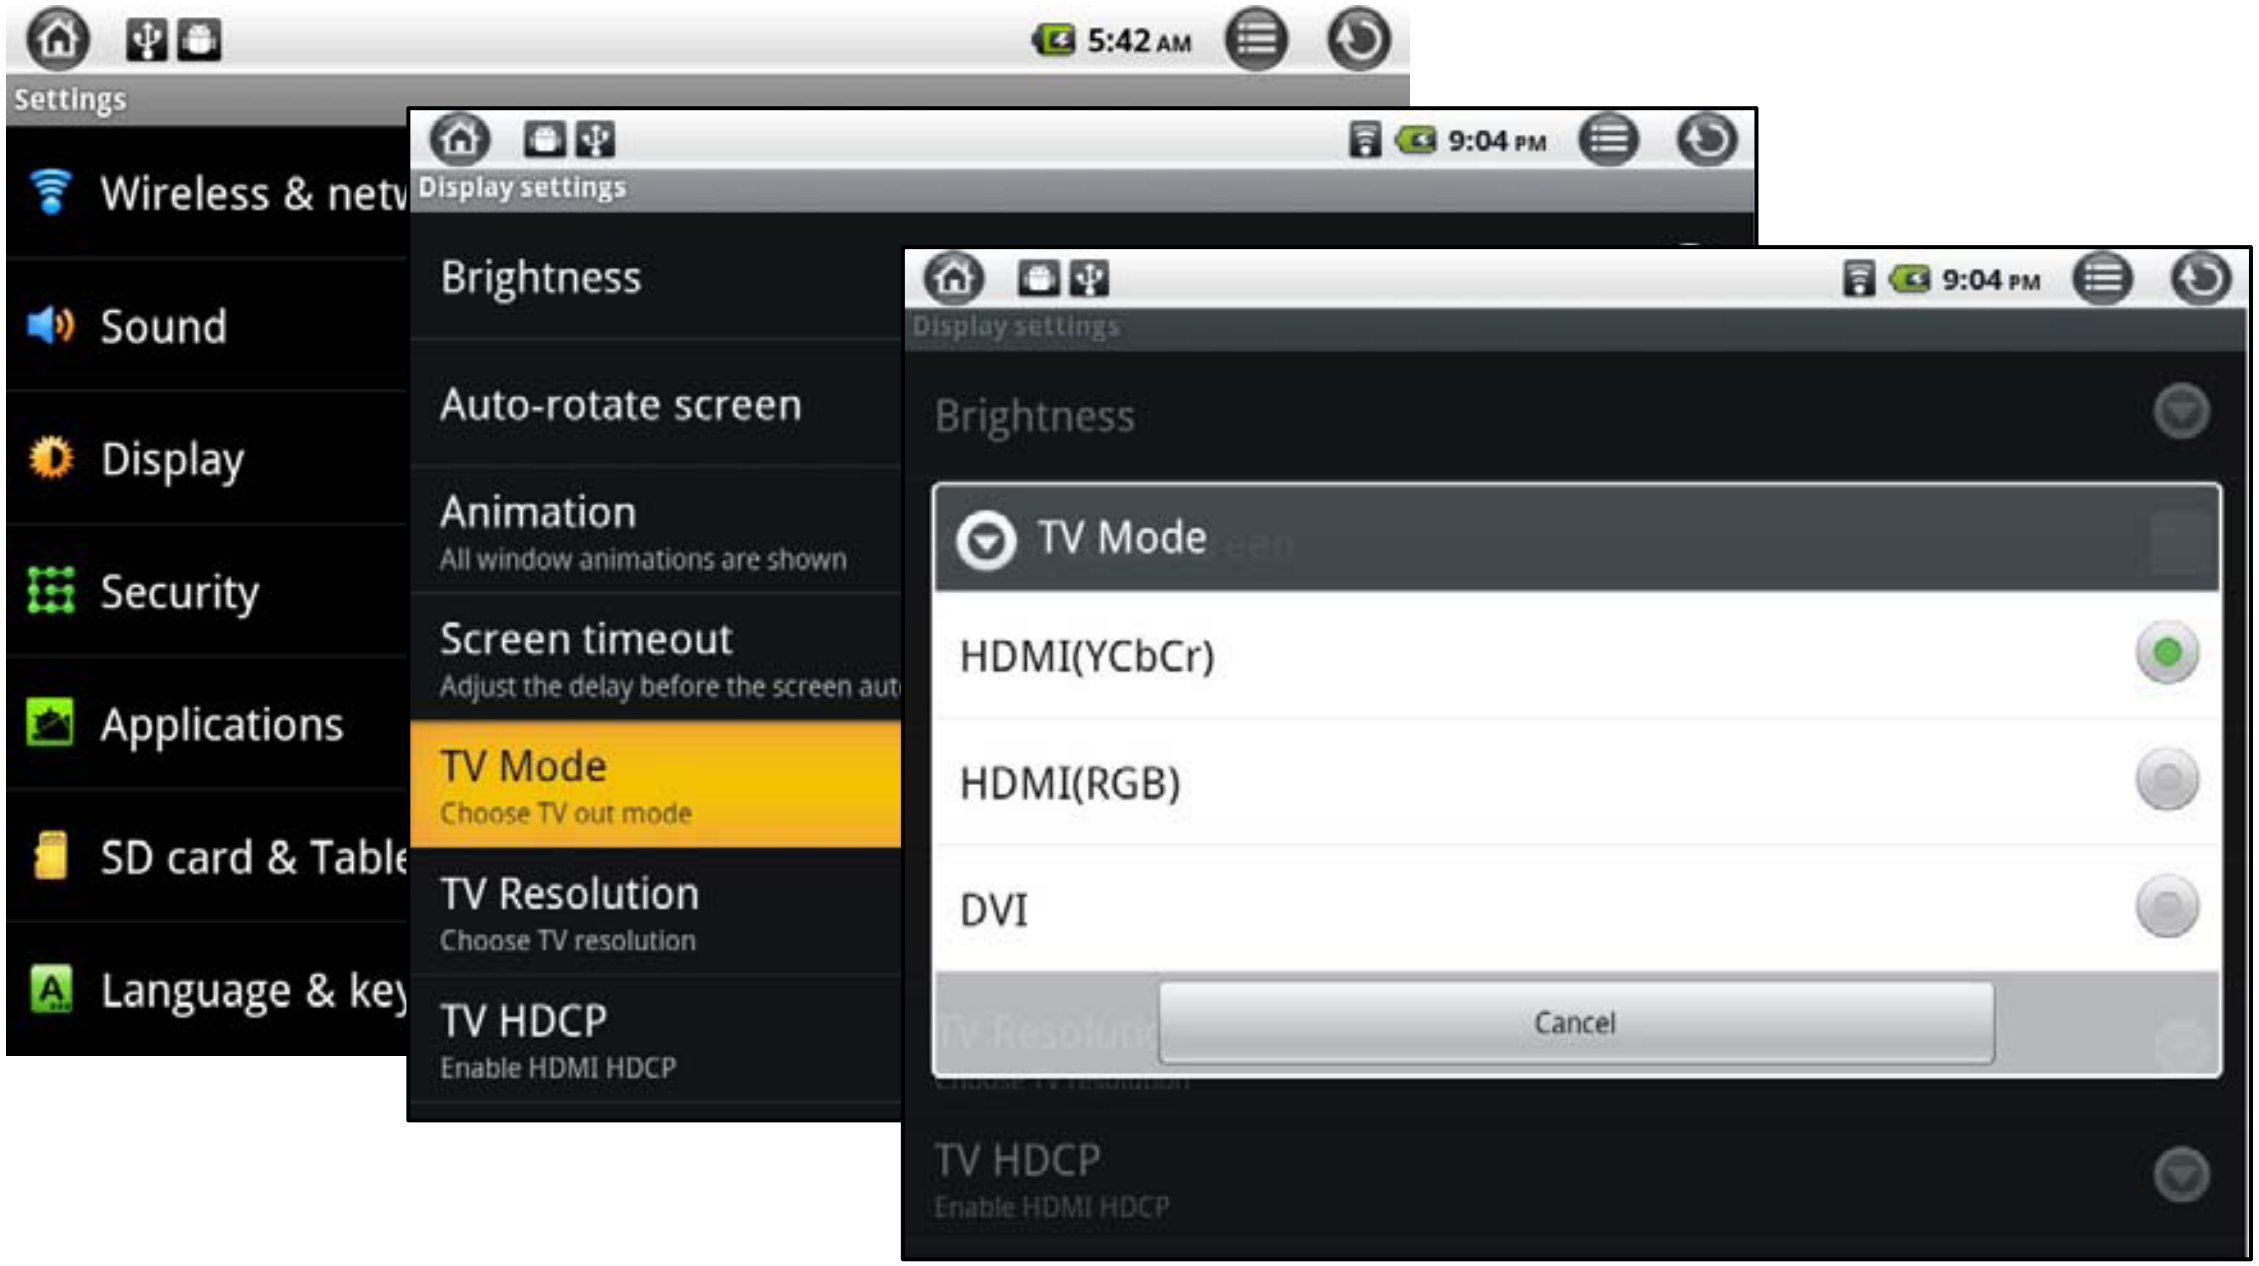
5:42 AM
Settings
Wireless & netw
Sound
Display
Security
Applications
SD card & Table
Language & key
9:04 PM
Display settings
Brightness
Auto-rotate screen
Animation
All window animations are shown
Screen timeout
Adjust the delay before the screen aut
TV Mode
Choose TV out mode
TV Resolution
Choose TV resolution
TV HDCP
Enable HDMI HDCP
9:04 PM
Display settings
Brightness
TV Mode
HDMI(YCbCr) ●
HDMI(RGB) ○
DVI ○
Cancel
TV HDCP
Enable HDMI HDCP

HDMI device output (continued)

Select HDMI output mode > Resolution > and select whether TV supports HDMI

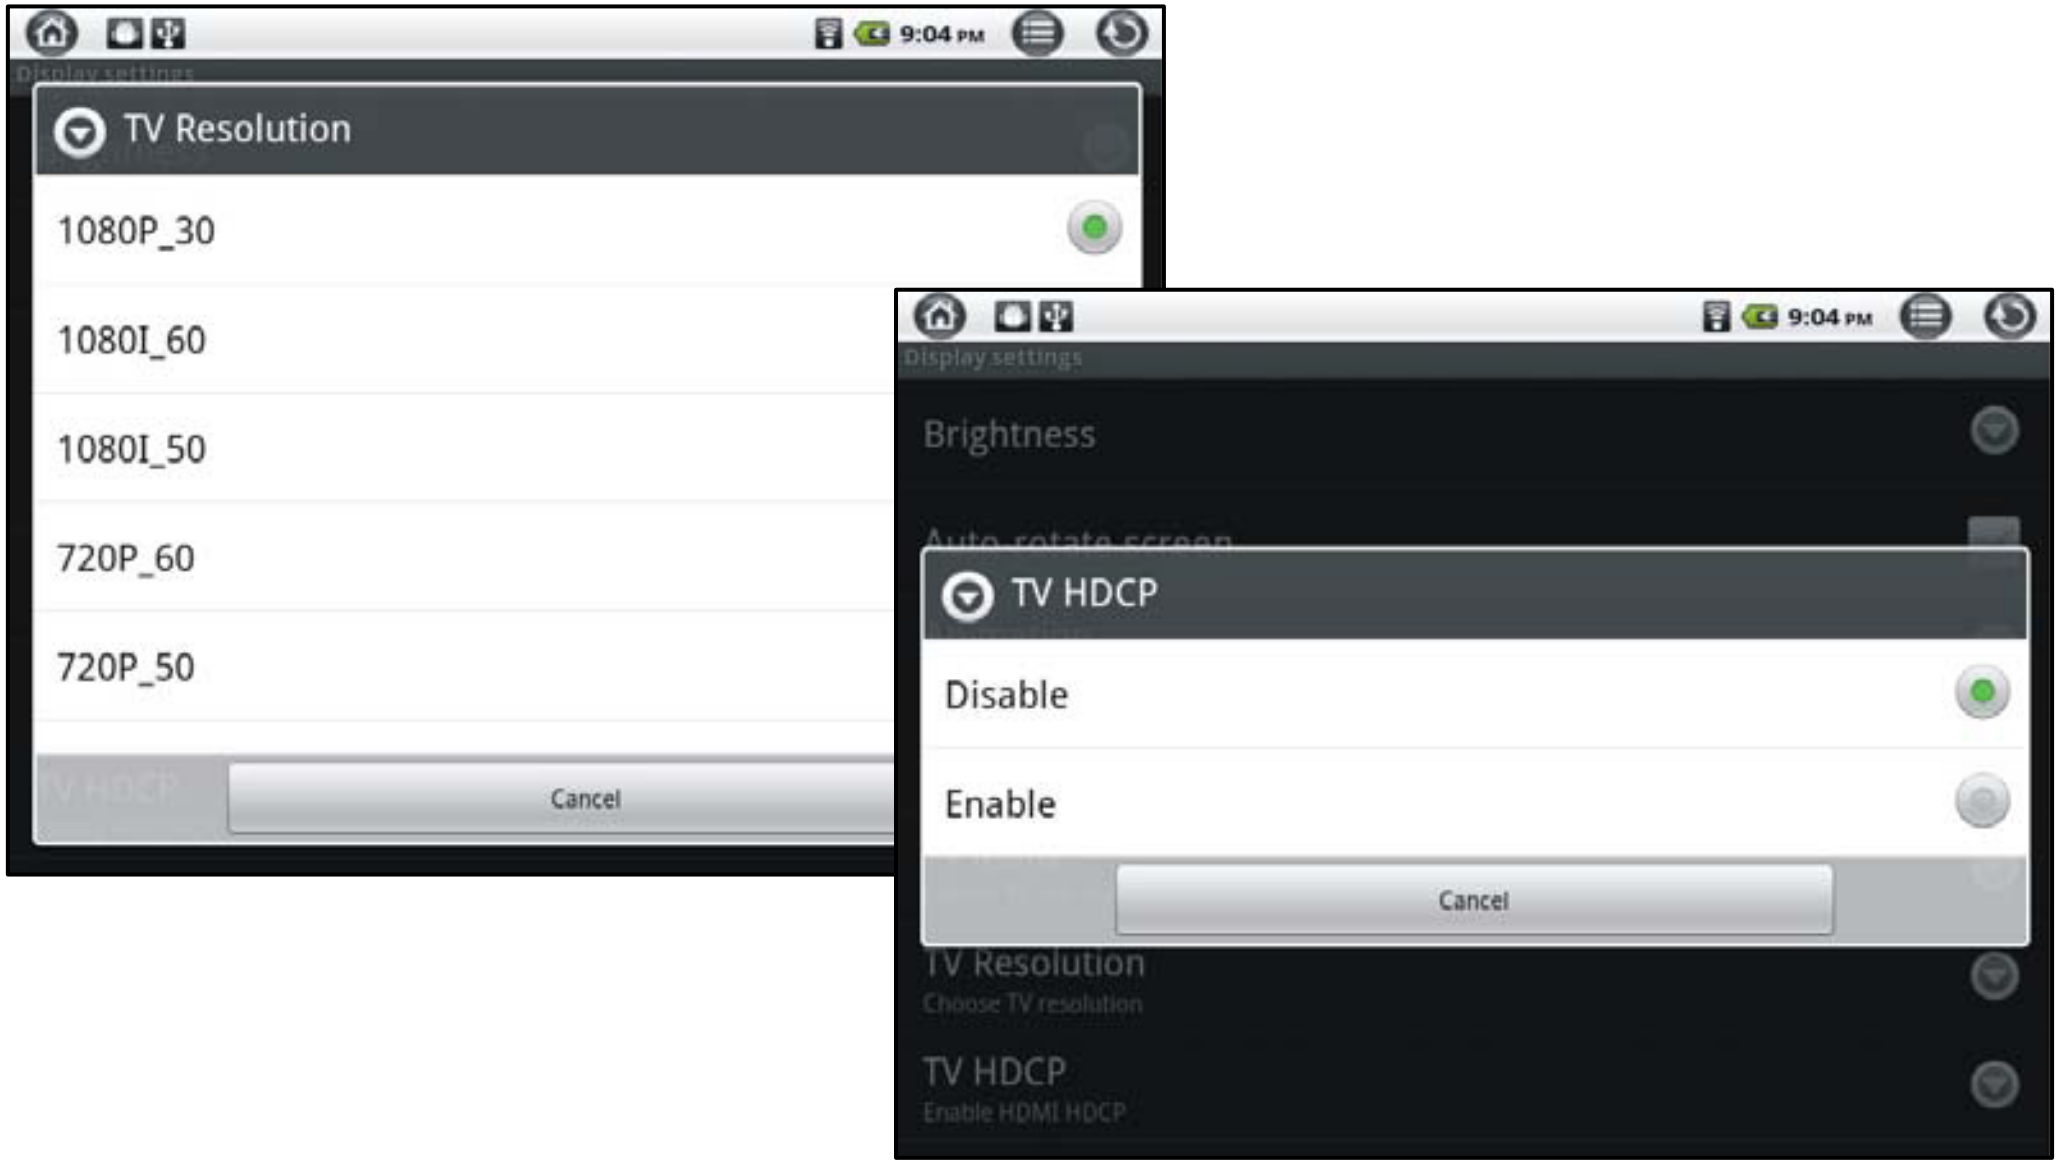

Display settings

TV Resolution

1080P_30 ●

1080I_60

1080I_50

720P_60

720P_50

Display settings

TV HDCP

Disable ●

Enable ○

TV Resolution
Choose TV resolution

TV HDCP
Enable HDMI HDCP

9:04 PM
Cancel
Brightness
Auto-rotate screen
Cancel

USB Connections

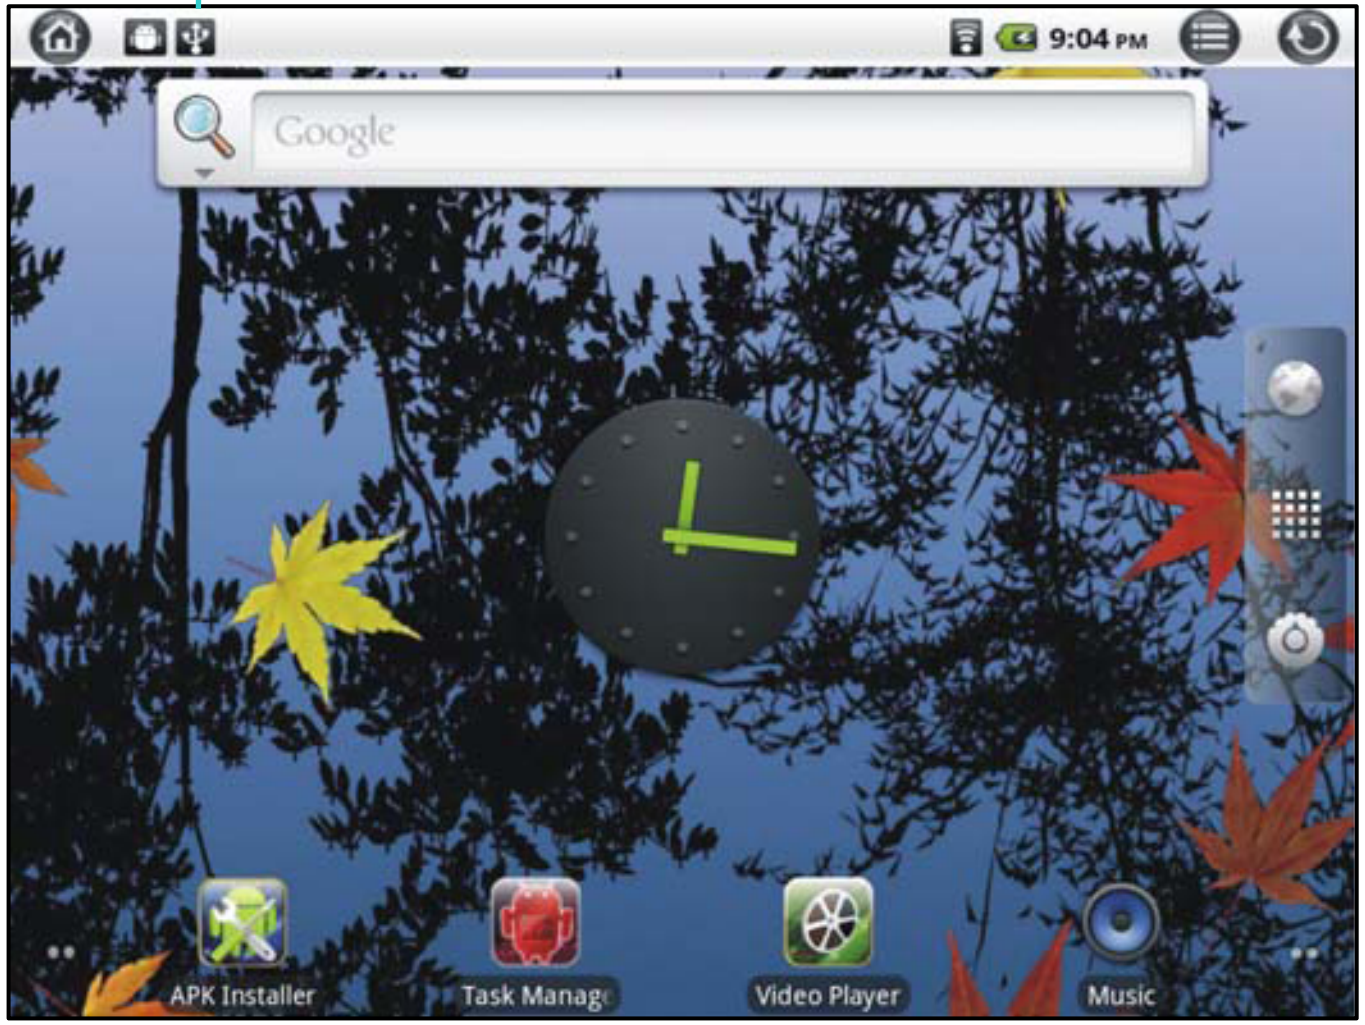
USB indicator when connected

Google
9:04 PM
APK Installer
Task Manag
Video Player
Music

To connect a USB device such as a flash drive, plug it into USB #1 or USB #2 port (see page 2).

The USB connection icon will be displayed, however you must first install the device.

First, touch the status bar and swipe down to open the dialog box.

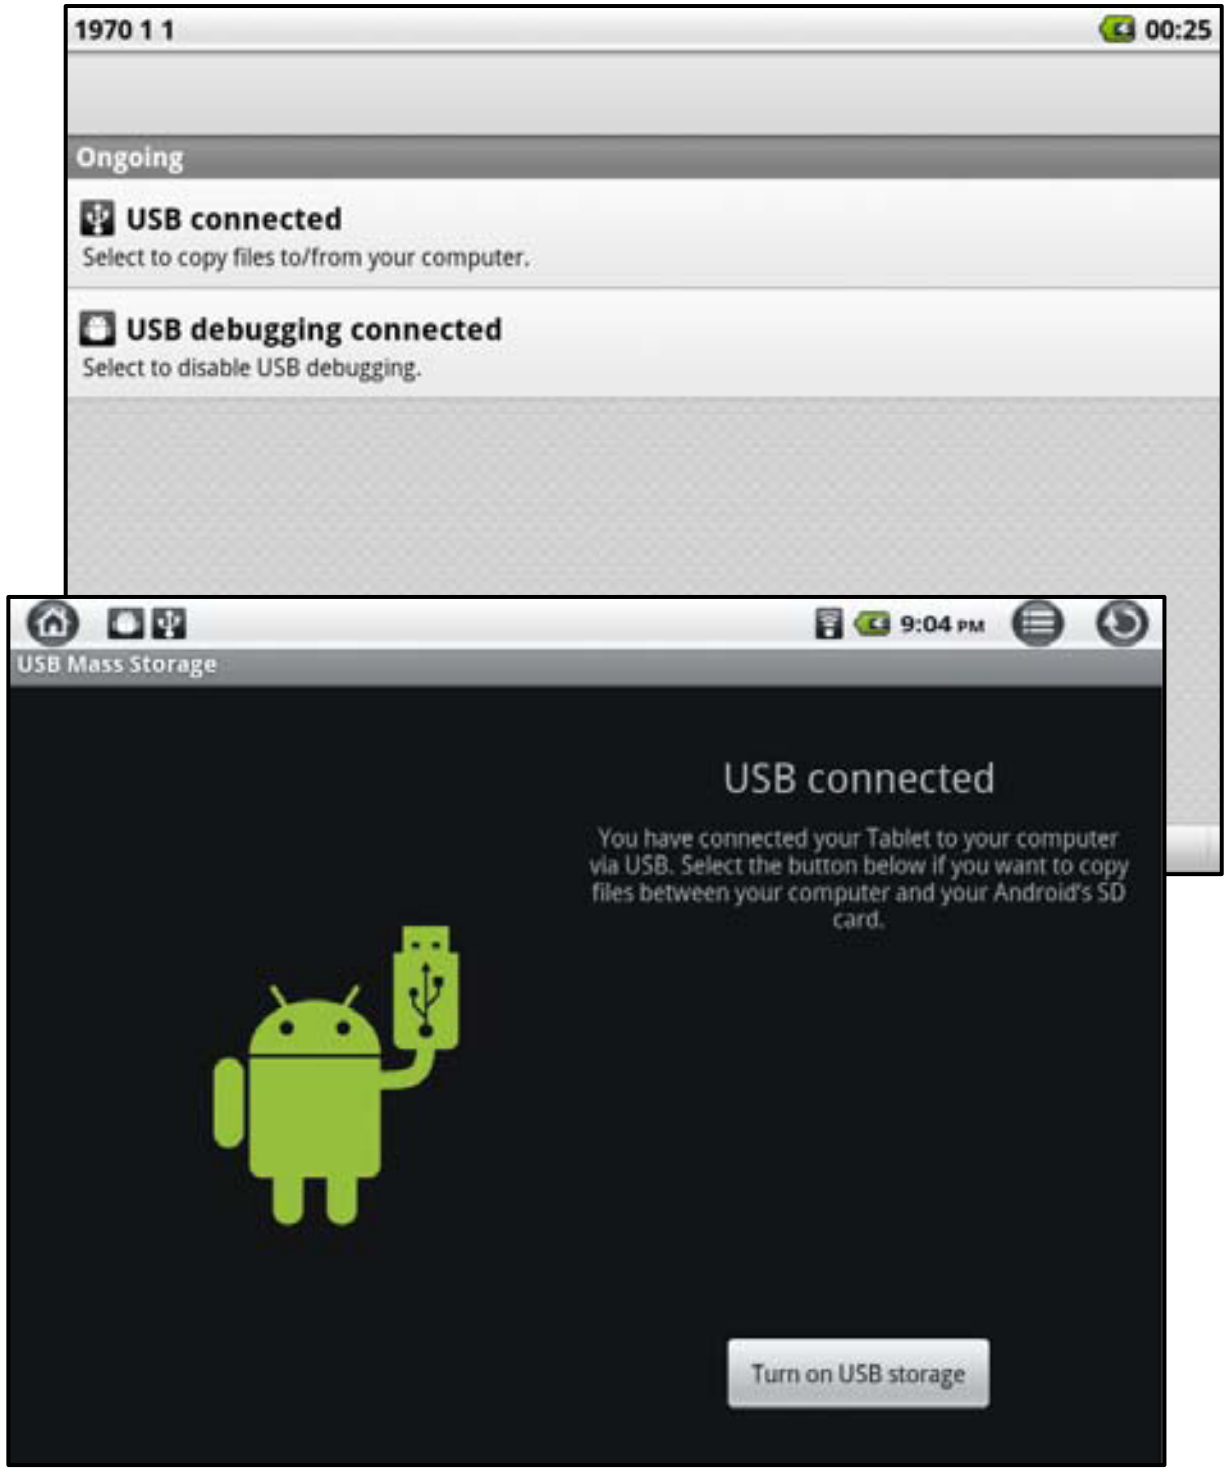

1970 1 1 00:25

Ongoing

USB connected
Select to copy files to/from your computer.

USB debugging connected
Select to disable USB debugging.

9:04 PM

USB Mass Storage

USB connected

You have connected your Tablet to your computer via USB. Select the button below if you want to copy files between your computer and your Android's SD card.

Turn on USB storage

The dialog at left will open.

Select “USB Connected”

Click on the button: “Turn on USB Storage”

The USB device should now be enabled.

Before removing USB device, click on “Turn off USB Storage” to eject the device.

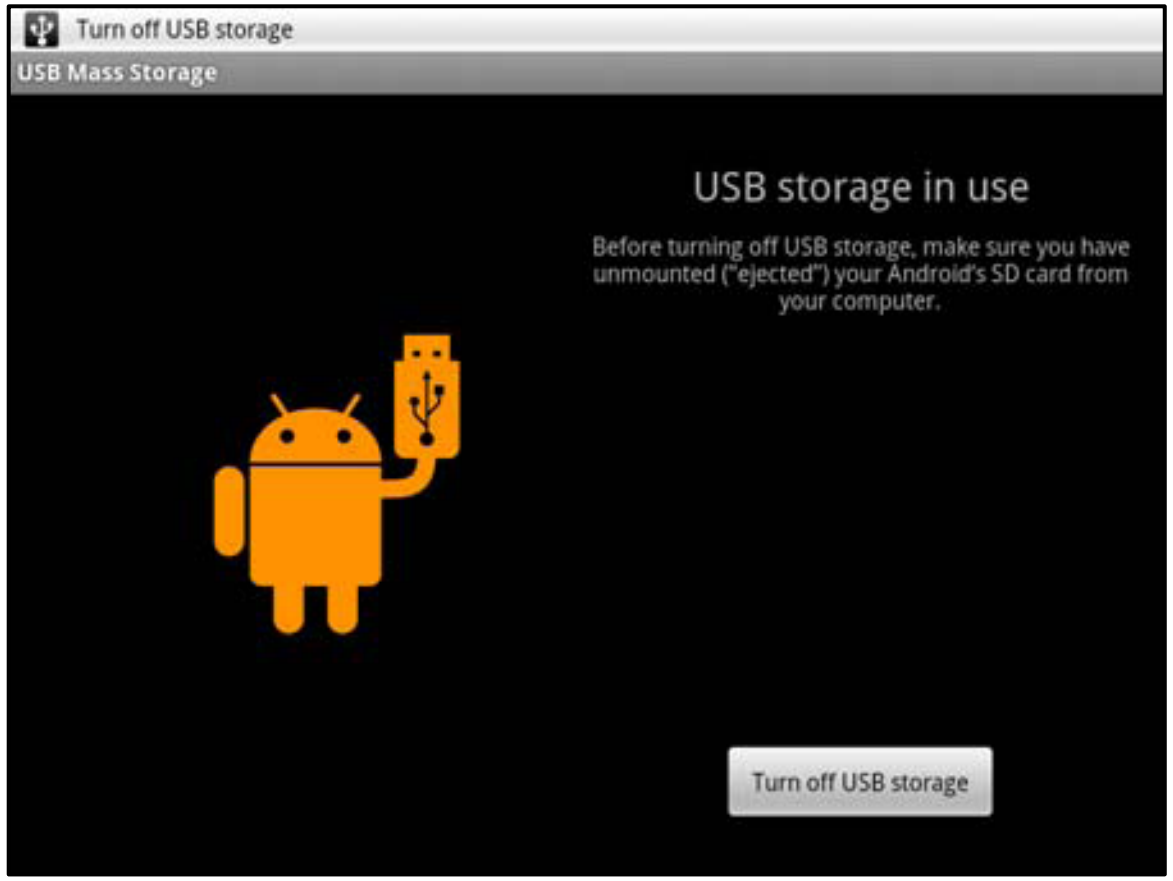

Turn off USB storage

USB Mass Storage

USB storage in use

Before turning off USB storage, make sure you have unmounted (“ejected”) your Android's SD card from your computer.

Turn off USB storage

Wi-Fi Settings

Touch: “Menu Key” > “Wireless & Networks” > “Wi-Fi Settings”

1 Click Wi-Fi (turn on Wi-Fi). Tablet will start searching for available networks.

2 Choose available network, input password and click “Connect”.

For advanced settings, touch menu icon at right of status bar and choose “Advanced”

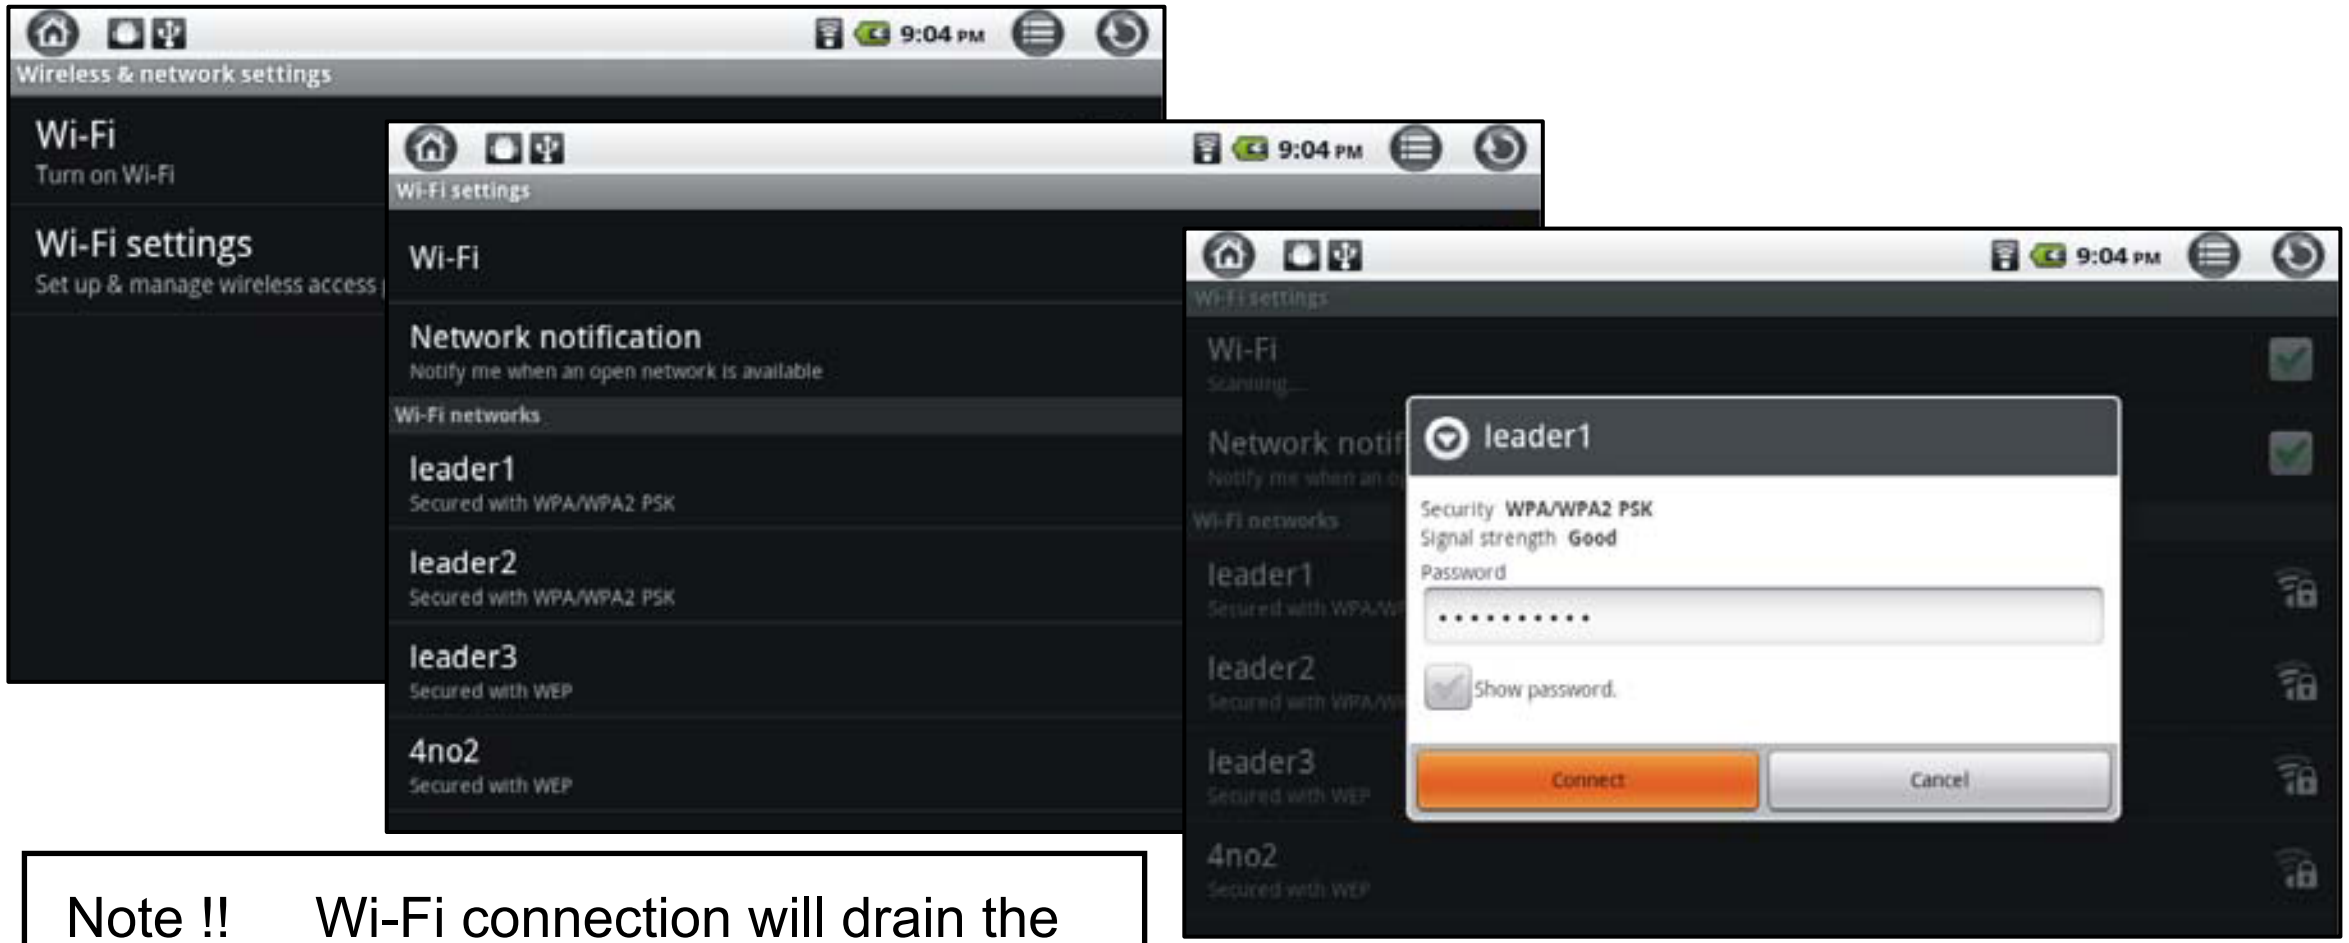
9:04 PM
Wireless & network settings
Wi-Fi
Turn on Wi-Fi
Wi-Fi settings
Set up & manage wireless access
Wi-Fi settings
Wi-Fi
Network notification
Notify me when an open network is available
Wi-Fi networks
leader1
Secured with WPA/WPA2 PSK
leader2
Secured with WPA/WPA2 PSK
leader3
Secured with WEP
4no2
Secured with WEP
Scanning...
Connect
Cancel

leader1

Security WPA/WPA2 PSK

Signal strength Good

Password

•••••••••••

☑ Show password.

Note !! Wi-Fi connection will drain the battery quickly. Turn off when not in use.

In the application list, click the “Camera” icon:

Note: Make sure you have an SD Card installed to use the Camera/Camcorder

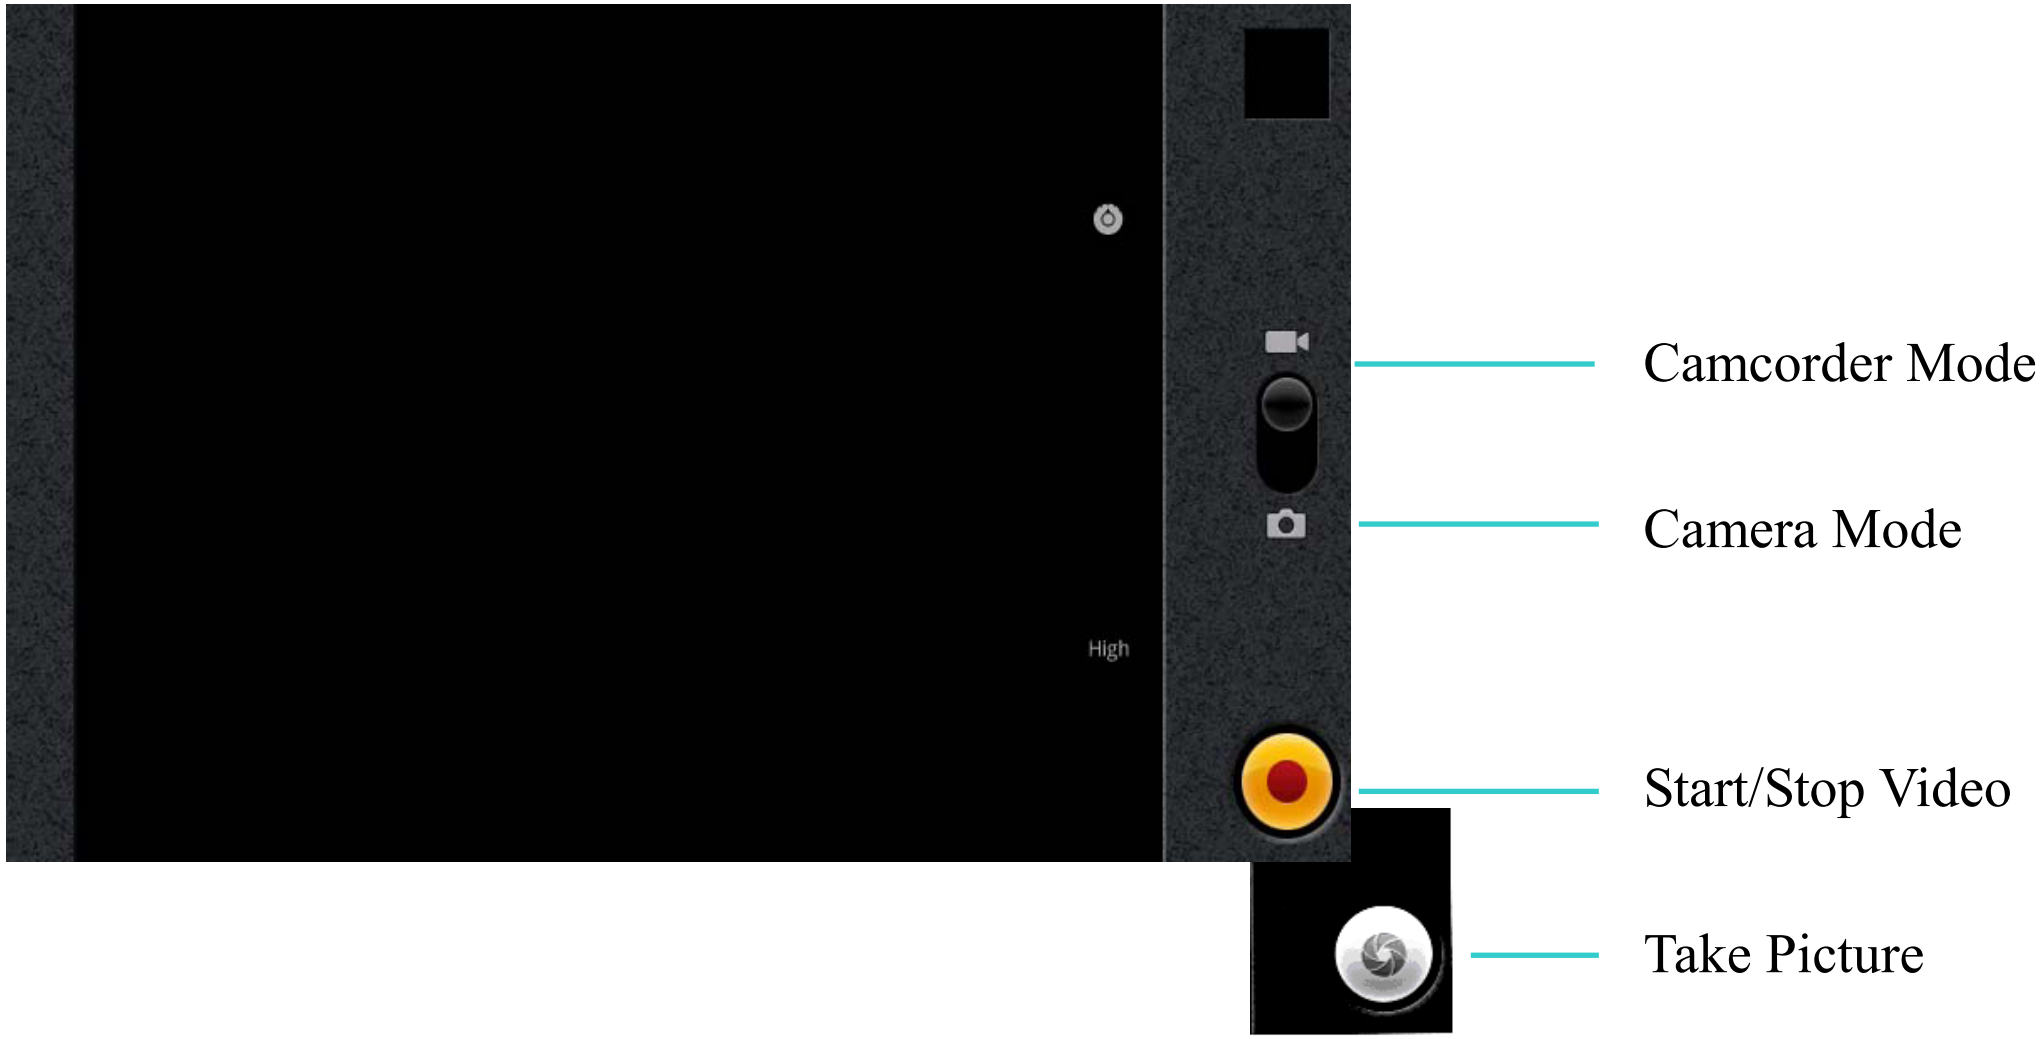
High
Camcorder Mode
Camera Mode
Start/Stop Video
Take Picture

Before using the internet browser, please make sure Wi-Fi service is turned on.
Click the “Browser” icon to open the browser.
Click on the menu icon at the right side of the status bar for browser commands.

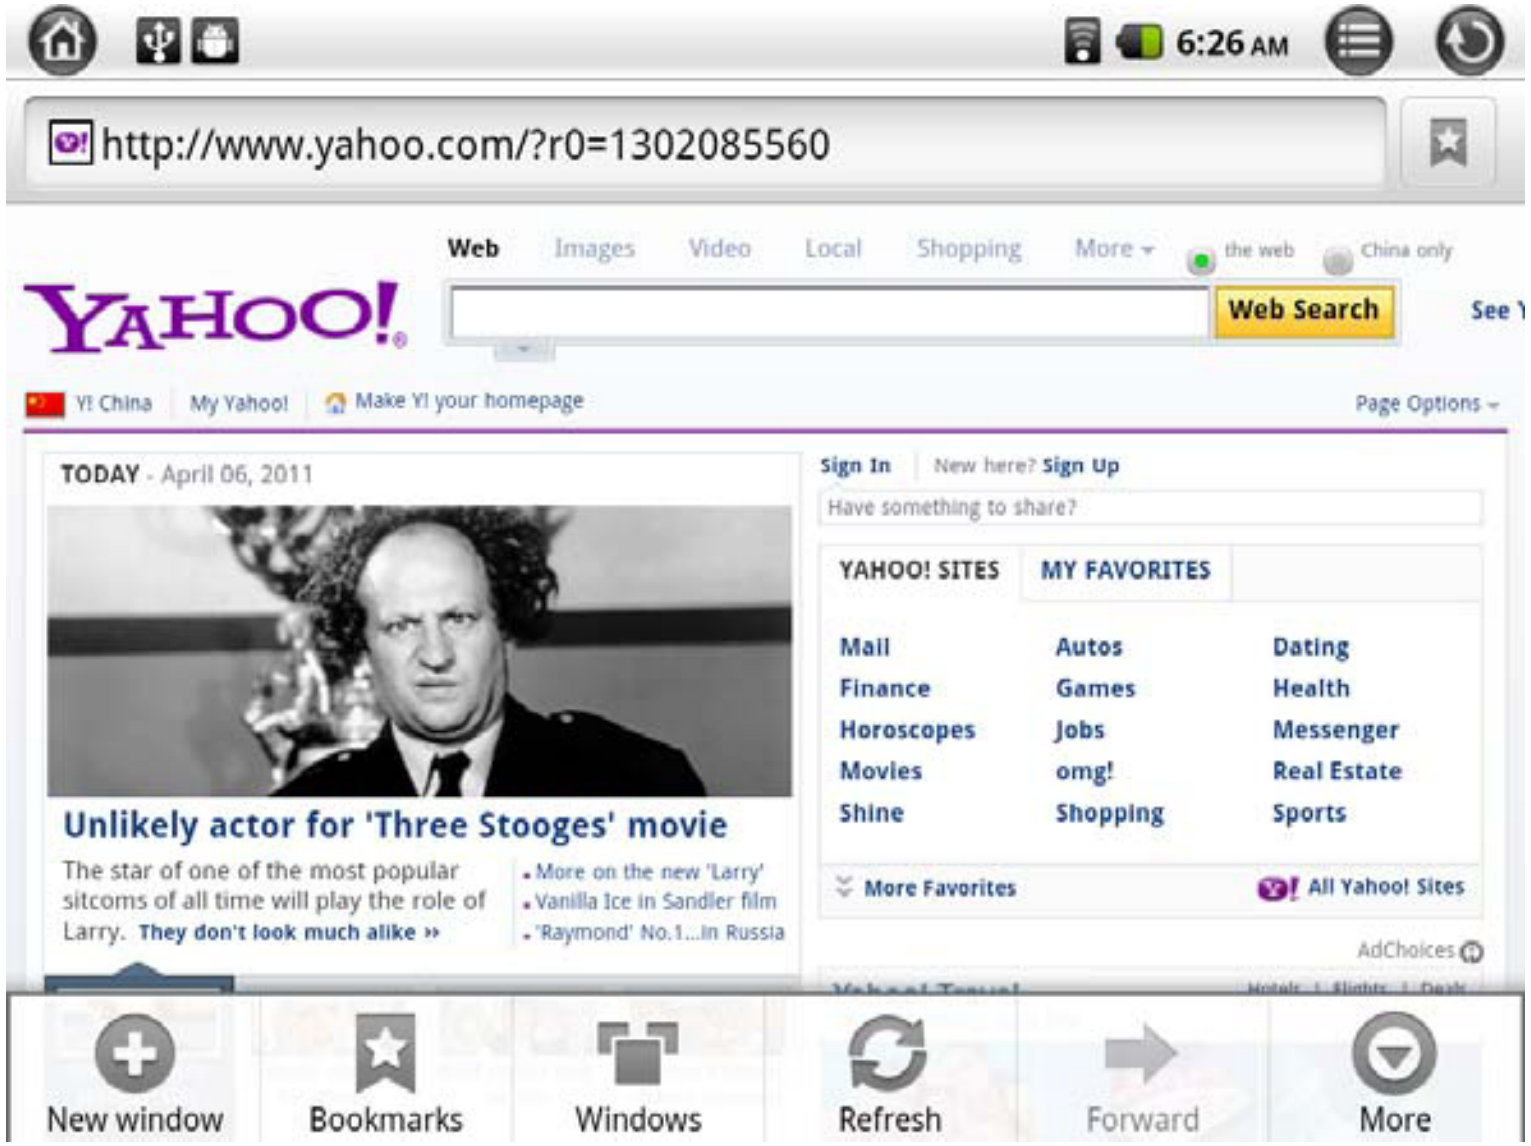

http://www.yahoo.com/?r0=1302085560

TODAY - April 06, 2011

Unlikely actor for 'Three Stooges' movie

The star of one of the most popular sitcoms of all time will play the role of Larry. They don't look much alike »

- More on the new 'Larry'
- Vanilla Ice in Sandler film
- 'Raymond' No.1...in Russia

Have something to share?

6:26 AM
Web
Images
Video
Local
Shopping
More
the web
China only
YAHOO!
Web Search
Y! China
My Yahoo!
Make Y! your homepage
Page Options
Sign In
New here? Sign Up
YAHOO! SITES
MY FAVORITES
Mail
Autos
Dating
Finance
Games
Health
Horoscopes
Jobs
Messenger
Movies
omg!
Real Estate
Shine
Shopping
Sports
More Favorites
All Yahoo! Sites
AdChoices
New window
Bookmarks
Windows
Refresh
Forward
More

In the application list screen, click the “APK Installer” icon:

1 Choose application location (or choose Uninstall)

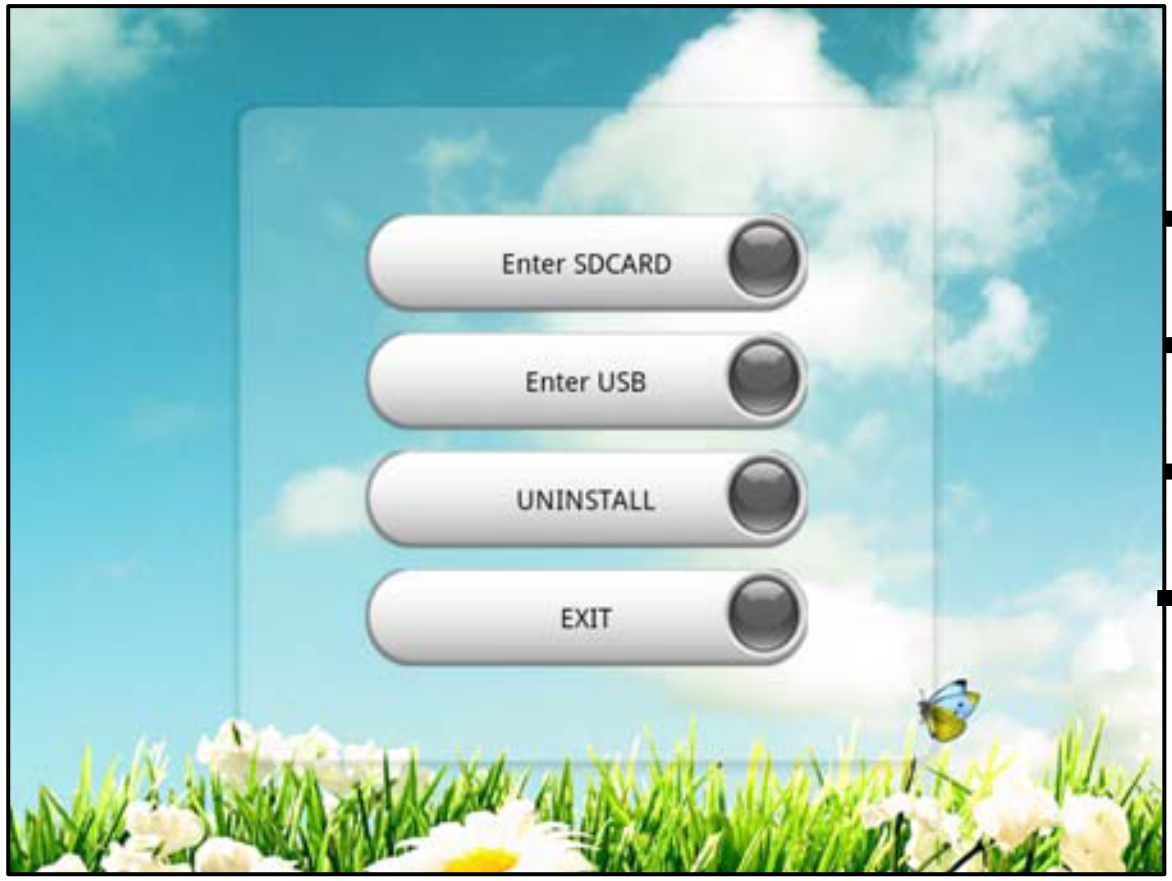
Enter SDCARD
Enter USB
UNINSTALL
EXIT

Enter i
direct
Enter
dire
Click
Unins
Exit

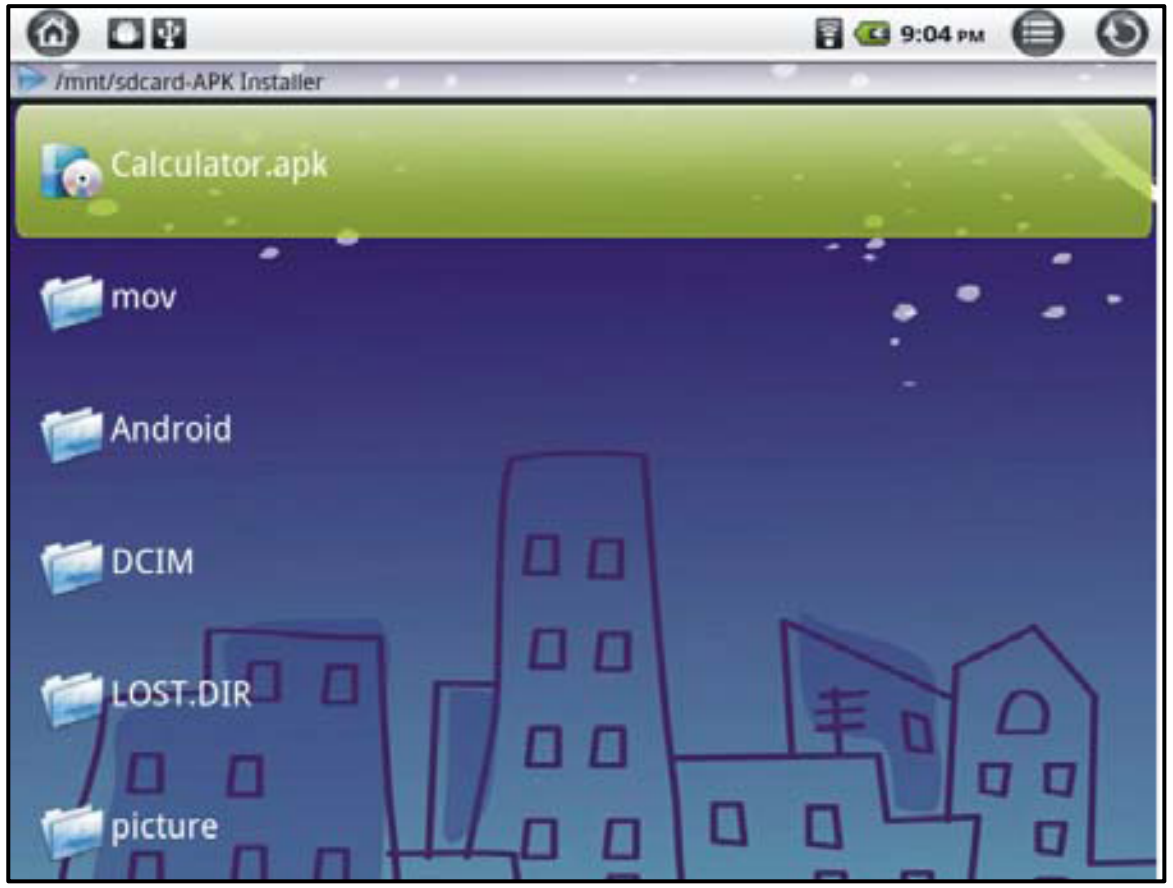
9:04 PM
/mnt/sdcard-APK Installer
Calculator.apk
mov
Android
DCIM
LOST.DIR
picture

2 Select application.

3 Click Install or cancel.

In the application list screen, click the “Text Reader” icon: .

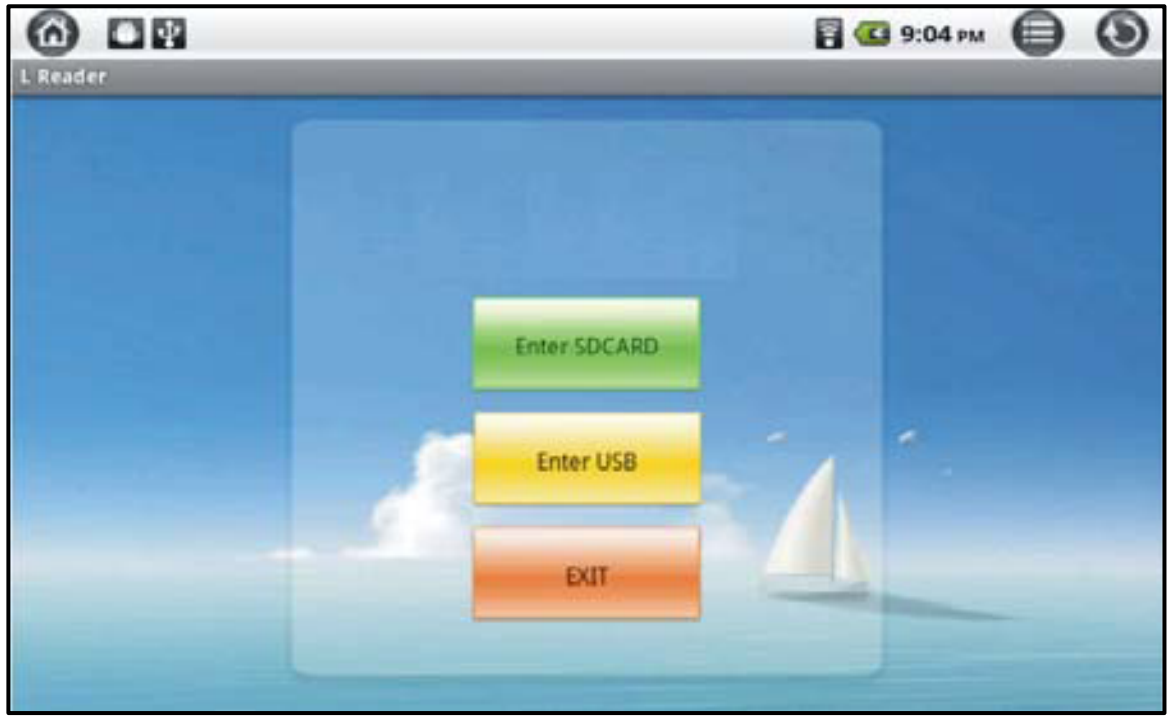
9:04 PM
L Reader
Enter SDCARD
Enter USB
EXIT

1 Select memory location of the document.

2 Touch document icon to open.

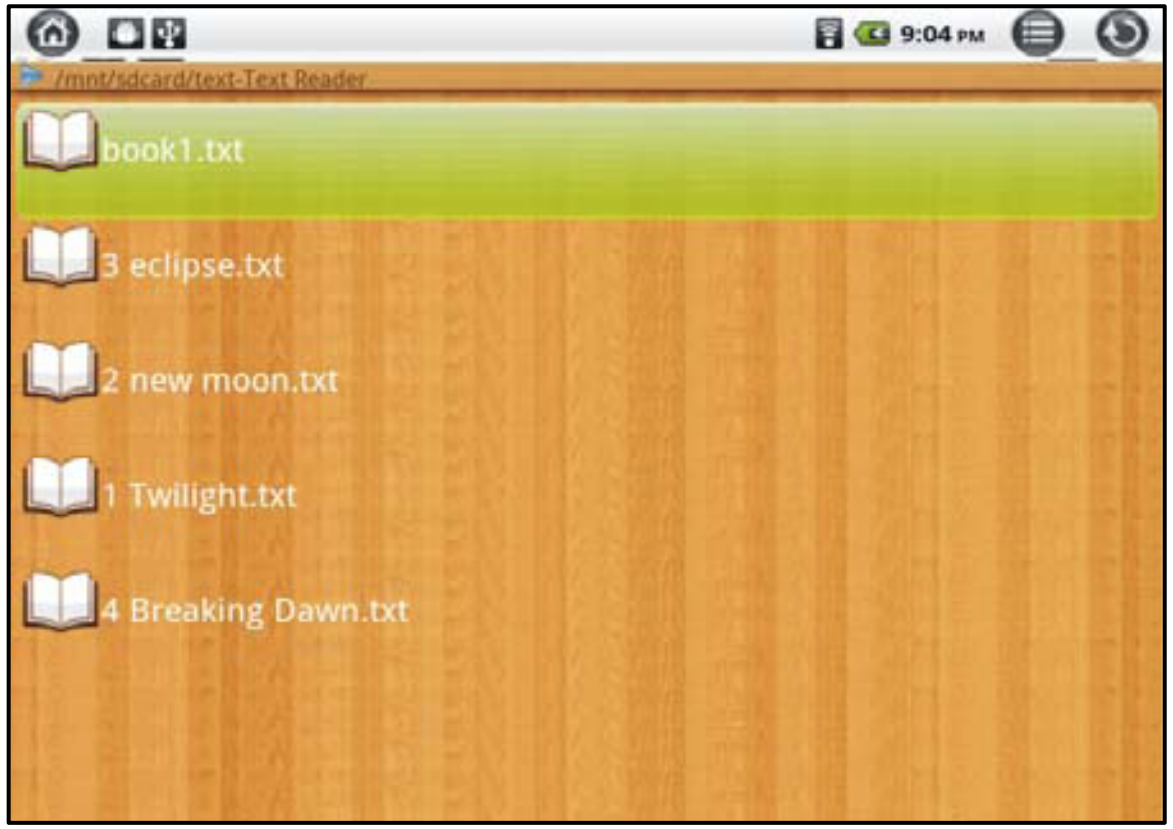

/mnt/sdcard/text-Text Reader

book1.txt

3 eclipse.txt

2 new moon.txt

1 Twilight.txt

4 Breaking Dawn.txt

Click the Menu button at the right side of the status bar to show/hide the lower menu.

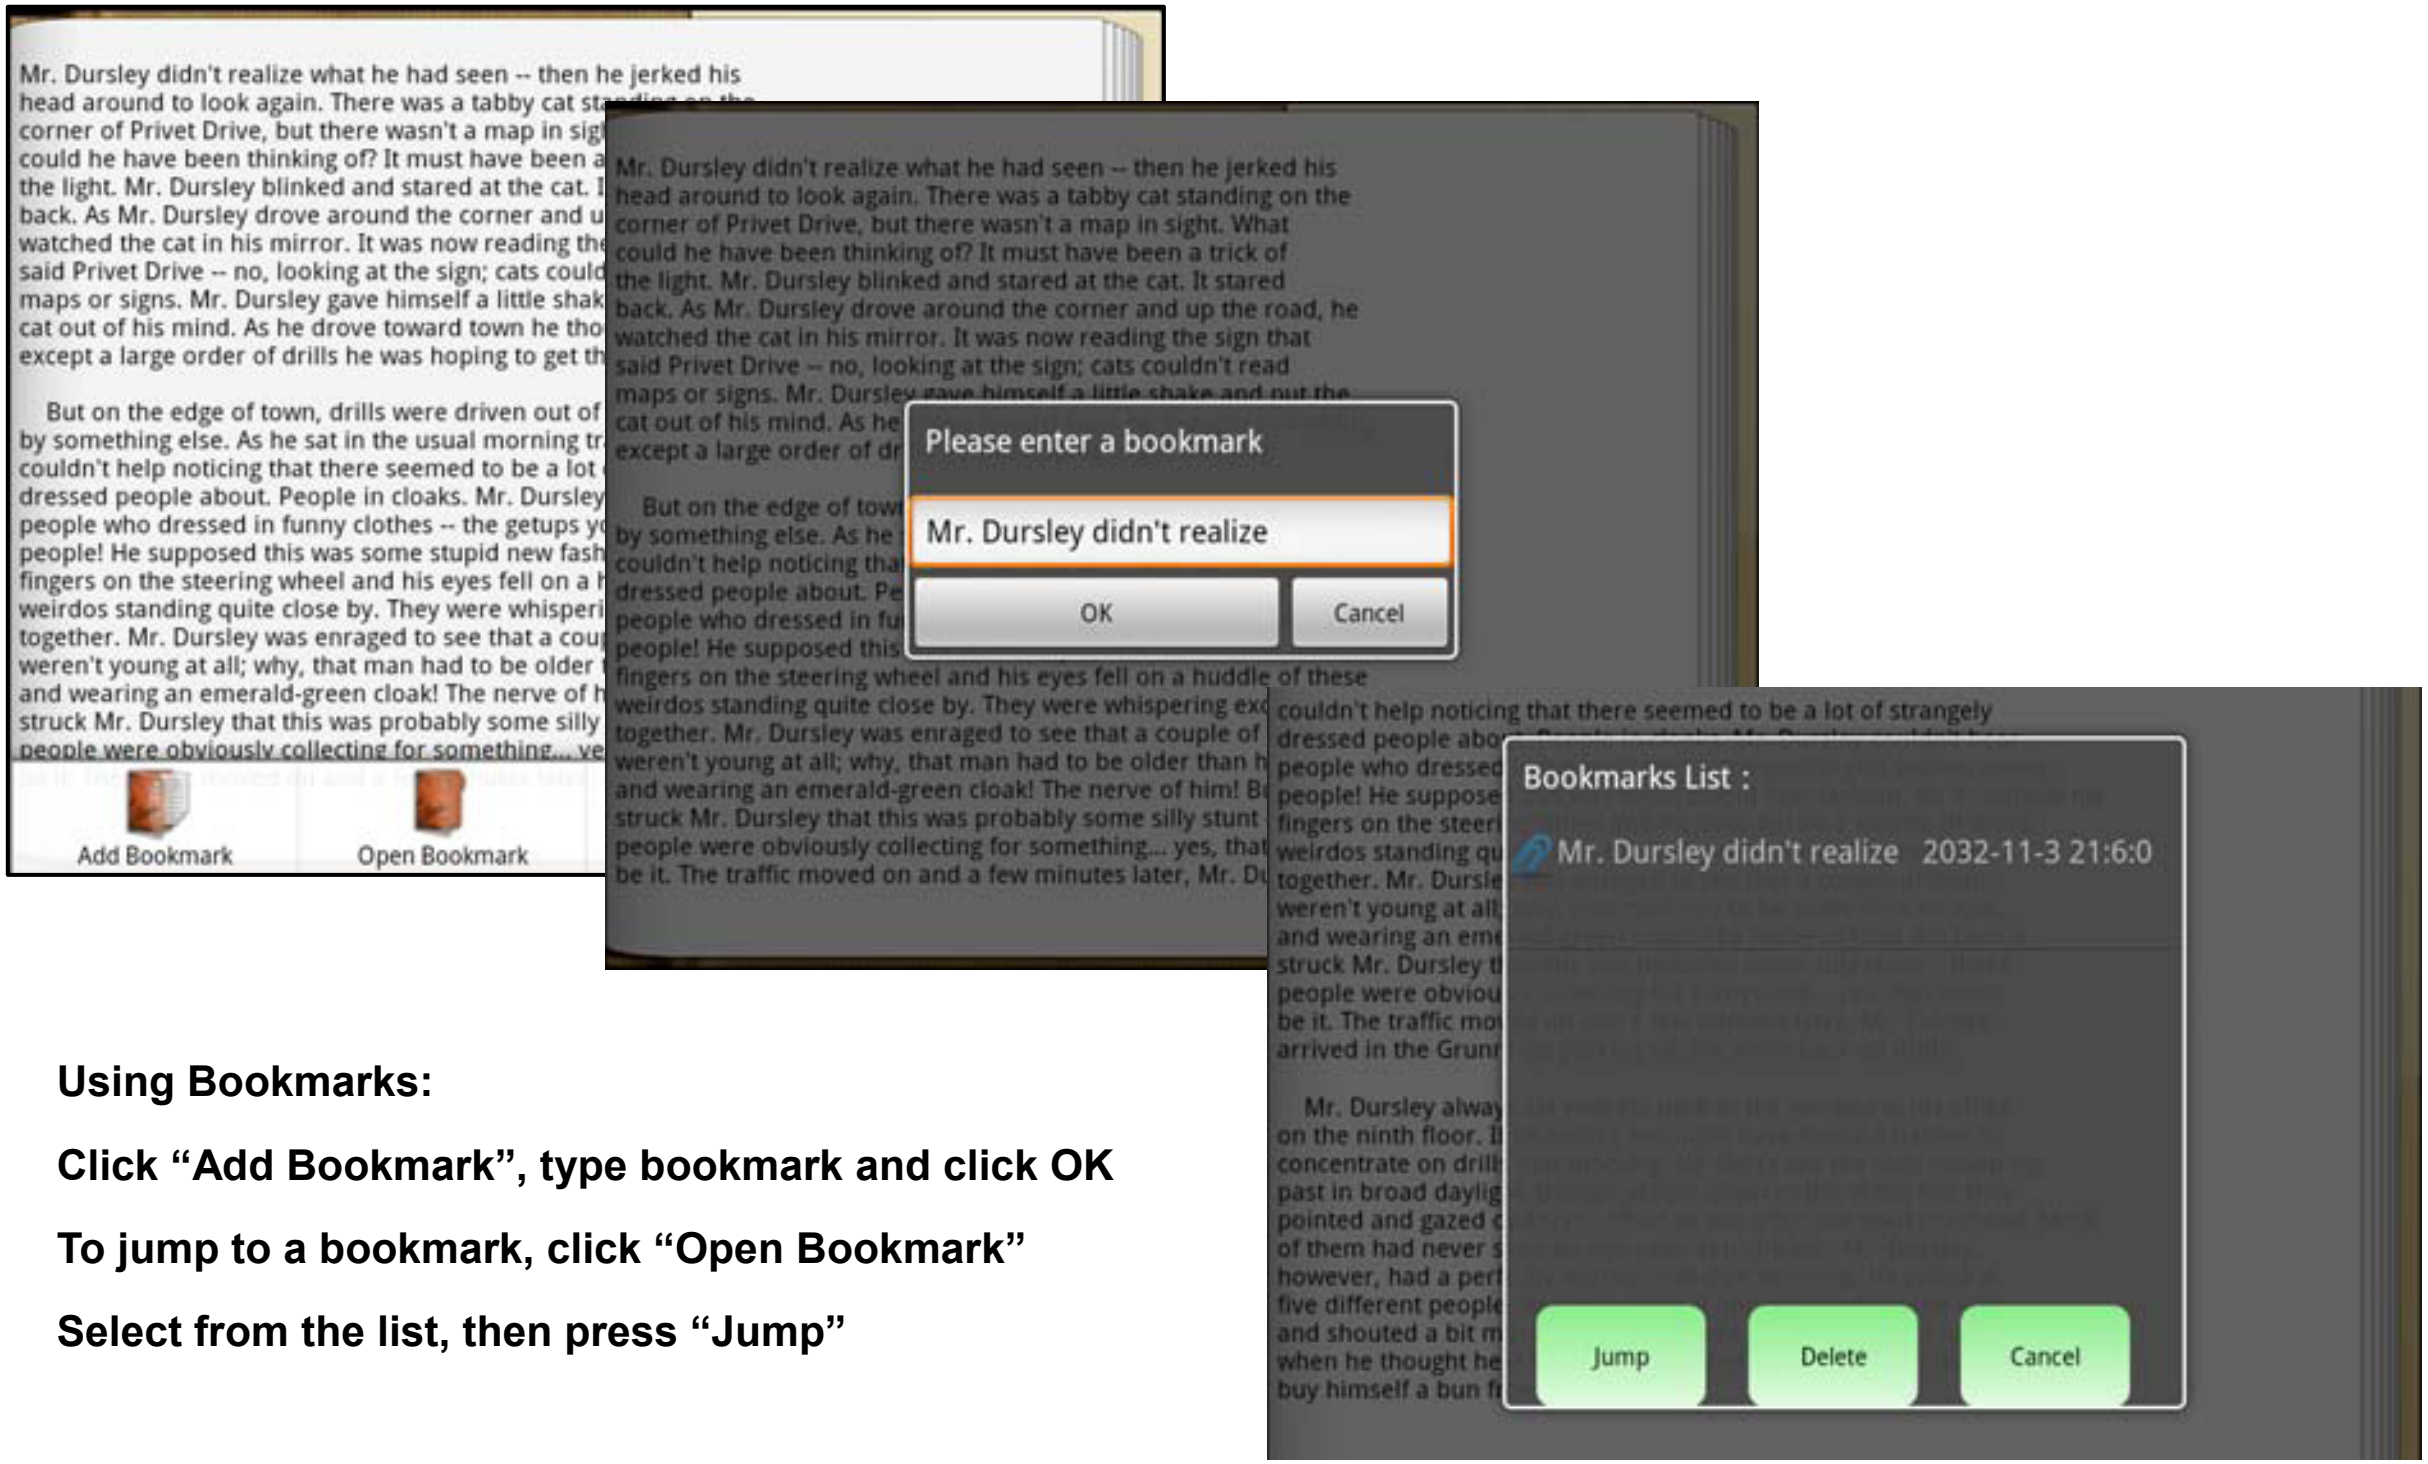
Add Bookmark
Open Bookmark
Please enter a bookmark
OK
Cancel
Bookmarks List :
Jump
Delete
Cancel

Mr. Dursley didn't realize

Mr. Dursley didn't realize 2032-11-3 21:6:0

Using Bookmarks:

Click “Add Bookmark”, type bookmark and click OK

To jump to a bookmark, click “Open Bookmark”

Select from the list, then press “Jump”

In the application list screen, click the “Task Manager: icon:

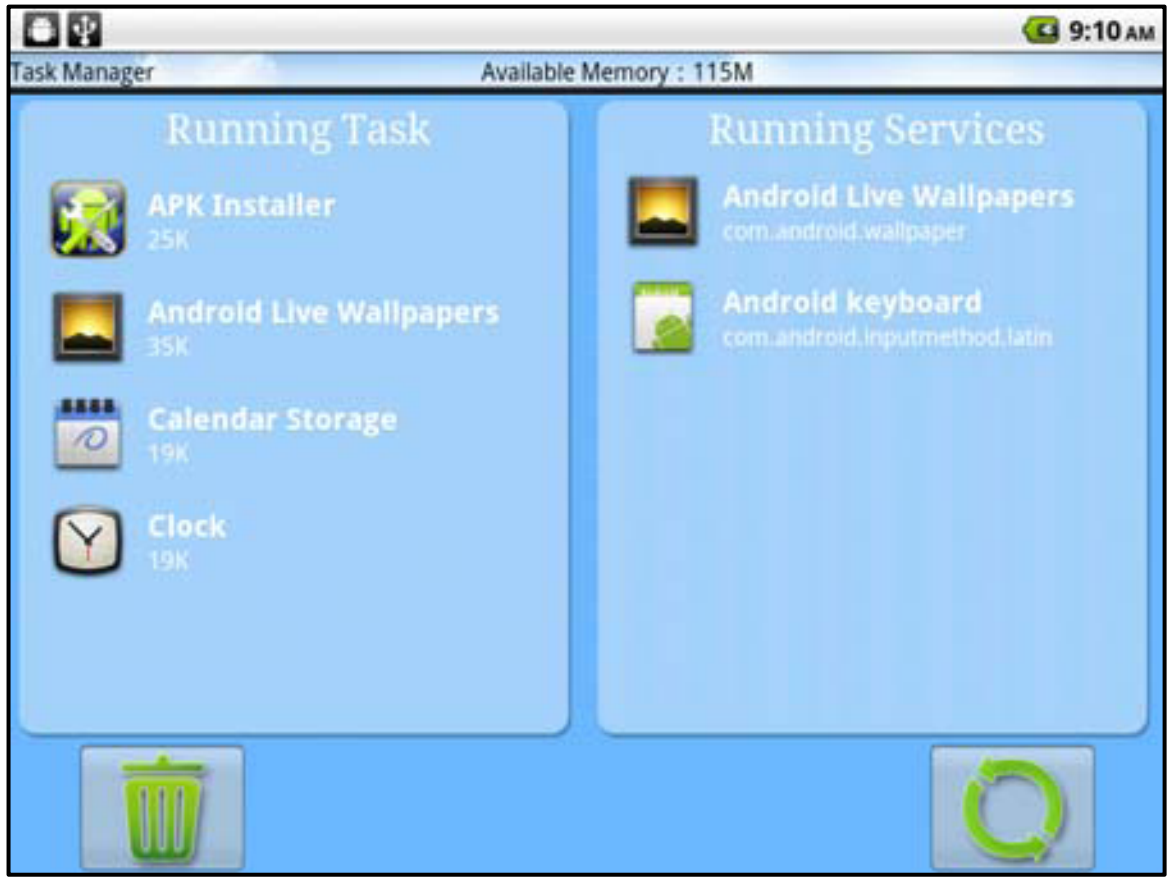
9:10 AM
Task Manager
Available Memory : 115M
Running Task
APK Installer
25K
Android Live Wallpapers
35K
Calendar Storage
19K
Clock
19K
Running Services
Android Live Wallpapers
com.android.wallpaper
Android keyboard
com.android.inputmethod.latin

The Task Manager shows all the running applications and how much memory they are using.

Click on an application to end it (kill it)or uninstall it.

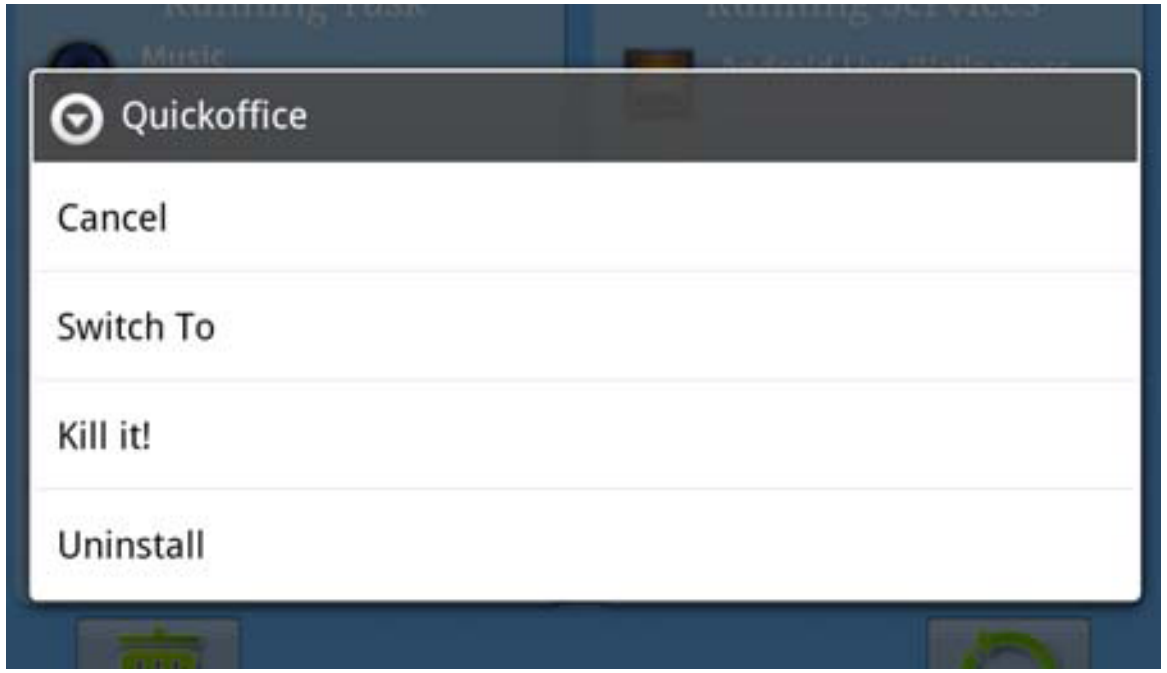
Quickoffice
Cancel
Switch To
Kill it!
Uninstall

Warning: Use this screen with caution to avoid accidentally removing applications.

In the application list screen, click the “File Manager” icon: File Manager

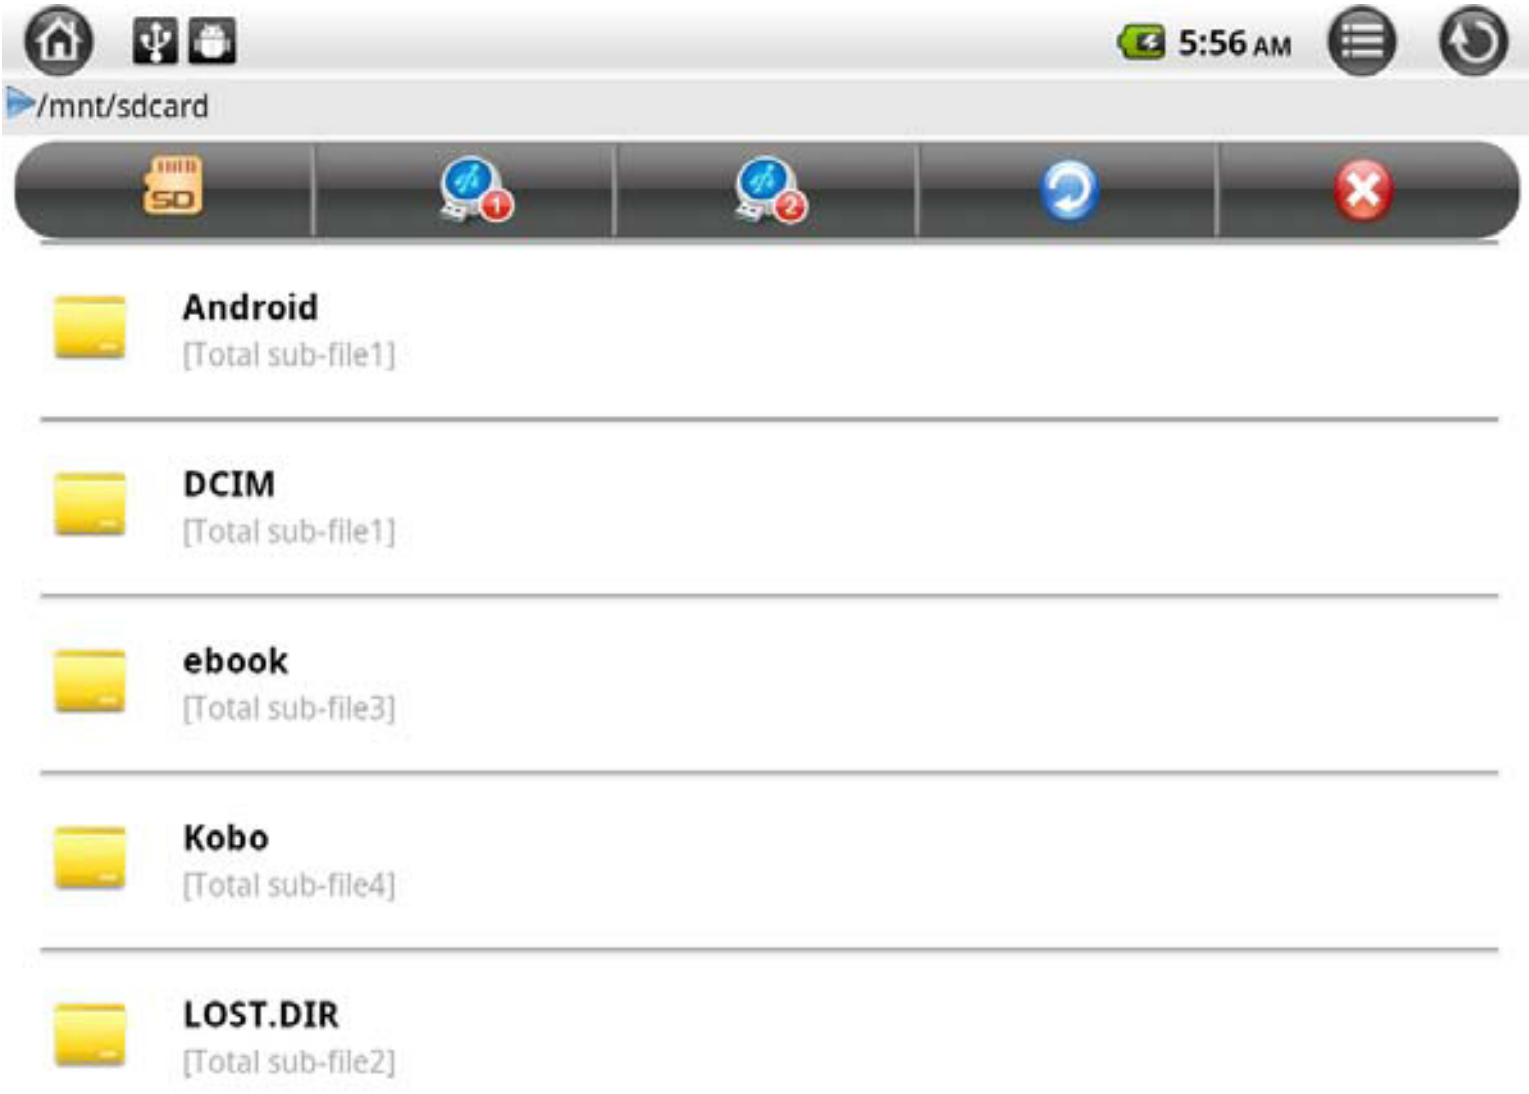

/mnt/sdcard

Android
[Total sub-file1]

DCIM
[Total sub-file1]

ebook
[Total sub-file3]

Kobo
[Total sub-file4]

LOST.DIR
[Total sub-file2]

Use the file manager to organize files.

The icons across the top are for navigating to files on the SD card, USB 1 & 2 and to move up and down within the folders.

Click on the menu button on the right side of the status bar to show the bottom menu. Use this to add a new folder or file.

In the application list screen, click the “Music” icon:

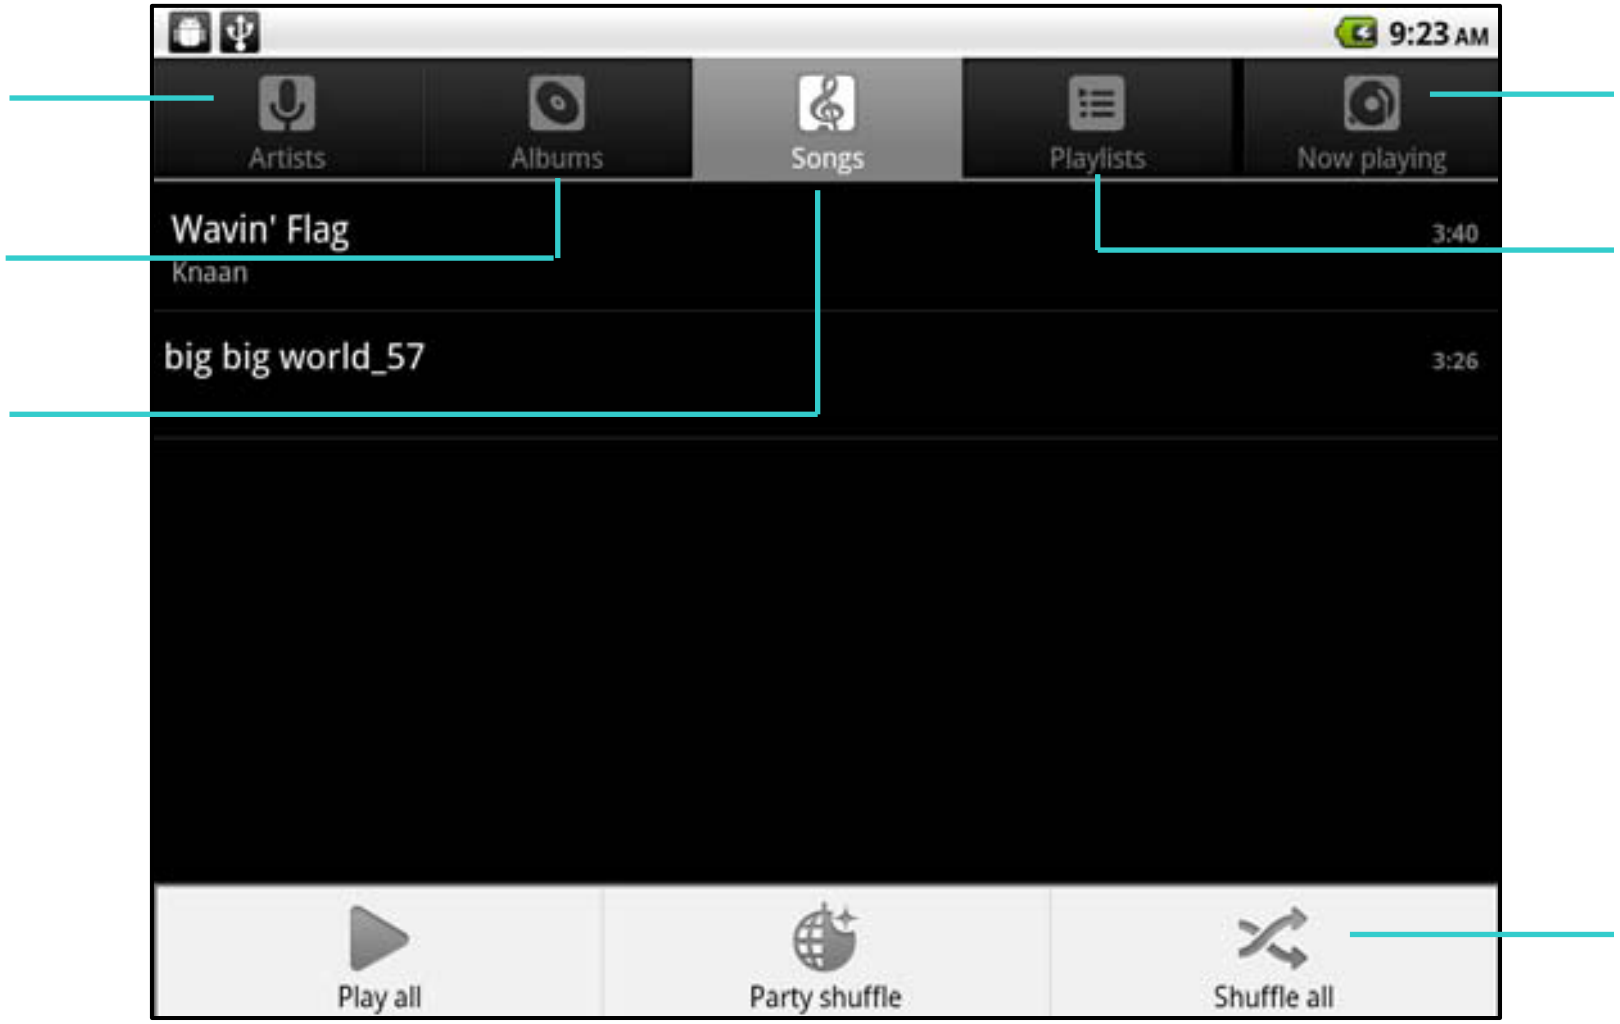
9:23 AM
Artists
Albums
Songs
Playlists
Now playing
Play all
Party shuffle
Shuffle all

Wavin' Flag 3:40
Knaan

big big world_57 3:26

Artist List

Album List

Song List

Now Playing

Playlists

Shuffle

Song Screen

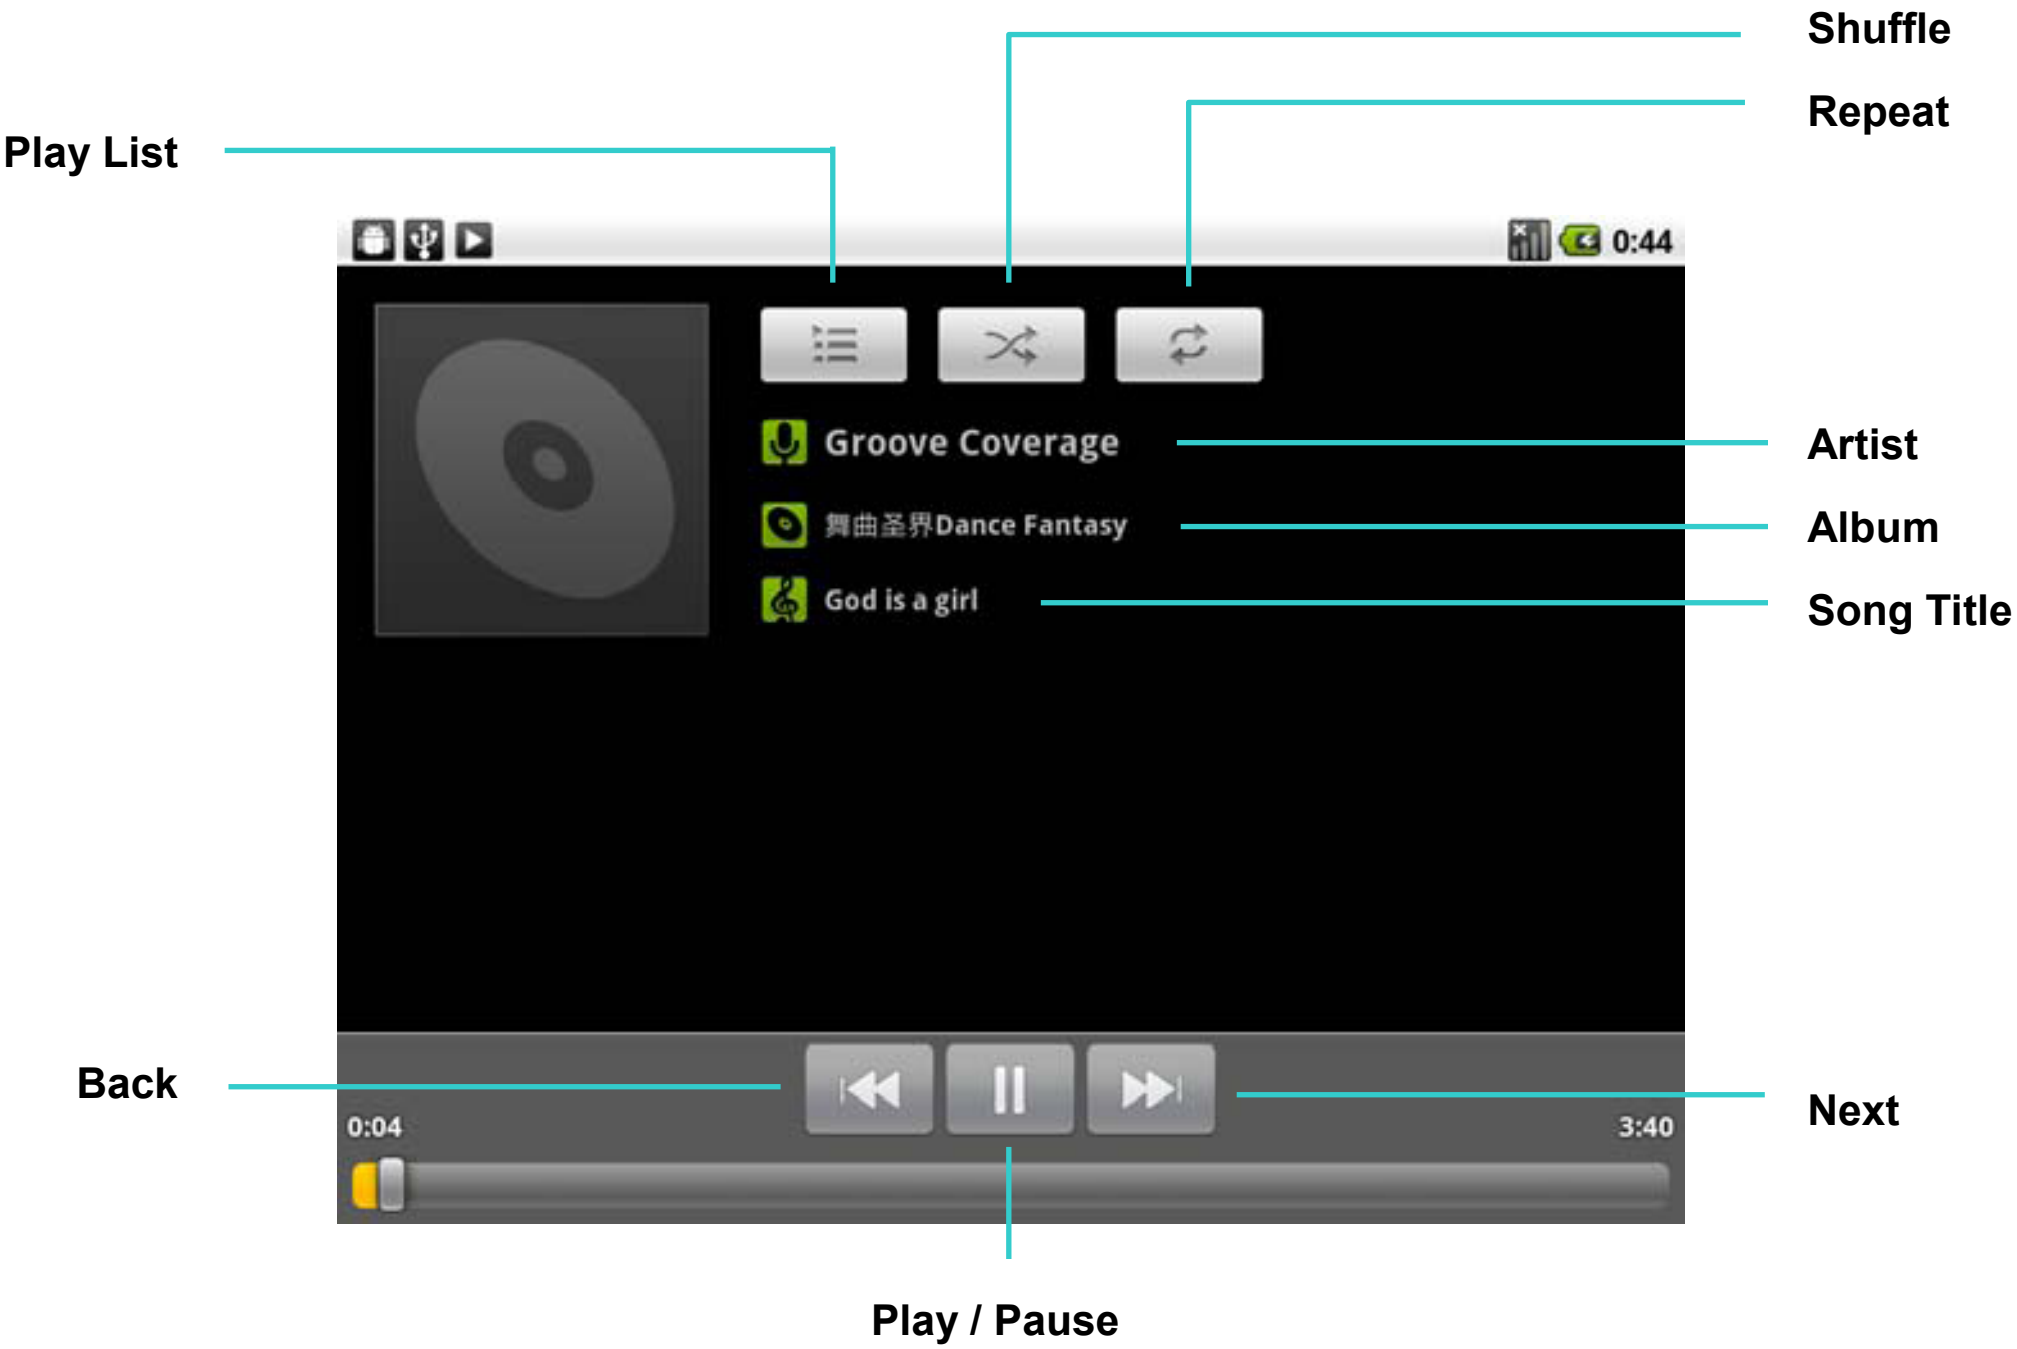
Shuffle
Repeat
Play List
0:44
Groove Coverage
舞曲圣界Dance Fantasy
God is a girl
Artist
Album
Song Title
Back
Next
0:04
3:40
Play / Pause

In the application list screen, click the “Video Player” icon:

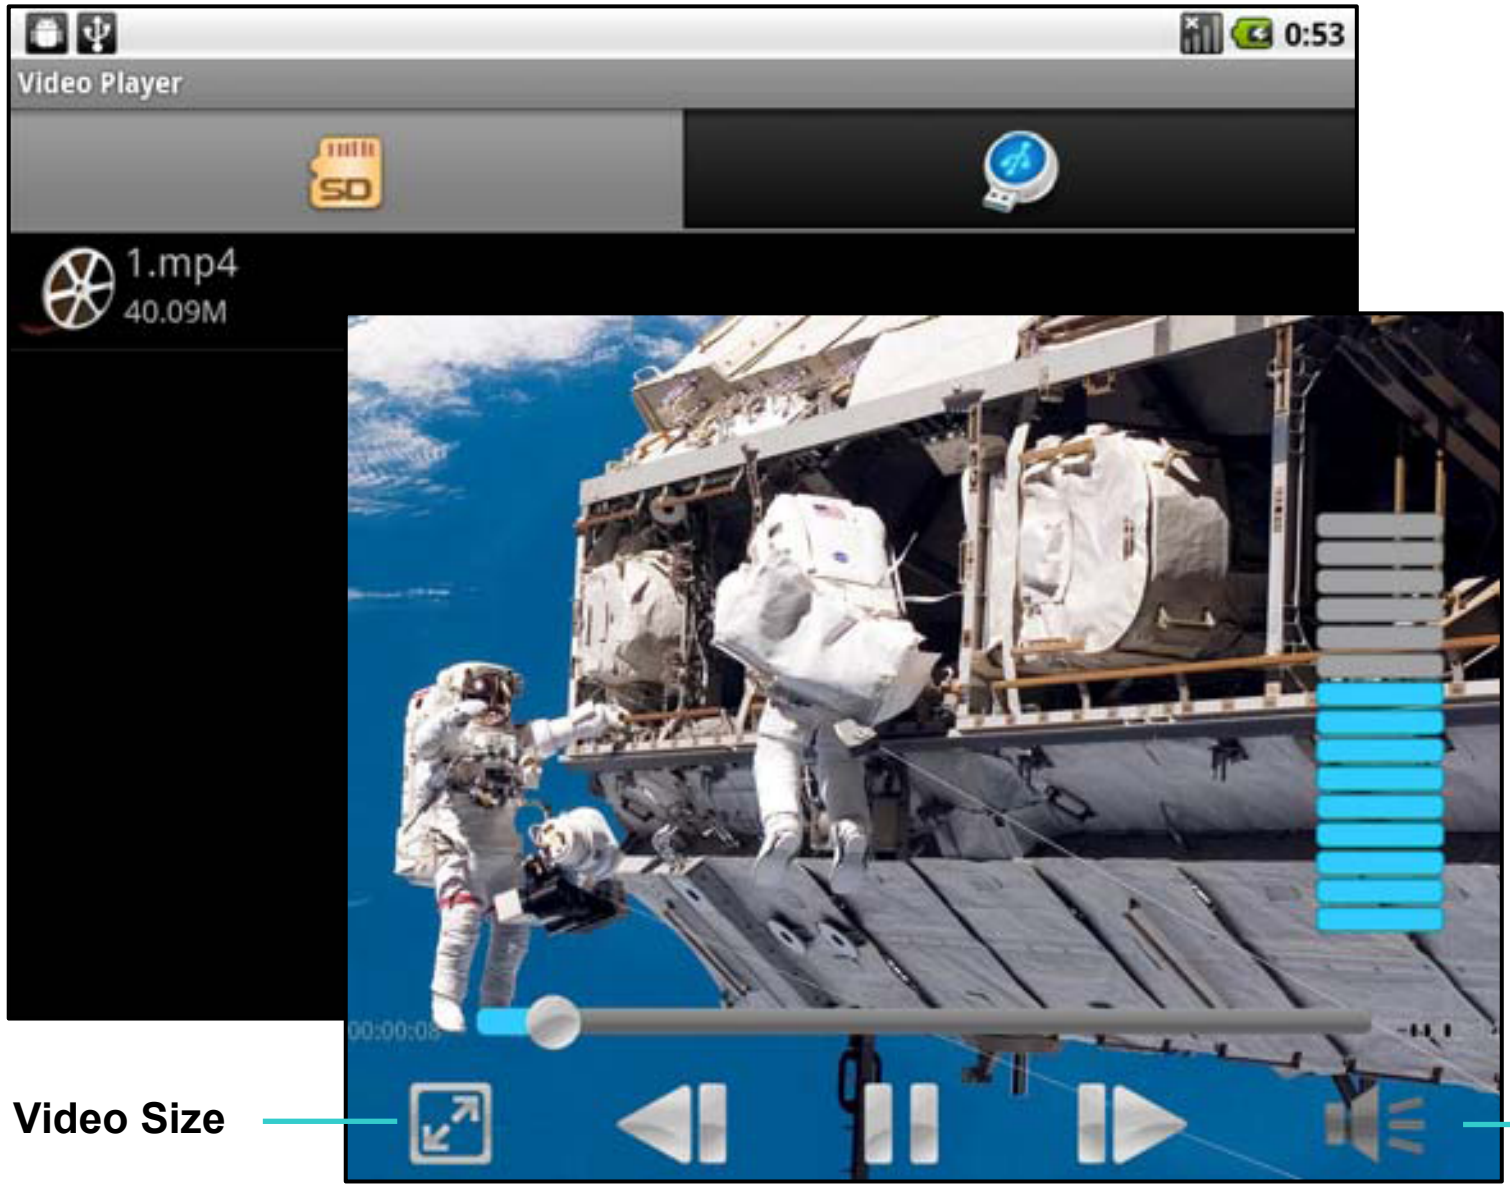

Video Size

Volume

1. **Select SD card source or USB**
2. **Select video from list**
3. **Video screen will appear and video will start.**

- **Click Video Size button to toggle between full screen and original size.**
- **Tap screen to hide controls.**
- **Press and hold screen to pause video.**

In the Application List screen, click the “Gallery” icon:

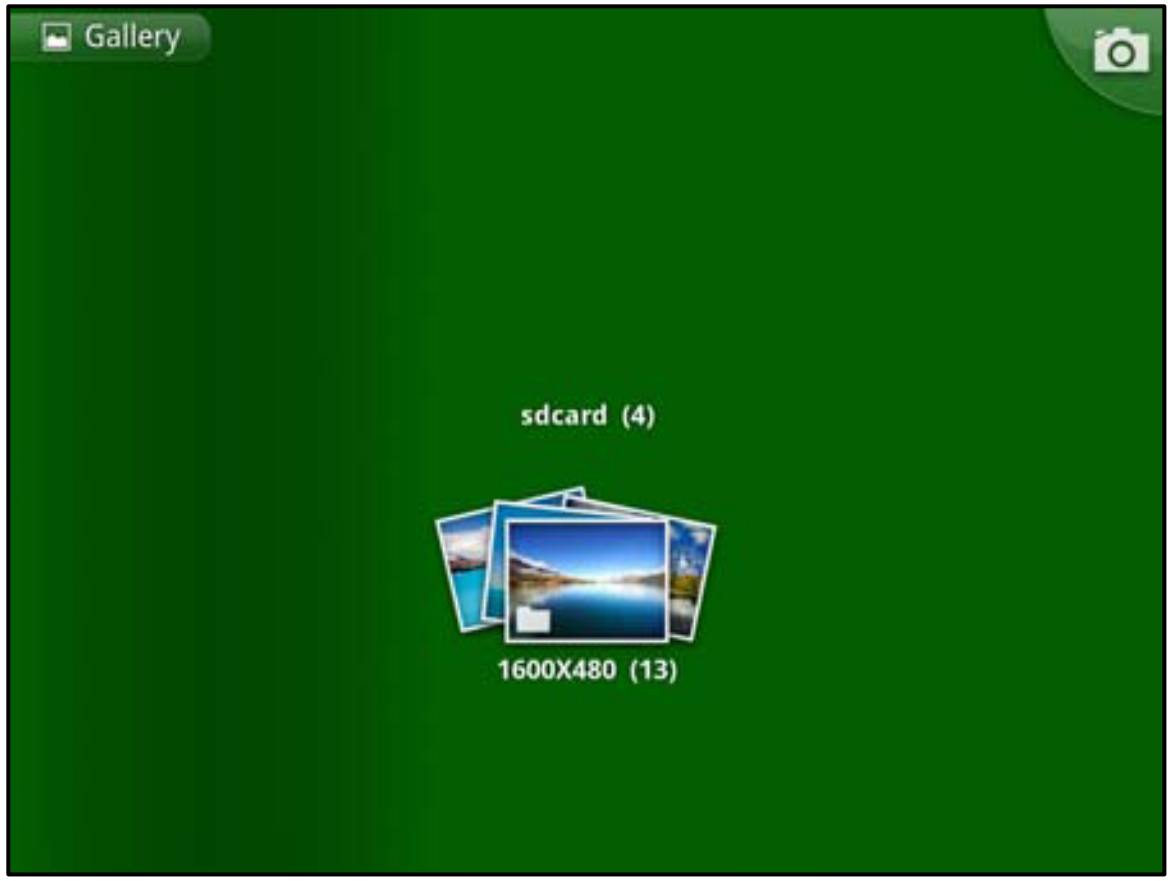
Gallery
sdcard (4)
1600X480 (13)

1. **SD card and USB sources will automatically be scanned for pictures and videos.**
2. **Touch the folder to open the picture browser.**

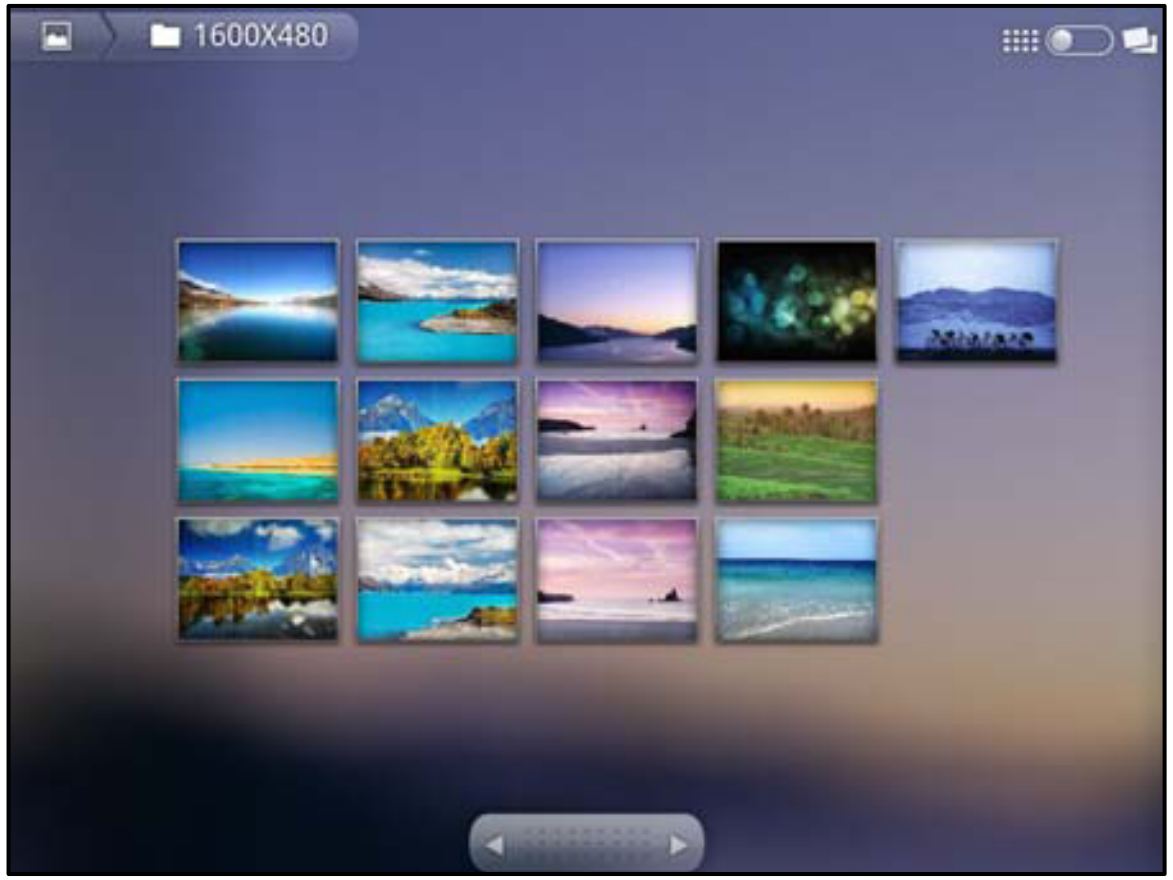

3. **Tap to select a picture or video.**

   Touch and “Swipe” to view all the photos / videos

Pictures

Touch screen and “Swipe” left or right to view the next or previous picture.
Touch screen with 2 fingers and spread apart to zoom (or use +/- buttons).

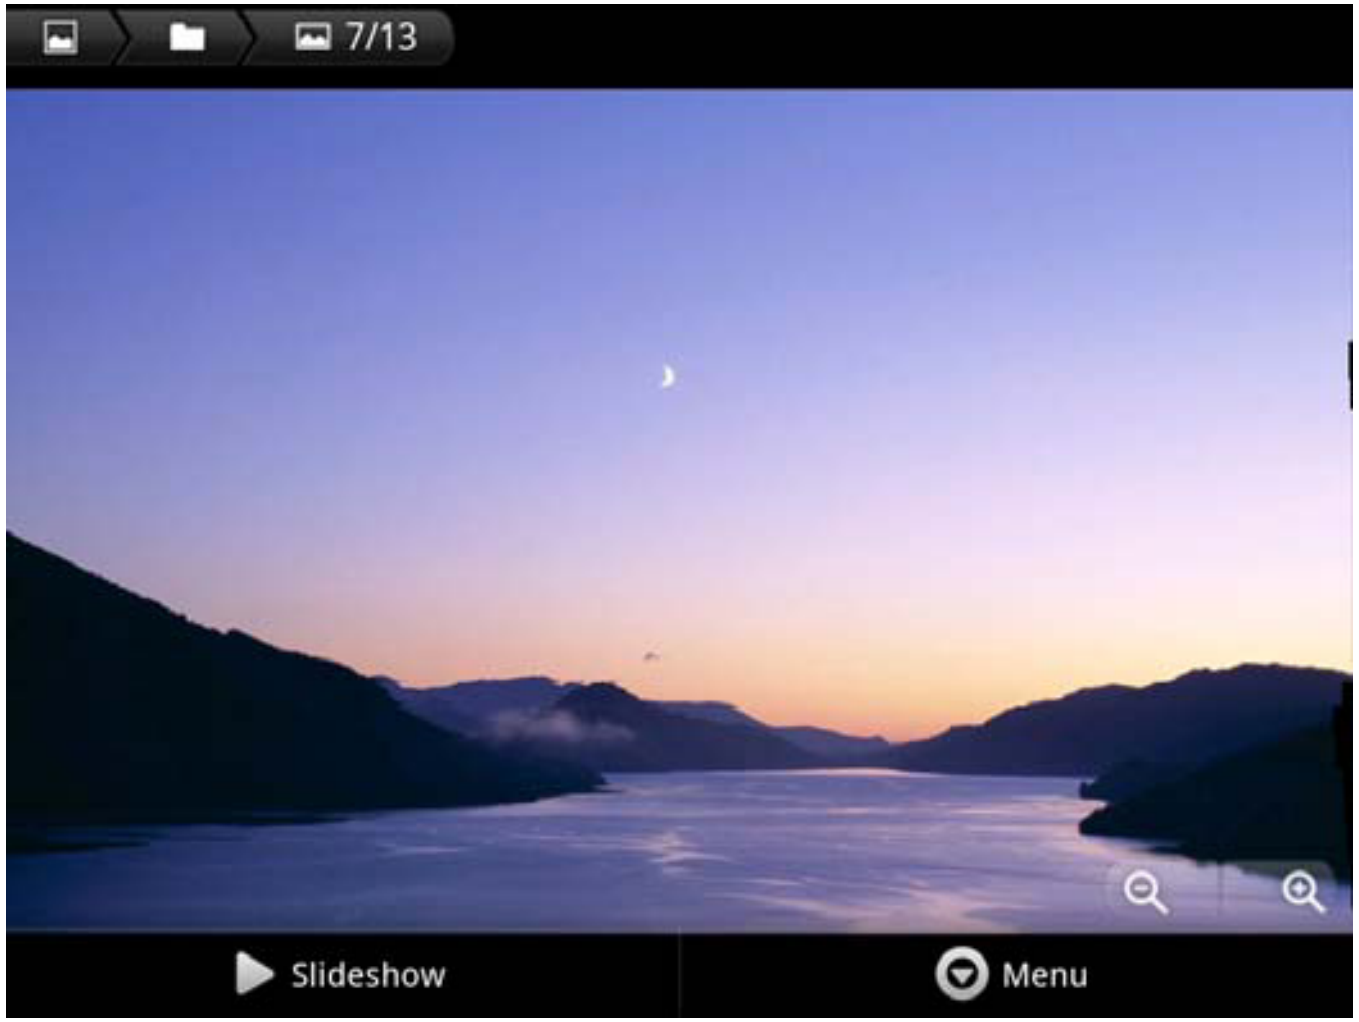

- Tap screen to show / hide menu
- Select “Slideshow”
- Tap “Menu” for more options
  - Delete
  - Share with Bluetooth device
  - More:
    - Photo details
    - Set as wallpaper
    - Crop
    - Rotate Left
    - Rotate Right

In the Application List screen, click the “EMAIL” icon:

1 Input email address and password.

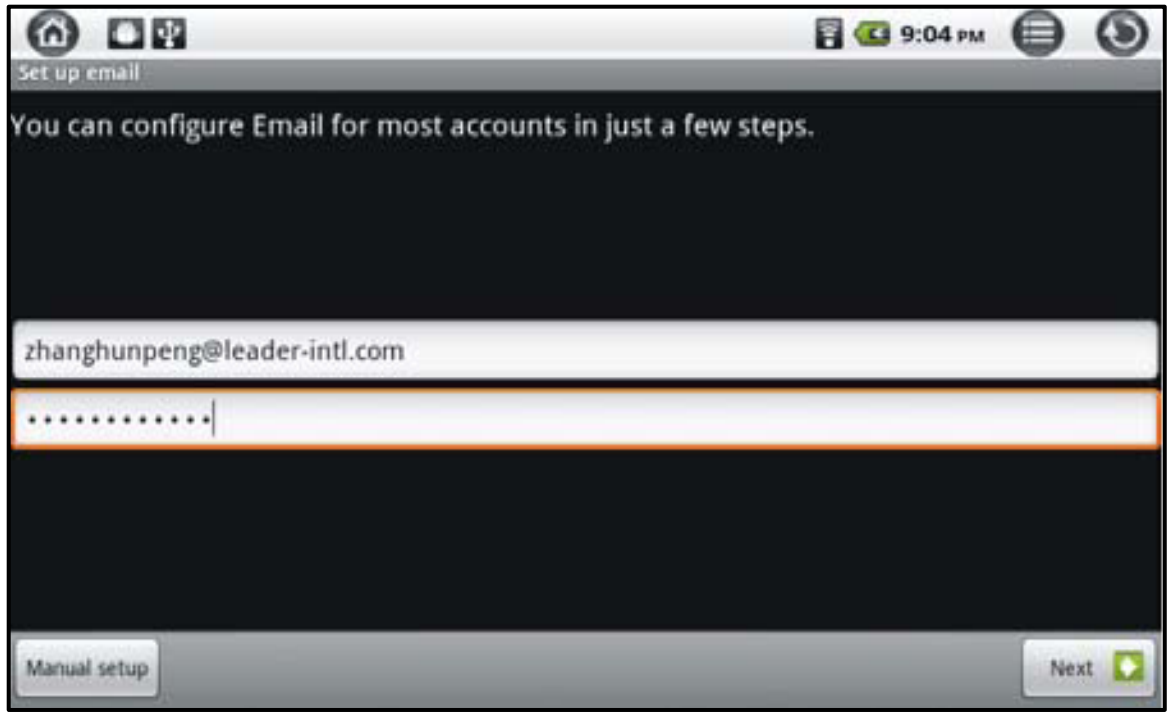

Set up email

You can configure Email for most accounts in just a few steps.

zhanghunpeng@leader-intl.com

•••••••••••••

9:04 PM
Manual setup
Next

Click “Next”.

2 Select type of email account.

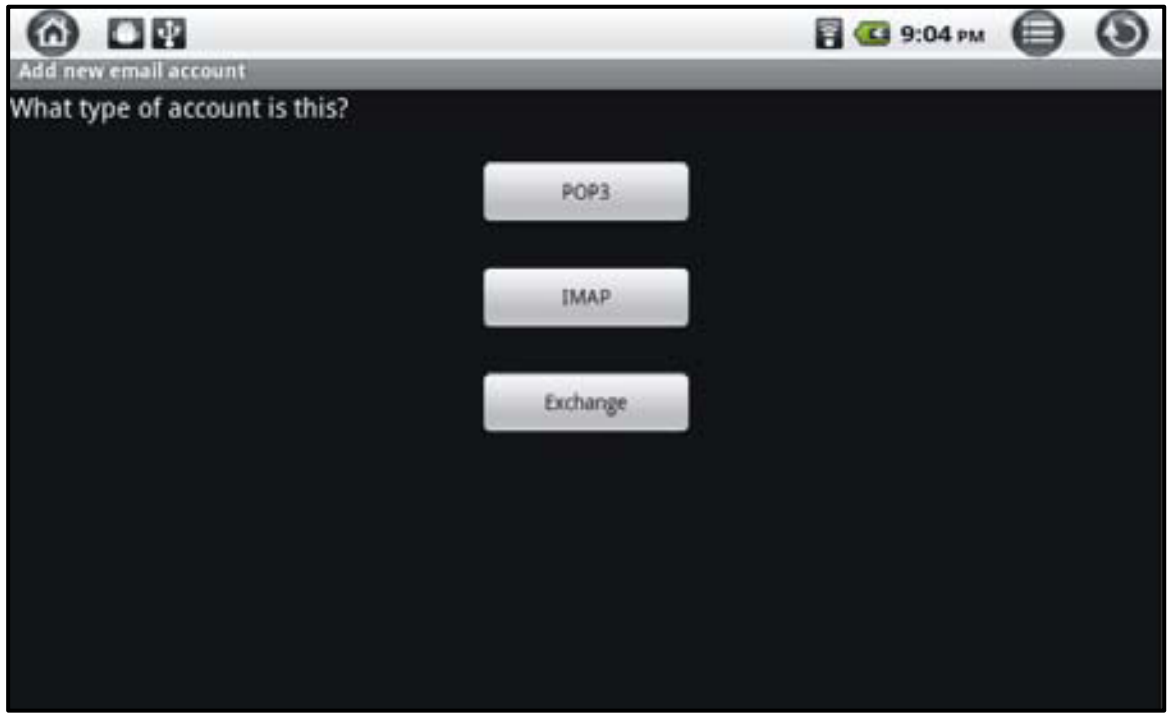

Add new email account

What type of account is this?

9:04 PM
POP3
IMAP
Exchange

Email Setup (continued)

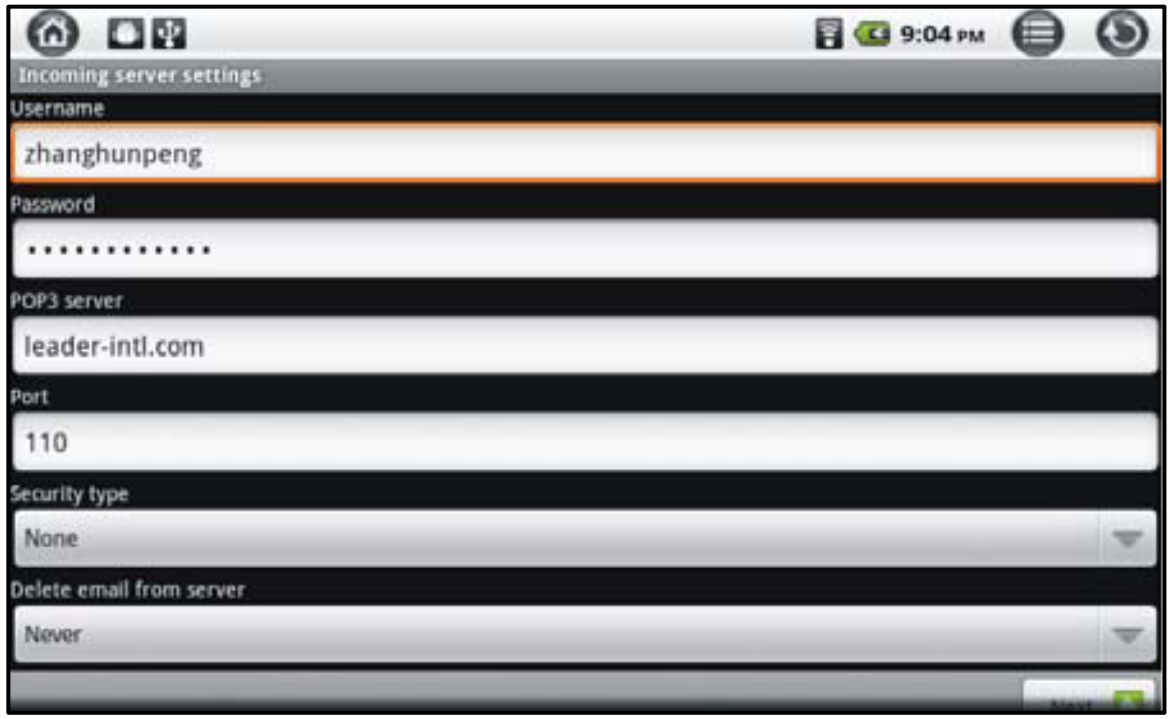

Incoming server settings

Username: zhanghunpeng

Password: •••••••••••••

POP3 server: leader-intl.com

Port: 110

Security type: None

Delete email from server: Never

3 Follow the prompts to set up your email account.

Note: The values in the fields on the left are for illustration only. Set all fields to the appropriate settings for your account.

Select “Next” to go to the next screen.

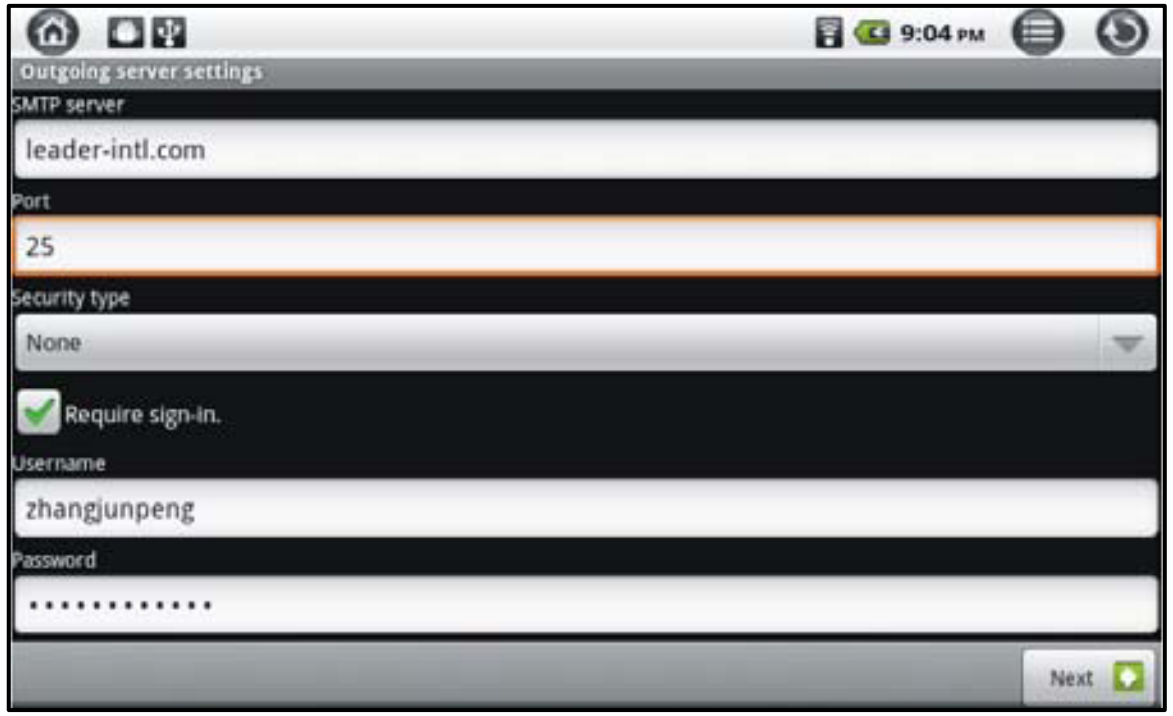

Outgoing server settings

SMTP server: leader-intl.com

Port: 25

Security type: None

☑ Require sign-in.

Username: zhangjunpeng

Password: •••••••••••••

If you are unsure about the settings, contact your email host for details.

Select “Next” to go to the next screen.

Email Setup (continued)

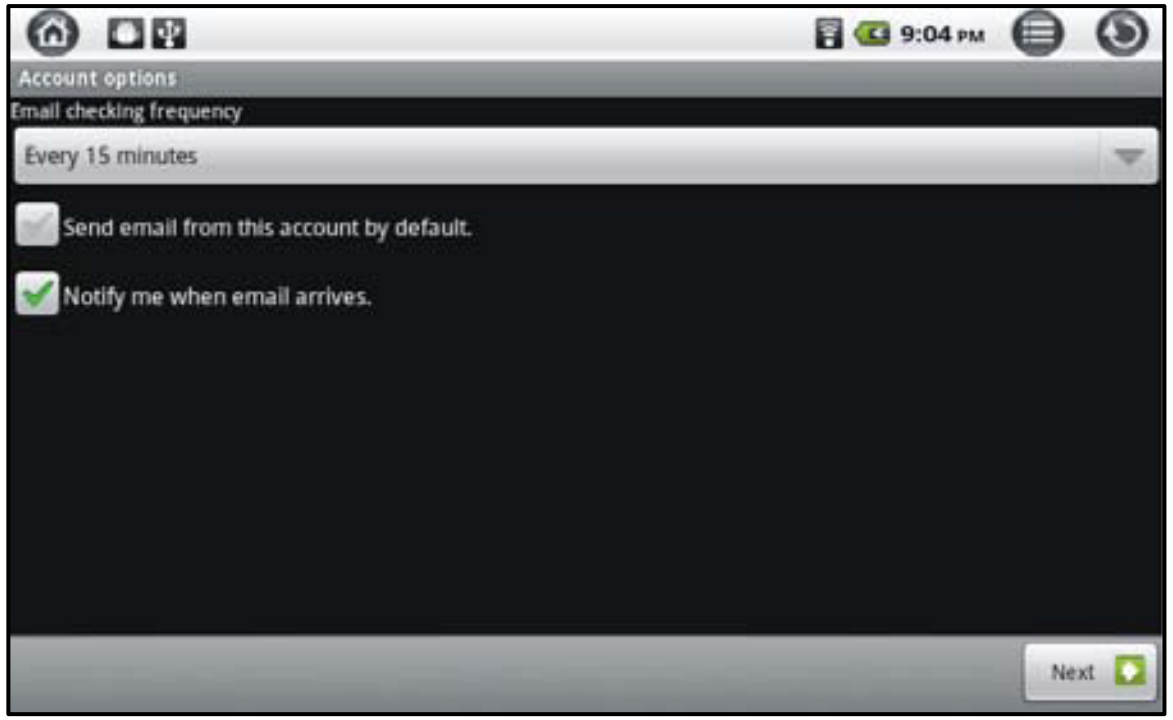

Account options

Email checking frequency

Every 15 minutes

☐ Send email from this account by default.

☑ Notify me when email arrives.

Select how often to check for new email.

Enable / disable email notification.

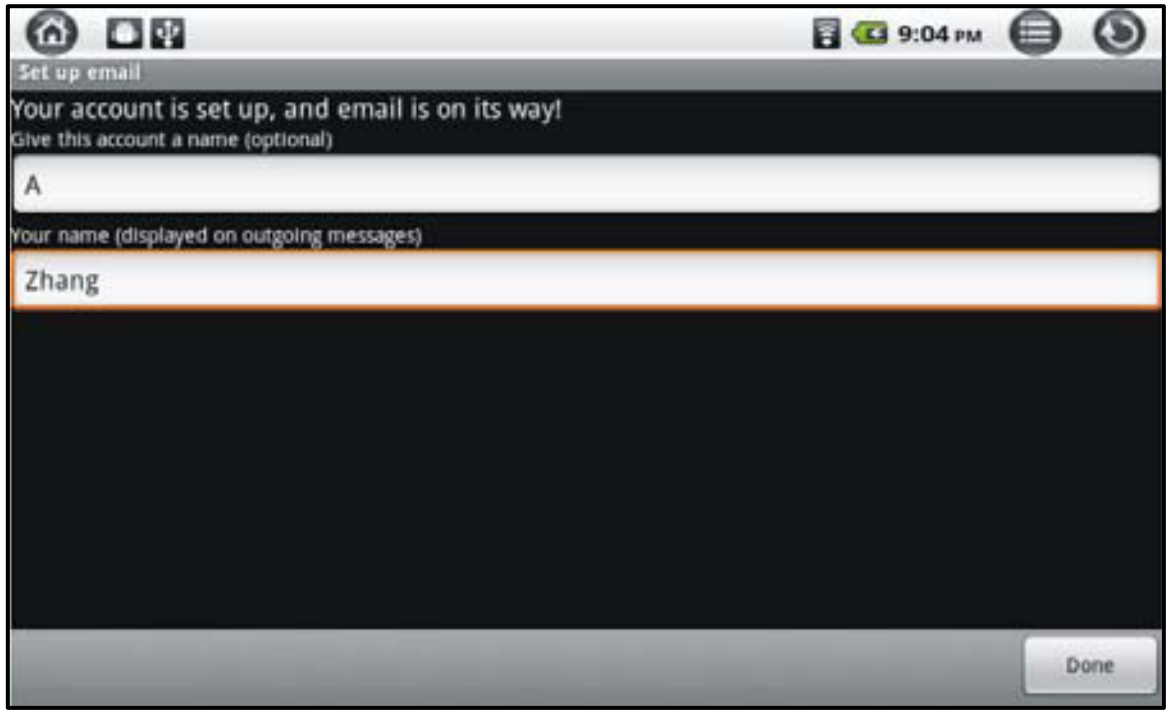

Set up email

Your account is set up, and email is on its way!

Give this account a name (optional)

A

Your name (displayed on outgoing messages)

Zhang

Enter a name for this email account.

Enter how you want your name to be displayed for outgoing messages.

Select “Done”

In the Application List screen, click the “Clock” icon:

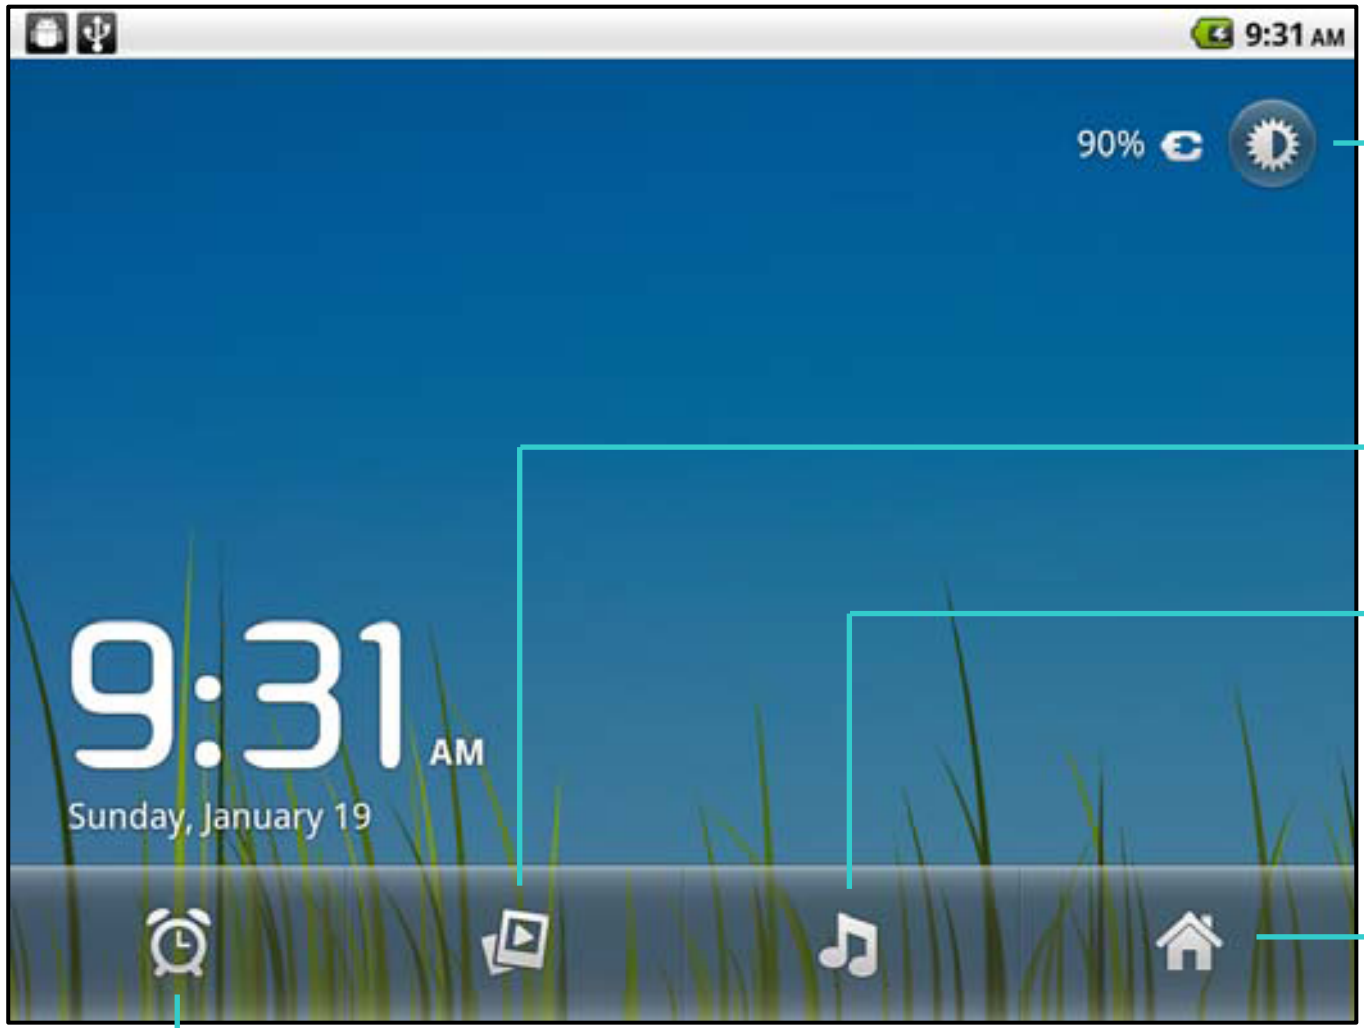
9:31 AM
90%
9:31 AM
Sunday, January 19

Adjust brightness

Enter Picture Browser

Enter Music Player

Return to Home screen

Alarm Settings

Alarm & Time Settings

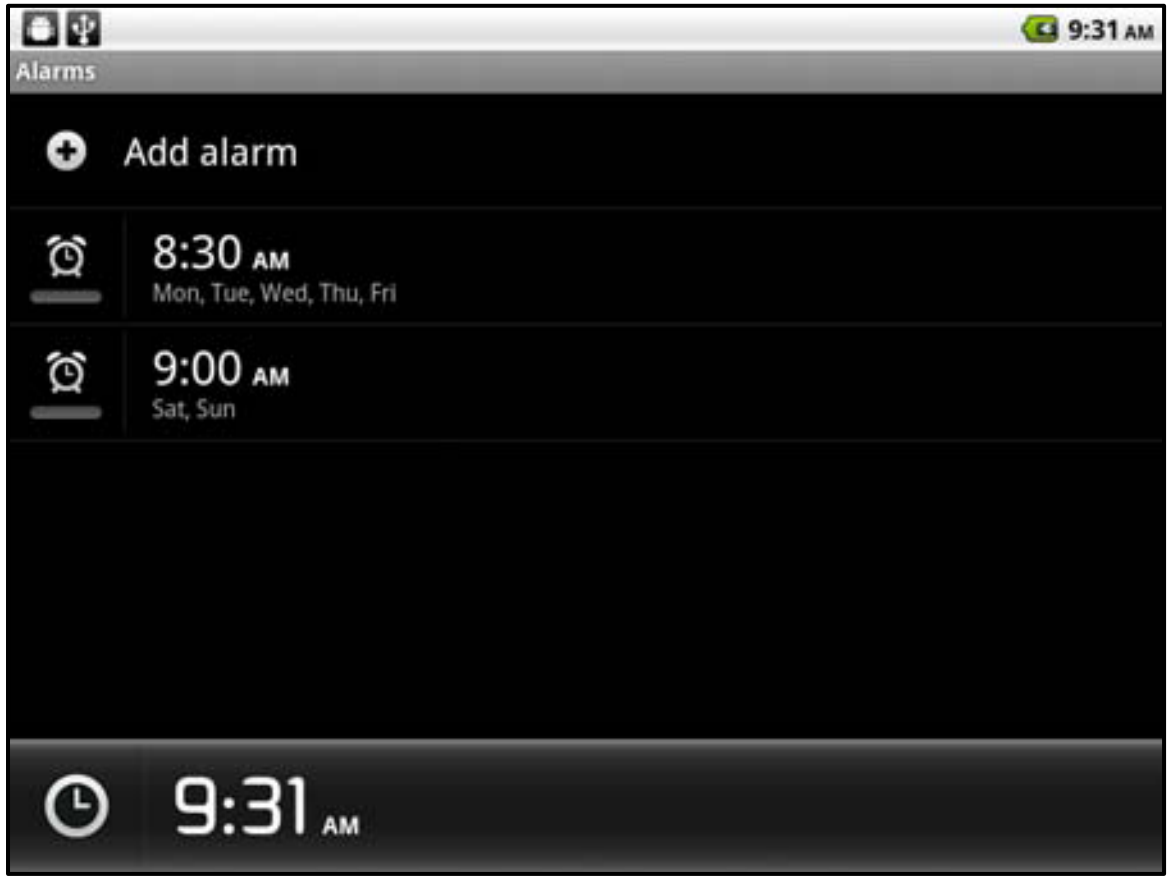
9:31 AM
Alarms

Add alarm

8:30 AM
Mon, Tue, Wed, Thu, Fri

9:00 AM
Sat, Sun

9:31 AM

Enter “Alarm Settings” screen (see page 36)
Click “Add Alarm”
Set Time

Set time and alarm options

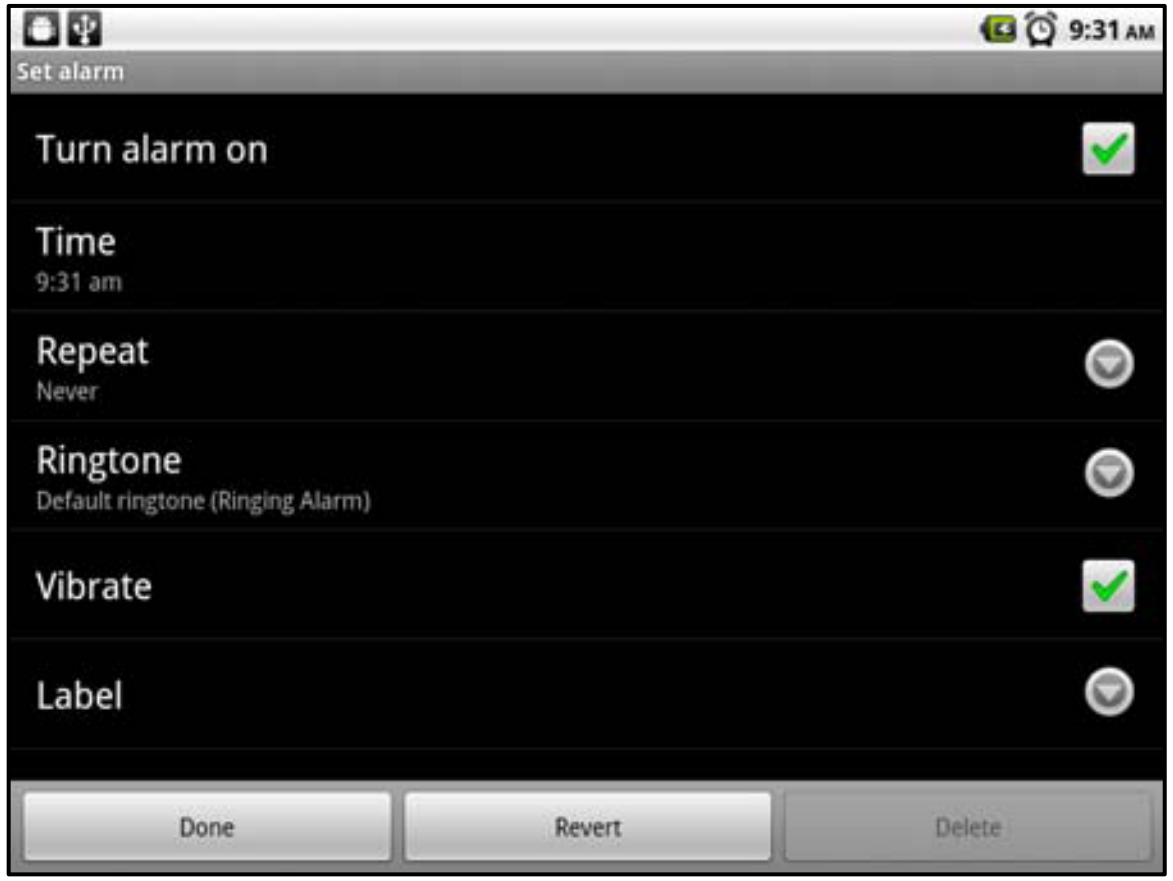
9:31 AM
Set alarm

Turn alarm on ☑

Time
9:31 am

Repeat
Never

Ringtone
Default ringtone (Ringing Alarm)

Vibrate ☑

Label

Done
Revert
Delete

CPU		Samsung A8 S5PC110– 1GHz
Screen	Display	9.7 inch Touch Panel, IPS Screen,
	Resolution	1024*768
Memory	Flash ROM	512MB NAND
	RAM	512MB Mobile DDR
Antenna		Built-in Antenna
Wifi		802.11 b/g/n
G-Sensor		Support
Camera		2M pixel Front Camera
Audio		MP3, AAC
Video		MPEG4 H264, H263
Photo		JPG, PNG

Input/Output	Touch Panel	Capacitive type Touch Panel
	Speaker	Built–in Speaker
	Headphone	3.5mm sSereo Jack
	MIC	Internal Microphone
	SD / MMC	TF Slot, capacity up to 32GB (support TF HC)
	USB	USB 2.0 Device (Mini Port) x1, USB2.0 Host (A type) x 2
	HDMI	MINI HDMI, Support 1080P Video Play
Buttons / Switches		1. Hardware Power ON/OFF Switch and Reset Switch 2. Volume Up, Volume Down 3. Back Key, Home Key, Menu Key, Search Key 4. Photo Key
Battery	Type	Built-in Rechargeable 3.7V 6800mAh Li-Polymer
	Active	5~7 hrs battery life on full power mode with backlight setting on mid range
Car Charger	Output	Φ3.5mm DC-Jack, 5V, 2.5A
Certification & Regulation		CE, FCC, RoHS

FCC Caution:

This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

·Reorient or relocate the receiving antenna.
·Increase the separation between the equipment and receiver.
·Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
·Consult the dealer or an experienced radio/TV technician for help.

FCC Compliance:

·To assure continued compliance, follow the attached installation instructions.
·Use only the provided shield interface cables when connecting to computer.

Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

This device complies with part 15 subpart B of the FCC Rules. Operation is subjected to the following conditions: (1)This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This product may receive radio interference caused by mobile telephones or other products during operation. If such interference is apparent, please increase separation between the product and the mobile telephone or other product.

Industry Canada Requirement:
This Class B apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme á la norme NMB-003 du Canada.

Other names of systems and products mentioned in these instructions are usually the registered trademarks or trademarks of the manufacturers who developed the system or product concerned. The TM and ® marks are not used to identify registered trademarks and trademarks in these instructions.
This manual was correct and complete at the time of printing. However, new specifications and updates can occur at any time without prior notice. No part of this manual may be copied, republished, reproduced, transmitted or distributed in any way without prior written consent of Leader International Inc.. Any unauthorized distribution of this manual is expressly forbidden.

Leader International Inc may find it necessary to modify, amend or otherwise change or update this manual. We reserve the right to do this at any time, without any prior notice. All specifications and features are subject to change without notice. All screen shots shown are simulated and may not represent the actual screen on production units sold to consumers.

For instruction manuals or other information, be sure to visit our website at:
www.leaderinternationalinc.com

Or write to us at:
Leader International Inc
225 S. Lake Avenue, Suite 300
Pasadena, CA 91101
USA

Copyright © 2011